

GETTING STARTED

REMOTE BATTERY INSTALL

Remove the RF Wireless Remote control from the Digital Media Locker. Unscrew the waterproof cap on the back of the remote control. Place the CR-2430 battery in the RF Remote control and replace the water/dust proof cap.



POWER ON

Press the on/off button. ON will be indicated by a red LED.

For applications that require zero current draw, and where battery drain may occur, the power button must be turned OFF. When the power button is in the OFF position the red LED will not be lit.

For applications where a 12V battery is not used, such as in a Spa, the power button can be left ON and the remote control can then be used to power on/off accordingly.

REMOTE SYNCHRONIZING

1. Turn the docking station OFF with the on/off button inside the door (the red LED should not be illuminated when power is OFF).
2. Press the red  (POWER) button on the remote.
3. Press and hold the  (MODE) button until the LCD reads PAIR.
4. Continue to press the MODE button during step 5 below.
5. Turn the docking station ON (within 10 seconds) with the on/off button inside door (the red LED will illuminate when power is ON).
6. The remote's LCD should read WELCOME or show a mode position such as RADIO, IPOD, or AUX IN.

For any additional remote controls, you will also need to activate/synchronize those remote controls by following the steps above.

i *If the pairing process is not effective, switch the locker off using the on/off button located inside the door of the dock. Unplug the 12-pin Harness on the back of the Locker for 3 minutes. Reattach the Harness and repeat steps 1-6 above.*

i *If the LCD displays "NO LINK" in either mode, this means the remote is out of reception range. Move the remote closer to the Locker and try again.*

i *If you loose your remote control and buy another new remote control, please follow the above to start pairing before normal usage.*