

DRAPER

EN

Original Instructions
Version 1 May 2026

230V FAR INFRARED

DIESEL HEATER

36661, 36881



**UK
CA** **CE**

1. Preface

These are the original product instructions. Read the instruction manual in full and retain for future reference.

Please visit drapertools.com/manuals for the latest version of this manual and the associated parts list, if applicable.

1.1 Product Reference

User Manual for: 230V FAR Infrared Diesel Heater

Stock No's: 36661, 36881

Part No's: BG05201-18, BG05201-22

1.2 Revisions

Version 1: May 2026

First release

1.3 Understanding the Safety Content of This Manual



WARNING! – Situations or actions that may result in personal injury or death.



CAUTION! – Situations or actions that may result in damage to the product or surroundings.

Important: – Information or instructions of particular importance.

1. Preface	2	9. Maintenance and Troubleshooting	16
1.1 Product Reference	2	9.1 General Maintenance	16
1.2 Revisions	2	9.2 Draining the Fuel	16
1.3 Understanding the Safety Content of This Manual	2	9.3 Fuel Tank Care	16
2. Contents	3	9.4 Filter Care	16
3. Product Introduction	4	9.5 Nozzle/Ignition Electrodes/Fuel Pump Care & Servicing	16
3.1 Intended Use	4	9.6 Storing the Heater	16
3.2 Specification	4	9.7 Troubleshooting	17
4. Health and Safety Information	5	10. Spares, Returns and Disposal	18
4.1 General Health and Safety Precautions	5	11. Warranty	18
4.2 Additional Safety Information for this Heater	5	12. Explanation of Symbols	19
4.3 Electrical Safety	6		
4.4 Health and Safety Information for the use of Diesel and Kerosene Fuels	6		
4.5 Service	7		
4.6 Connection to the Power Supply	7		
4.7 Residual Risk	7		
5. Identification and Unpacking	8		
5.1 Product Overview	8		
5.2 Inside the Access Panel	9		
5.3 What's in the Box?	10		
6. Assembling Instructions	11		
6.1 Fitting the Support (Fig.1 – Fig.2)	11		
6.2 Installation Instructions (Fig.3)	11		
6.3 Installing a Flue (Fig.4)	12		
7. Preparation Instructions	13		
7.1 Acceptable Fuels	13		
7.2 Fuelling the Heater	13		
8. Operation Instructions	14		
8.1 The Control Panel /Remote Control	14		
8.2 Switching the Heater ON	15		
8.3 Switching the Heater OFF	15		
8.4 Timer Operation	15		
8.5 ECO Mode	15		
8.6 Child Lock	15		
8.7 Remote Control	15		

3. Product Introduction

3.1 Intended Use

This FAR infrared heater is designed to heat large open spaces through the combustion of diesel or kerosene fuels.

 **WARNING! If this product is used in any location that is not fully open, a suitable flue MUST be installed to the exhaust to direct fumes safely outside. Failure to do so will result in a serious health risk. Flues MUST be installed and tested by a suitably qualified professional.**

Any other application beyond the conditions established for use will be considered misuse. Draper Tools accepts no responsibility for improper use of this product.

Read this manual in full before attempting to assemble, operate or maintain the product, and retain it for later use.

3.2 Specification

Stock No.	36661	36881
Part No.	BG05201-18	BG05201-22
Rated voltage	230V/50Hz	230V/50Hz
Rated Input	60W	60W
Heat output	18KW	22KW
Flue outlet diameter	75mm	75mm
Fuel type	Diesel/Kerosene	Diesel/Kerosene
Tank capacity	60L	60L
Operation time (full tank)	36 hours approx.	29 hours approx.
Fuel consumption	1.69/L/H	2.05L/H
Maximum heating area	350m³	425m³
IP rating	IPX0	IPX0
Cord length(approx.)	1.7m	1.7m
Dimensions (L×W×H)	1305 × 435 × 1120mm	1340 × 465 × 1345mm
Net weight	62.9kg	80.0kg
Remote Control batteries required	2 × AAA	2 × AAA

 **WARNING!** Read all the safety warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury. Save all warnings and instructions for future reference.

4.1 General Health and Safety Precautions

 **WARNING!** In order to avoid overheating, **DO NOT** cover the heater.

 **CAUTION!** Some parts of this product can become very hot and cause burns. Particular attention **MUST** be given where children and vulnerable people are present.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they **DO NOT** play with the appliance.
- Cleaning and maintenance **MUST** be carried out by or under the supervision of experienced and knowledgeable persons.
- Observe all standard safety precautions and good practices when working with electrical equipment.
- Inspect the product before every use for cracked, corroded or broken parts and any leakages

 **WARNING! DO NOT use this product if it is damaged or leaking in any way. Contact Draper Tools for repair and replacement options.**

- Use the product only for its intended purpose and as instructed in this manual.
- **DO NOT** attempt to disassemble or modify this product in any way.
- If the heater is not working properly. Switch off and disconnect the heater and move to a well-ventilated area **IMMEDIATELY**. Have the heater checked for correct operation by a qualified engineer before next use.
- **NEVER** abuse the power cord:
 - Unwind the power cord fully before connecting it to the power supply.
 - **NEVER** remove the plug from the power supply by pulling on the cord.

- **DO NOT** move the product using the cord or plug.
- Keep the power cord away from sources of heat, liquids, sharp edges and moving parts.
- The power cord attached to this product is not suitable for use on building sites.

4.2 Additional Safety Information for this Heater

 **DANGER!** Improper use of this heater may result in serious injury or death from burns, fire, explosions, electrical shock and carbon monoxide poisoning.

 **DANGER!** Only use this heater in well-ventilated areas and ensure continuous ventilation is provided.

- This heater is intended for use in commercial/ industrial buildings where adequate ventilation is provided. **DO NOT** use this heater in residential living areas.
- The heater **MUST ONLY** be used in its upright position.
- **DO NOT** use the heater in dusty environments.
- **DO NOT** expose this product to temperatures greater than 50°C.
- Position the heater on a firm and level surface during use and ensure that it is correctly and safely positioned.
- The heater **MUST ONLY** be used in its normal operating position.
- **ALWAYS** observe the correct clearances between the heater and surrounding objects:
 - Outlet: 3M
 - Inlet: 1M
 - Top: 1.5M
 - Sides and rear: 0.6m
- When using this product in any environment that is not fully open, a flue **MUST** be installed to take exhaust fumes out of the space. Use of a flue is recommended in all locations to direct exhaust fumes away from the area.
- **Important:** The flue **MUST** be installed and checked by a qualified professional.

 **WARNING! The flue installation becomes VERY hot during use. DO NOT touch the flue unless it has completely cooled.**

4. Health and Safety Information

- **DO NOT** position the heater near to curtains or other combustible materials that may move and come into contact with the heater.
- Floors and ceilings **MUST** be made of fireproof materials in the place where the heater is operated.



WARNING! DO NOT position this heater in the vicinity of combustible materials, in explosive environments or in the presence of flammable or combustible gases and vapours.

- **DO NOT** position this heater below or pointing towards a power socket or outlet.
- **NEVER** block or restrict the air inlet and outlet for any reason.
- **DO NOT** place the heater near walls, corners or low ceilings.
- Apply the wheel brakes when the heater is stationary.
- **DO NOT** use the heater if the wheels have been removed as this may restrict airflow into the base of the unit.
- Ensure that the power switch is in the '**OFF/O**' position before connecting the heater to the power supply.
- **ALWAYS** check that the heater is positioned safely before turning it on.
- **NEVER** leave the heater unattended while it is on under any circumstances.
- **NEVER** cover any part of the heater as this may cause the heater to overheat or the covering item to ignite or burn.
- **NEVER** insert foreign objects through the heat plate or other openings in the heater body.



WARNING! Risk of shock!

- **DO NOT** expose to rain or use in humid areas.
- **DO NOT** allow the heater to come into contact with water or any other liquid.
- **DO NOT** use this heater in the vicinity of a bath, shower, swimming pool or other bodies of water.
- **DO NOT** touch the heater with wet hands.



WARNING! Some parts of the product become extremely hot during use and may cause burns.

- **DO NOT** touch any metal part of the heater other than the handle or wheels during or immediately after use.

- **DO NOT** touch or otherwise interfere with the fuel tank while the heater is in use or is still hot.
- **ALWAYS** switch off the heater, disconnect it from the power supply and allow it to cool for at least 20 minutes before attempting to move or reposition it.
- **ALWAYS** keep children and animals away from the heater.

4.3 Electrical Safety

- **ONLY** use this product with a power supply with a power supply that matches the rated voltage of the heater.
- **NEVER** plug more than one heater into the same power outlet.
- **NEVER** allow the power cord to come into contact with other heated objects or direct the heater at the power cord or supply.
- Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.

4.4 Health and Safety Information for the use of Diesel and Kerosene Fuels

Important: ALWAYS read and understand the fuel product label before use.

- **ONLY** use clean diesel or kerosene fuel with this heater.



WARNING! DO NOT use fuels such as petrol, benzene, paint thinners or other oil compounds in this heater under any circumstances.

- **NEVER** smoke in the vicinity of the machine, especially during refuelling.
- **NEVER** refuel the heater while it is switched on or is still hot.
- **ALWAYS** wear suitable protective gloves and other clothing during refuelling.
- **NEVER** transport the heater with fuel in the fuel tank; drain and store or dispose of all fuel responsibly before transporting the heater.
- **NEVER** start the heater if you can smell fuel vapour in the air. If fuel vapour is present, wait for it to dissipate or move to a new location.
- The heater and fuel get hot during use. **DO NOT** touch the heater during or immediately after use and allow it to cool before refuelling.

- **NEVER** remove the fuel cap while the heater is running or immediately after use. Take care when opening the fuel cap after use as hot vapour may be released from the opening.
- Store all fuels in a cool, clean and dry environment, away from direct sunlight and out of reach of children. Adhere to all local guidance relating to the correct storage of fuel.



DANGER! Diesel is a carcinogenic substance, and kerosene is known to have health implications if handled improperly. Exercise extreme caution when transporting and storing fuel and during refuelling. Clean up spillages IMMEDIATELY and dispose of fuel responsibly and in accordance with local regulations.



DANGER! Burning diesel emits toxic carbon monoxide: a colourless and odourless gas. Breathing exhaust fumes can cause loss of consciousness, permanent respiratory damage and eventually death. ONLY operate this machine in a well-ventilated environment. NEVER use this heater in living or sleeping areas.

4.5 Service

- Have your heater serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the heater is maintained.

4.6 Connection to the Power Supply

This appliance is supplied with an approved plug and cord for your safety.

If the power supply cord is damaged, it **MUST** be replaced by Draper Tools, an authorised service agent or similarly qualified personnel in order to avoid a hazard.

The damaged or incomplete plug, when cut from the cord, shall be disabled to prevent connection to a live electrical outlet.

This product is Class I[†] and is designed for connection to a power supply matching that detailed on the rating label and compatible with the plug fitted.

The value of the fuse fitted is marked on the pin face of the plug. Should the fuse need replacing, ensure the substitute is of the correct rating, approved to BS1362 and ASTA or BS Kite marked. This should only be performed by suitably qualified personnel.

ASTA

BSI



CAUTION! DO NOT use this product with an extension lead or multi-socket.


† Earthed : This product requires an earth connection to protect against electric shock from accessible conductive parts in the event of failure of the basic insulation.

4.7 Residual Risk

The safety instructions in this manual cannot account for all possible conditions and situations that may occur. Exercise common sense and caution when using this product and protect against any additional conceivable risks.


5. Identification and Unpacking

5.1 Product Overview

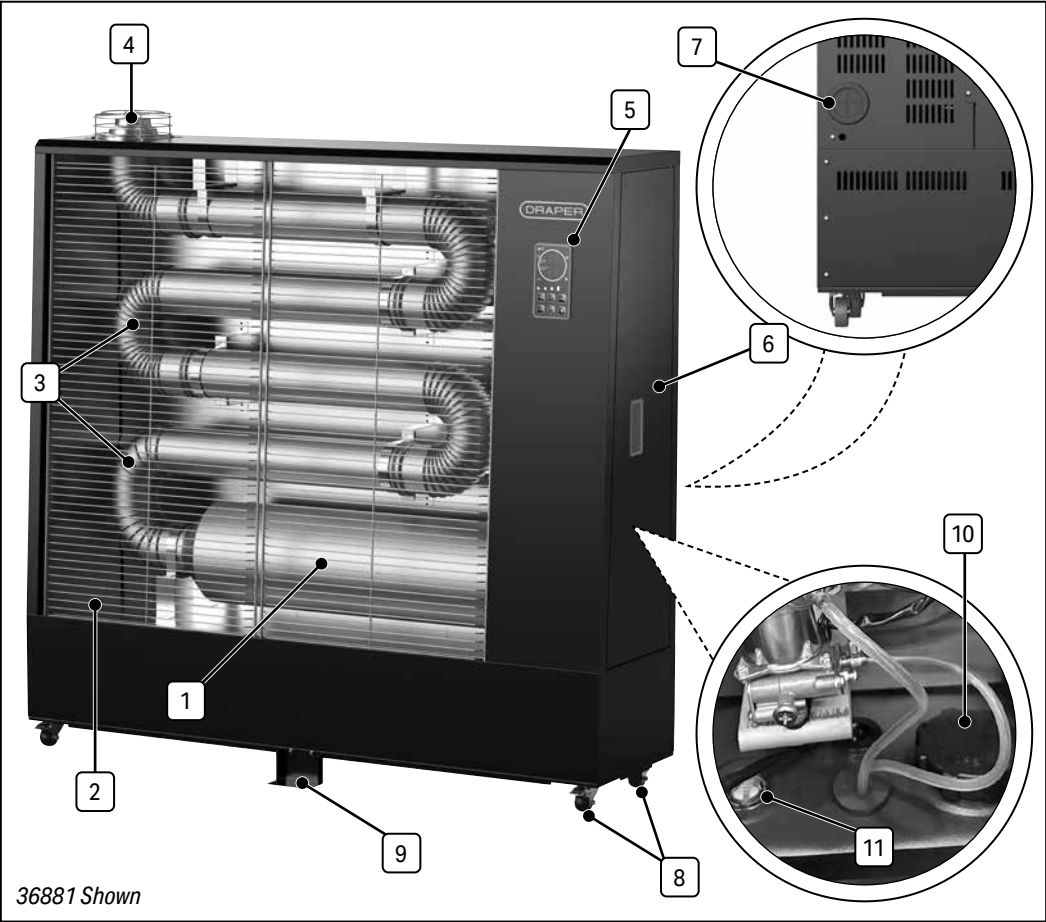

- 1 Combustion chamber
- 2 Safety grille
- 3 Heater tubes
- 4 Exhaust
- 5 Control Panel
- 6 Access Panel
- 7 Cord and plug outlet
- 8 4 × Wheels
- 9 Support/s
- 10 Fuel cap
- 11 Fuel gauge

5.2 Inside the Access Panel

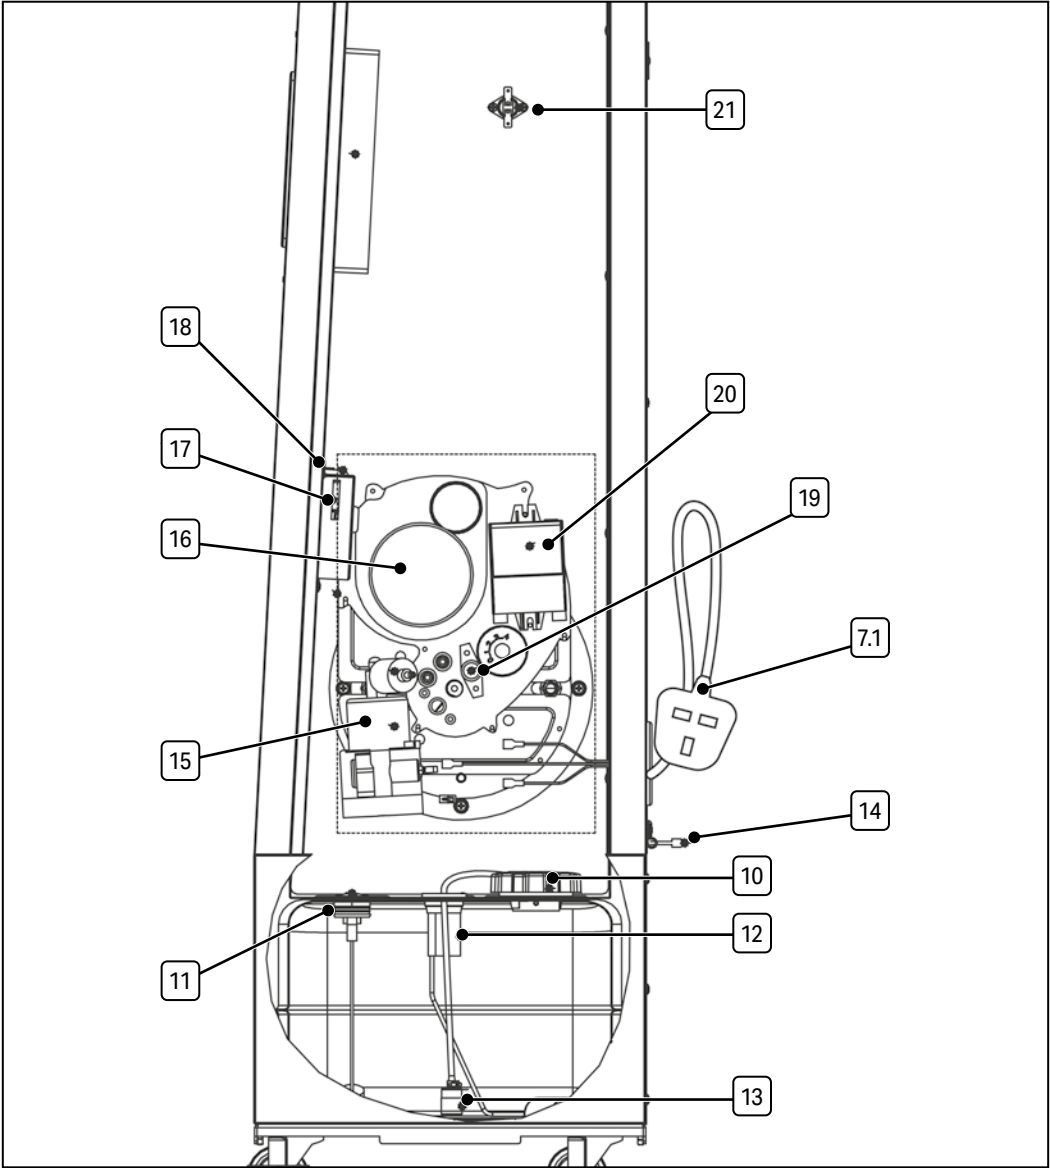


- | | | | | | |
|-----|-------------------|----|--------------------------|----|------------------|
| 7.1 | Cord and plug | 14 | Thermistor | 18 | Anti-tilt switch |
| 10 | Fuel cap | 15 | Pump | 19 | Photocell |
| 11 | Fuel level gauge | 16 | Burner | 20 | Ignition |
| 12 | Fuel level sensor | 17 | Access panel safety lock | 21 | Thermostat |
| 13 | Fuel filter | | | | |

5. Identification and Unpacking

5.3 What's in the Box?

Carefully remove the product from the packaging and examine it for any signs of damage that may have occurred during shipment.

If any part is damaged or missing, **DO NOT** attempt to use the product. Please contact the Draper Helpline; contact details can be found at the back of this manual.

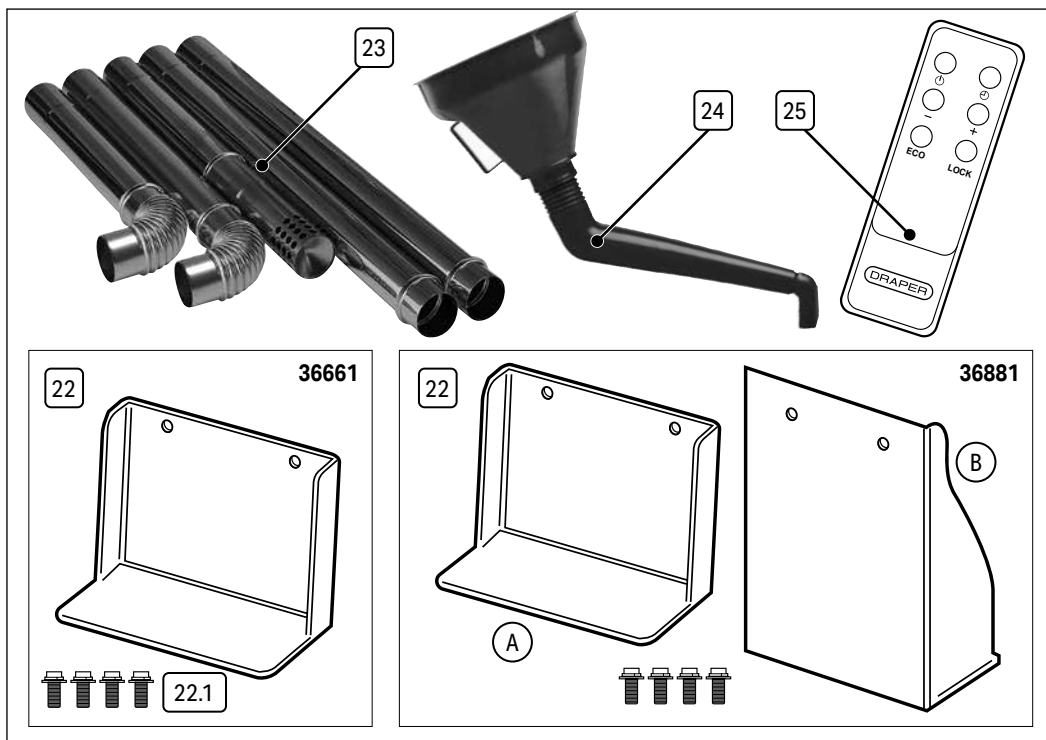

36661*

- 22** 2 × Support bracket
- 22.1** 4 × Screws

36881*

- 22** **A** 1 × Support bracket
- 22** **B** 1 × Support bracket
- 22.1** 4 × Screws

23 Flue Kit (36882)

- 2 × 75mm diameter × 1000mm × 0.5mm length stainless steel tube
- 3 × 75mm diameter × 500mm × 0.5mm length stainless steel tube
- 1 × 75mm diameter × 500mm × 0.5mm length perforated exhaust stainless steel tube
- 2 × 75mm diameter 90° elbow join × 0.5mm.

24 Fuel funnel*

25 Remote control*

***Important: The support brackets, fuel funnel and remote control are supplied packed inside the access panel and should be removed before fuelling or setting up the heater.**

Please visit drapertools.com for our full range of accessories and consumables.

6.1 Fitting the Support (Fig.1 – Fig.2)

- To prevent the heater tilting - Fit the support/s 22 brackets to the bottom of the heater as shown in Fig.1/Fig.2 using the screws 22.1 supplied.

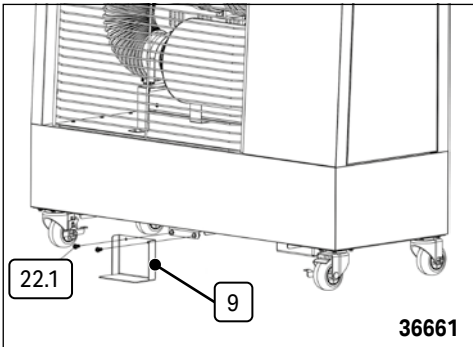


Fig. 1

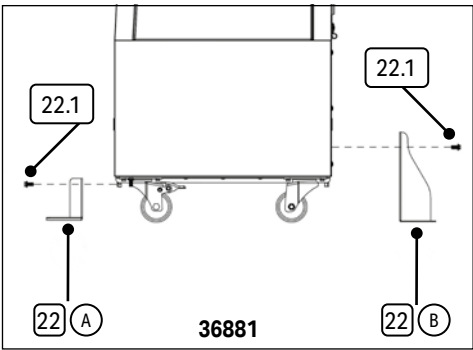


Fig. 2

6.2 Installation Instructions (Fig.3)

- Position the heater on a flat, level, non-combustible, solid surface capable of supporting the weight of the heater when fully fuelled.
- Fit the support bracket/s 22 to prevent the product tilting.
- Ensure that the heater's front wheel 8 brakes are locked to ensure that it cannot roll or be moved accidentally.
- Only install the heater in its normal upright position.
- DO NOT** place the heater near walls, corners or low ceilings.
- Floors and ceilings **MUST** be made of fireproof materials in the place where the heater is operated.

- For indoor use, provide permanent ventilation openings equally distributed between floor and high level, with a minimum opening of:

Stock No	Minimum Ventilation Opening
36661	450cm ²
36681	550cm ²

- The heater **MUST** be positioned with sufficient space around all sides to ensure suitable ventilation and to reduce the risk of damage to nearby objects. The following minimum clearances **MUST** be observed:

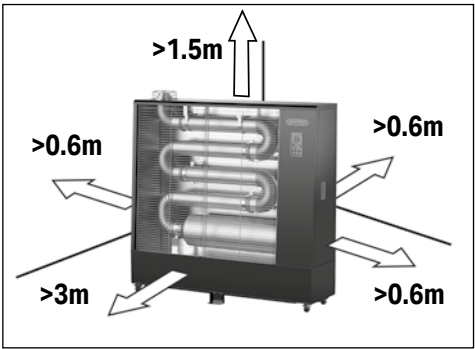


Fig. 3

6. Assembling Instructions

6.3 Installing a Flue (Fig.4)

- Use the flue kit **23** supplied. **Note:** Flue kit 36882 is also available separately.
- If the heater is installed in an environment that is enclosed in any way (semi-open, fully indoors), a flue **MUST** be installed to ensure that the exhaust fumes are routed safely outside.
- It is recommended that the flue supplied is used in all locations and ensure all spaces are well-ventilated.

Important: The chosen flue **MUST** be installed and tested by a suitably qualified professional.

- The flue **MUST** maintain a clearance of at least 30cm from any parallel surfaces and **MUST** contain a downward-sloping horizontal section to ensure that moisture does not travel back to the heater.
- For correct function a stainless-steel flue should be used with the following dimensions:
 - Diameter 75mm.
 - Maximum length 4 metres.
 - Maximum of 2 elbow connectors.

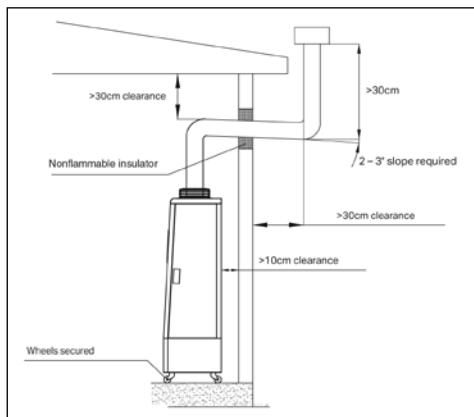


Fig. 4



WARNING! The flue system becomes **VERY** hot during use. **DO NOT** touch the flue during or immediately after use and ensure that the point where the flue passes through any structure is well-insulated with non-combustible and heat-resistant insulation material.

7. Preparation Instructions

Important: Before operating this product, read and understand all the safety instructions listed in this manual.

WARNING! DO NOT leave the heater unattended while it is connected to the power supply or switched on.

7.1 Acceptable Fuels

WARNING! This heater is suitable for use **ONLY** with standard clean diesel or kerosene. **NEVER** use petrol, oil, used oils, paint thinners, alcohol or other highly flammable fuels. Use of an incorrect fuel may cause an explosion and serious injury.

- **ALWAYS** ensure that the fuel tank is clean both before fuelling and once filled. Foreign matter such as rust, dirt or water may cause the ignition control to shut down the heater and may require regular cleaning of the fuel system.
- **ALWAYS** follow local guidance relating to the storage of diesel and kerosene.

WARNING! **NEVER** store diesel or kerosene in a living space. Store it in a well-ventilated area well away from any residential spaces and away from direct sunlight and sources of ignition and heat.

7.2 Fuelling the Heater

The heater is supplied without fuel. Fuel **MUST** be added to the heater before it can be operated.

WARNING! **ALWAYS** ensure that the heater is switched off, disconnected from the mains power and has completely cooled before adding fuel. **NEVER** add fuel to the heater while it is running.

- **Important: ALWAYS** wear protective gloves during refuelling.

To add fuel to the heater (Fig.5):

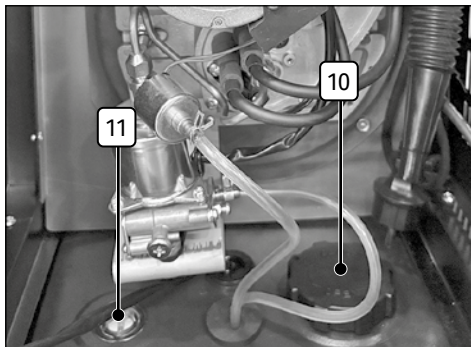



Fig. 5

- Open the access panel **6** to locate the fuel cap.
 - Remove the fuel cap **10** and pour the fuel directly into the fuel tank observing the level on the fuel gauge **11**, observing the following conditions:
 - **NEVER** overfill the heater and wipe up any spillages **IMMEDIATELY**.
 - **NEVER** use the heater without the fuel filter fitted.
- WARNING!** If the heater has been recently used, hot steam may vent from the fuel tank outlet. Take care when opening the fuel tank cap.

8. Operation Instructions

Important: **DO NOT** operate this product until you have read and understood all the safety instructions listed in this manual and have prepared the heater correctly. The flue **MUST** be installed if the heater will be used in a semi-open or indoor environment.

8.1 The Control Panel / Remote Control

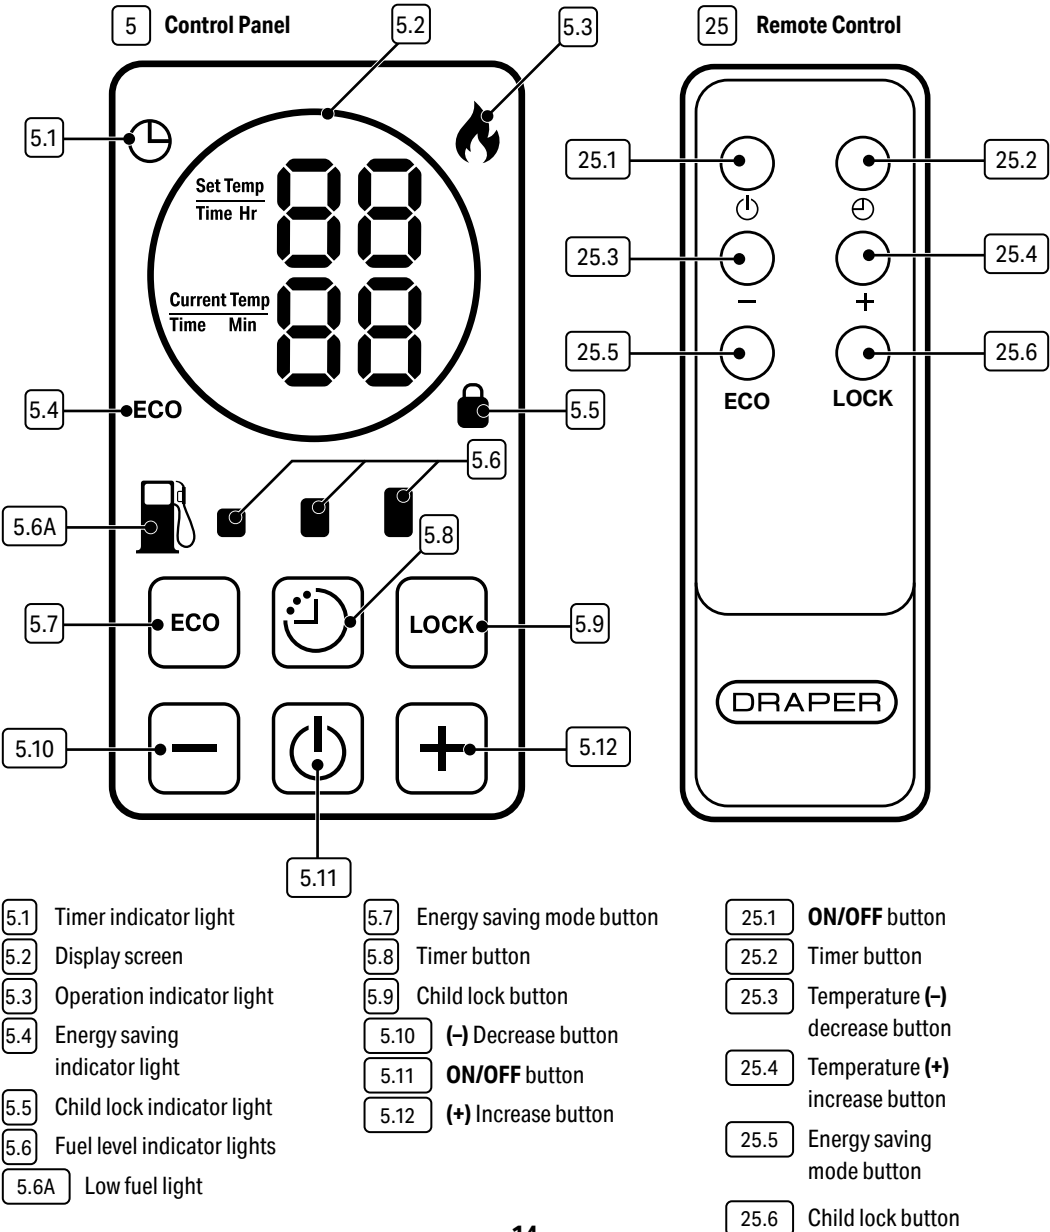

8.2 Switching the Heater ON



WARNING! ALWAYS ensure that there are no combustible materials in the vicinity of the heater.



WARNING! DO NOT move the heater during or immediately after use. ALWAYS switch off the heater, disconnect the power supply and allow it to cool before moving.

- **Important:** If the heater has recently been switched off, allow at least ten seconds before switching it back on again.

1. Ensure that the fuel tank has been sufficiently filled and the fuel cap has been securely and correctly fitted.

Note: Check that the access panel is completely closed. The heater will not turn on if the access panel  is not fully closed and the safety lock  is not activated.

2. Connect the heater to a mains power supply. The display screen will show:

- **Set temp/Time Hr ' - - '**
- **Current Temp/Time: Min ambient temperature**

3. Press the **ON/OFF** button  and the default temperature setting (20°C) will be displayed at the top of the screen.

- If the ambient temperature is lower than the default temperature the heater will start after approximately 7 seconds.
- If the ambient temperature is higher than the default temperature, press the temperature (+) button  to the desired temperature and the heater will start after approximately 7 seconds.

8.3 Switching the Heater OFF

- Press the **ON/OFF** button  and ' - - ' will be displayed at the top of the screen.
- **ALWAYS** switch off and unplug the heater when not being used.

8.4 Timer Operation

To use the timer function

1. Press the timer button  and the indicator light  will flash 5 times.

2. The display screen will show 01-24 (hours) and flash. While the digits are flashing press the timer button again to set the required number of hours before the heater will switch off.

3. Once the time is set the indicator light will remain on.
 - To cancel the set time, press the timer button for 3 seconds and the indicator light will go off.

8.5 ECO Mode

1. Press the '**ECO**' button , the digits on the screen will flash 5 times.

2. The screen will show **10-20-30** (minutes) and flash. While the digits are flashing press the '**ECO**' button again.

Example: If set to '20' the heater will cycle '**ON**' for 20 minutes and '**OFF**' for 10 minutes.

3. Once the '**ECO**' time is set the indicator light will remain on.
 - To cancel the set time, press the '**ECO**' button for 3 seconds and the indicator light will go off.

8.6 Child Lock

- Press the '**LOCK**' button  until the Child lock indicator light  is on.
- When the indicator light is on, all the buttons will be locked.
- To cancel the child lock press the '**LOCK**' button for 3 seconds until the child lock indicator light goes off.

8.7 Remote Control

- The heater is also supplied with a remote control  for remote adjustment of the control panel data.
- The remote control requires 2 × AAA batteries (not supplied).
- To install the batteries, slide open the battery compartment and fit the batteries – ensuring the correct +/- polarity.
- The buttons on the remote control operate in the same way as their counterparts on the main control panel (refer to ).

9. Maintenance and Troubleshooting

Important: Read all the Health and Safety information in this manual before attempting to maintain this product. All maintenance should be carried out **ONLY** by authorised and suitably qualified personnel.



WARNING! ALWAYS ensure that the heater is switched off, disconnected from the power supply and has fully cooled (at least 20 minutes) before attempting to maintain this product.

9.1 General Maintenance

- Keep the heater clean and dry. Clean the heater casing using a dry cloth **ONLY**.
- **Important:** **NEVER** use solvents or other aggressive or abrasive materials on this product as they may damage plastic, insulated or sensitive parts.
- When cleaning, **DO NOT** spray with water and ensure water does not enter the unit. **DO NOT** open the casing to clean the inner parts.
- Clean the heater grilles using a dry cloth or brush, ensuring that all dust and debris is collected and removed from the heater.
- Clean the exhaust of soot and other debris and obstructions. Unscrew the exhaust guard to access parts for maintenance.
- Any maintenance or repairs to the heater, the plug or cord **MUST** be carried out by suitably qualified personnel.
- The heater should be inspected at least once a year by suitably qualified personnel.

9.2 Draining the Fuel

Important: Read all the Health and Safety guidance for the use of diesel as a fuel before filling or draining this product (Refer to section 4.4).

- To drain the fuel from the product, remove the fuel cap and use a siphon to extract the fuel into a suitable container, ensuring that there is no fuel left in the tank.
- If dirt or debris is present in the drained fuel or tank, pour a couple of litres of clean fuel into the tank and manoeuvre it around to clean the tank interior. Then drain the fuel again to prevent the filters from logging.



CAUTION! DO NOT use water to clean the inside of the fuel tank.

Important: Wipe up any spillages **IMMEDIATELY** and dispose of old fuel responsibly and in accordance with local regulations.

9.3 Fuel Tank Care

- The fuel tank interior should be cleaned after every 200 hours of use or as necessary.
- To clean the fuel tank, add a couple of litres of diesel or kerosene and manoeuvre it around the interior of the tank, ensuring that the whole surface is coated, then drain the fuel tank (see **9.2 Draining the Fuel**).

9.4 Filter Care

- Remove the fuel tank cap **10**, lift out the filter **13** and rinse with clean fuel or replace if necessary. This should be carried out at least twice during the heating season by rinsing in clean fuel.

9.5 Nozzle/Ignition Electrodes/Fuel Pump Care & Servicing

- The heater should be inspected at least once a year by suitably qualified personnel and the nozzle/ignition device/burner head should be checked, cleaned and replaced where necessary.
- The fuel pump pressure is factory set and must be checked and adjusted by qualified technicians only. Tampering with the unit may be dangerous.
- Contact Draper Tools to discuss servicing options.
- In the event that incorrect or contaminated fuel is used in the heater, it must be replaced immediately.

9.6 Storing the Heater

Important: **ALWAYS** ensure that the heater is switched off, disconnected from the power supply and has cooled thoroughly before storing it.

- Drain the heater of all fuel before storing it; see **9.2 Draining the Fuel**.
- Store the heater in a clean and dry location, out of reach of children.
- Keep the heater out of direct sunlight and away from combustible materials and sources of ignition when it is stored.

9.7 Troubleshooting

Problem/Error Code	Possible cause	Remedy
E1 Heater does not operate.	Access panel not fully closed.	Ensure access panel is fully closed to ensure that the safety lock is activated.
	No power or low voltage.	Check plugged in and voltage is suitable for this heater.
	Faulty or damaged power cord.	Check plug fuse and replace if necessary. Check cord and get it replaced if necessary.
	Faulty motor.	Contact Draper Tools for support.
	Motor runs but heater does not ignite.	Empty fuel tank, dirty or wrong fuel.
		Remove wrong or dirty fuel and rinse with clean diesel. Refill tank with clean diesel or kerosene.
		Fuel filter clogged or damaged.
		Check the fuel filter and clean or replace.
		Air leaks in fuel line.
		Check fuel line and tighten connections if necessary.
		Ignition faulty or dirty. Burner nozzle clogged.
		Contact Draper Tools for support.
	Heater malfunction.	Flame failure/poor combustion/reduced air flow
		Check for cause of malfunction. To reset – turn ON/OFF switch to ' O ' and then to ' I '. Contact Draper Tools if issue persists.
E2 Temperature probe issue.	Temperature probe faulty or connector loose/PCB issue.	Contact Draper Tools for support.
E3 Overheat issue	Thermal overload protection operated.	Turn off the heater and allow to cool down before retrying.
E4 Fuel issue	Low or No fuel in tank. Low Fuel indicator  light on 	Switch off heater and refill tank.
	Fuel lever sensor faulty or connector loose.	Contact Draper Tools for support.
LC	Ignition failed more than 3 times and PCB locked and heater stopped.	With the heater plugged in, press and hold the ON/OFF button for 10 seconds. PCB unlocked after 4 presses.
Heater stops during operation.	Room temperature has reached temperature set.	Normal operation. Turn temperature control dial to higher setting to start heater if required.
Ambient temperature on display.		

10. Spares, Returns and Disposal

For spare parts, servicing, and repair and replacement options, please contact the Draper Tools Product Helpline for details of your nearest authorised agent.

Draper Tools will endeavour to hold any spare parts, if applicable, for seven years from the date that it sells the final matching stock item.

Any servicing or repairs carried out by unauthorised personnel or installation of spare parts not supplied by Draper Tools will invalidate your warranty.

Important: For safety, **ALWAYS** drain and clean the product of any fuel before returning it to Draper Tools or its authorised agent. Store these materials in suitable containers and dispose of them in accordance with local regulations. Draper Tools and its agents cannot be responsible for the disposal of these substances.

At the end of its working life, dispose of the product responsibly and in line with local regulations. Recycle where possible.

Dispose of fuel separately and in accordance with local regulations; **DO NOT** abandon it in the environment.



11. Warranty

12 months from date of purchase – Visit [drapertools.com/warranty](https://www.drapertools.com/warranty) for more information.

	General Mandatory action required		Tank capacity
	Read the instruction manual		Run time per tank of fuel (approx.)
	Warning! / Caution / Danger		Fuel consumption (Litres per hour)
	Warning! DO NOT touch hot surfaces		Power cord length
	Danger of electric shock		Net product weight
	DO NOT cover	IPX0	Ingress protection rating
	DO NOT expose to wet or damp conditions		For indoor use ONLY DO NOT expose to rain
	Rated voltage		Class I Appliance (Earthed)
	Rated input (Wattage)		WEEE – Waste Electrical & Electronic Equipment Do not dispose of Waste Electrical & Electronic Equipment in with domestic rubbish
	Rated input (Kilowatts)	CE	European conformity
	Rated input (British Thermal Units)	UK CA	UK Conformity Assessed
	Maximum heating area		

Contact Details

Draper Tools Limited

Hursley Road
Chandler's Ford
Eastleigh
Hampshire
SO53 1YF
UK

Website: drapertools.com

Email: sales@drapertools.com

Product Helpline: +44 (0) 23 8049 4344

Telephone Sales Desk: +44 (0) 23 8049 4333

General Enquiries: +44 (0) 23 8026 6355

Draper Tools Europe B.V.

Oude Graaf 8
6002 NL
Weert
Netherlands

Please contact the Draper Tools Product Helpline for repair and servicing enquiries.