
eureka

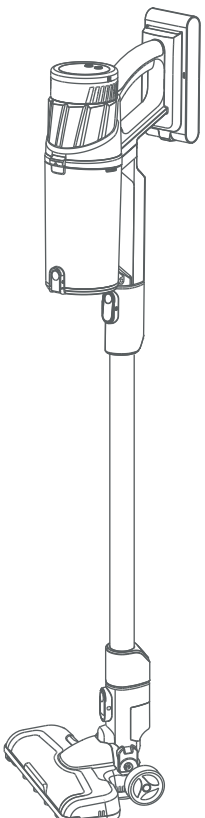

INSTRUCTION MANUAL

NEC520BK

VACUUM CLEANER

Please read the manual before use.

CONTENTS

English 02
SAFETY INSTRUCTIONS 03
PRODUCT OVERVIEW 06
PRODUCT INSTALLATIONS 07
CLEANING AND MAINTENANCE 10
TROUBLE SHOOTING 13
French 14
German 26
Italian 38
Spanish 50
Polish 62

SAFETY INSTRUCTIONS

Do not place the vacuum cleaner close to heat sources, radiation sources or burning cigarette butts. Sucking in the following objects is strictly forbidden:

1. All liquids such as water and solvent.
2. Construction dust and trash such as lime and cement dust.
3. Heat sources, such as carbon butts and cigarette butts that have not been put out.
4. Sharp fragments, such as glass.
5. Flammable and explosive articles, such as gasoline and alcohol products.

- This section contains safety instructions that will help protect from risk of personal injury or property damage. Failure to follow these instructions invalidates the given warranty.
- This appliance complies with international safety standards.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- If the adapter or the appliance itself is damaged, do not use it. Contact an authorised service centre.
- Prevent damage to the power cable by not squeezing, bending, or rubbing it on sharp edges.
- Do not touch the appliance or its plug when it is plugged if your hands are damp or wet.
- Do not pull the power cable when unplugging the appliance.
- Do not vacuum flammable materials and when vacuuming cigarette ash, make sure that it has cooled down.
- Do not vacuum water or other liquids.
- Protect the appliance from rain, humidity and heat sources.
- Never use the appliance in or near places where combustible or flammable environments are present.
- Unplug the appliance before cleaning and maintenance.
- Do not immerse the appliance in water for cleaning.
- Do not attempt to dismantle the appliance.
- Use the original parts or parts recommended by the manufacturer only.
- Do not attempt to vacuum particles such as cement, plaster and compressed paper in order to prevent the filter from being clogged and the motor being damaged.

SAFETY INSTRUCTIONS

- If the adapter is damaged, it must be replaced by the manufacturer or its agent or similarly qualified person in order to avoid hazard.
- Use the appliance only with the power adapter supplied.
- Do not use the appliance without filters fitted, otherwise it can get damaged.
- If you keep the packaging materials, store them out of the reach of children.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The appliance is only to be used with the power supply unit provided with the appliance.
- The adapter must be removed from the socket-outlet and the battery pack must be removed from the appliance before cleaning or maintaining the appliance.
- Keep fingers, hair and loose clothing from moving parts and openings whilst using the vacuum cleaner.
- The battery must be removed from the appliance before it is scrapped.
- Please dispose of used batteries according to local laws and regulations.
- This appliance contains batteries that are only replaceable by skilled persons.
- The supply terminals are not to be short-circuited.


Charging system specification:
Charger type: MC2805B-V
Battery pack type: BP25920C


SAFETY INSTRUCTIONS


Tips


1. Longer charging time may be needed in the following circumstances.
a. When charging in a place where the indoor temperature exceeds 30°C.
b. When charging immediately after stopping running.
2. Please charge the vacuum cleaner after using no matter how long it is used.
3. When not charging, it is recommended to unplug the power plug in time.
4. If the vacuum cleaner is not in use for a long time (more than 2 months), please unplug the power plug, but in order to ensure the battery life, please fully charge it every 2 months.
5. During charging, the machine may heat up, which is a normal phenomenon. Please rest assured to use it.

PRODUCT OVERVIEW

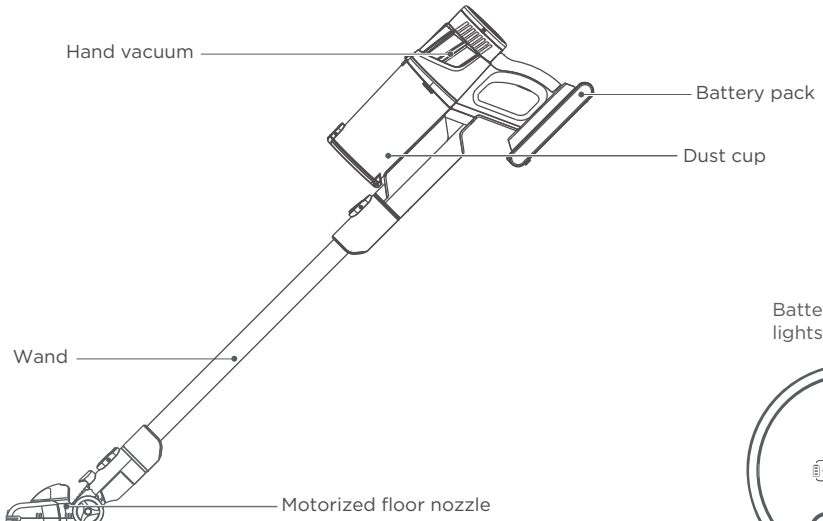

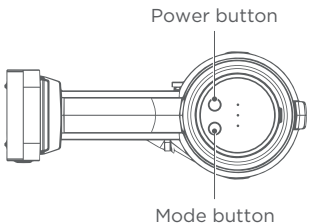

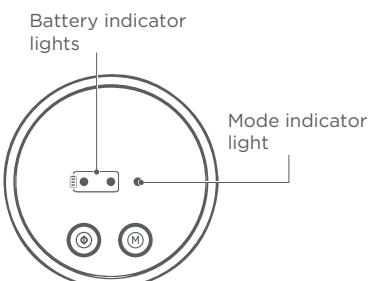

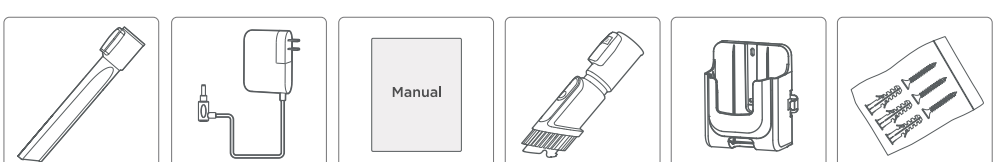


Crevice tool | Charger | User manual | Upholstery tool | Wall mount | Screws

OPERATION INSTRUCTIONS


Battery Charging

ATTENTION
Fully charge the battery before first use.

01 | Put the body on horizontal surface. Plug charger into power outlet and then into charging port on battery pack. When charing, charge indicator will flash continuously. The indicator light turns off 1 minute after being fully charged.

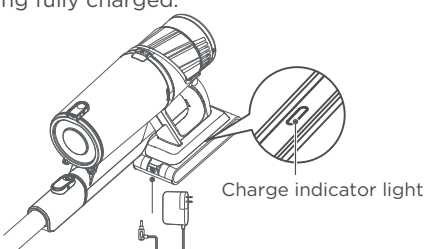


02 | The battery pack can be charged separately.



How to Remove Battery

03 | Press and hold the release button on the battery and pull the battery out toward the back of the hand vacuum.

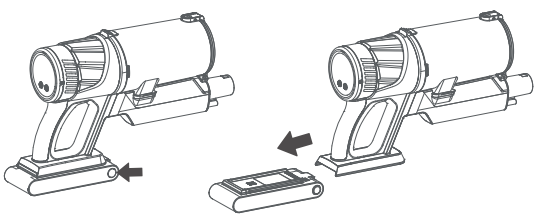

Charging time:
It takes approximately 4 - 6 hours to fully charge.
Runtime:
High Mode: 15mins
Auto mode: Varies by usage
Low Mode: 60 mins


OPERATION INSTRUCTIONS

Control Mode

ATTENTION

To avoid the air duct being blocked, please clean the big particle waste manually. (such as paper, cloth and others).

01 | Press the power button on the handle to turn on, and press again to turn off. Use the speed mode button to switch between low, medium, and high speed modes.

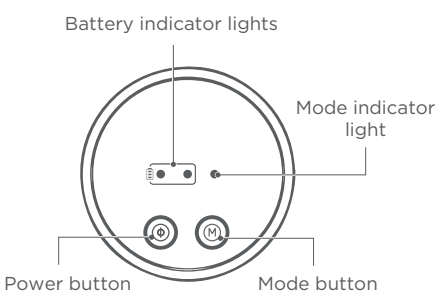

Indicator for Battery Level and Modes

01 | Battery level indicator lights:
High battery level: the 2 lights are constantly ON;
Medium battery level: one light is constantly ON;
Low battery level: One light blinking.

02 | Mode Indicator lights:
High mode: The mode indicator light turns blue.
Medium mode: The mode indicator light turns off.
Low mode: The mode indicator light turns blue and blinks slowly.


OPERATION INSTRUCTIONS

Installation and Use of Wall Mount


ATTENTION

Before fixing the wall mount to the wall, please make sure the wall is solid and flat.

01 | Use the included mounting hardware to fix the wall mount to a solid, flat wall to avoid falling.(At least 43in/1090mm above the ground to give the vacuum enough space).

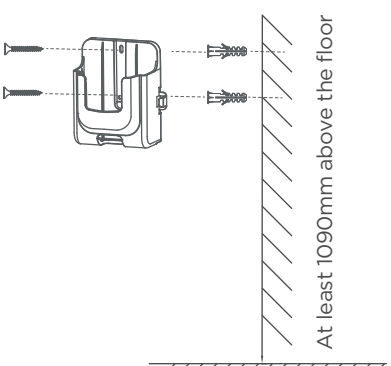

02 | Hang the vacuum cleaner on the wall mount and connect the power supply to start charging.

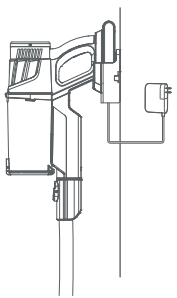


CLEANING AND MAINTENANCE

How to Clean Your Dust Cup


ATTENTION

To maintain the vacuum cleaner's suction power, please clean the dust cup regularly.


01 Press the button at the bottom of the dust cup to empty debris.

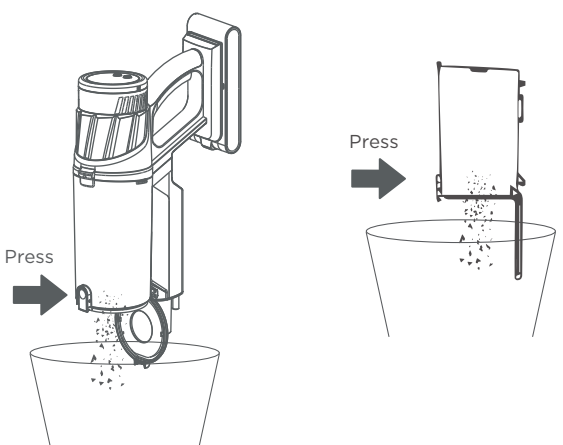

02 Press the release button to remove the dust cup.

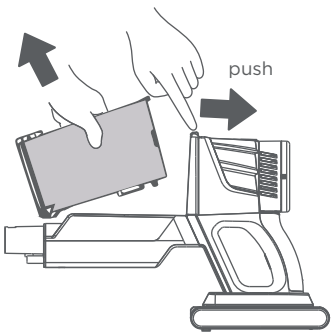



03 Remove the cyclone from the dust cup.



CLEANING AND MAINTENANCE

04 | Disassemble the cyclone and clean with watter. All parts of the cyclone can be hand washed.



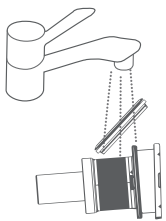


05 | Re-assemble the parts once they have fully dried.

How to Clean Post-motor Filter


ATTENTION

To maintain the vacuum cleaner's suction power, please clean the post-motor filter regularly.

01 | Rotate the outlet cover 15 degrees counterclockwise to unlock it and pull down the outlet cover.

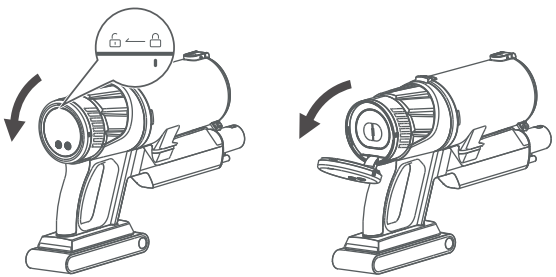

02 | Remove the post-motor filter and clean it by hand with cold water.

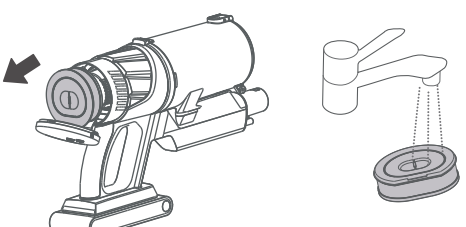

03 | Install the post-motor filter back once it has full dried and lock the outlet cover once installed.


CLEANING AND MAINTENANCE

How to Maintain Floor Nozzle


WARNING

To avoid unnecessary service calls, periodically check floor nozzle for debris. Make sure vacuum cleaner is turned off before maintenance. The floor nozzle should not be cleaned with water.


01 Press the button to remove the floor nozzle.

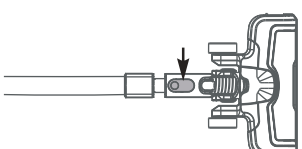


02 Turn the floor nozzle upside down to reveal the brushroll. Use scissors to cut heavy threads or strings.

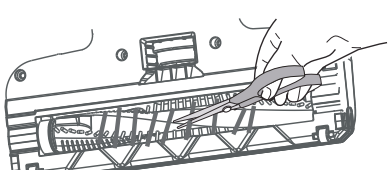

03 If debris cannot be removed easily, locate the brushroll release tab on the right side and open the brushroll cover. Remove the brushroll and clear any tangled hair or remaining debris.

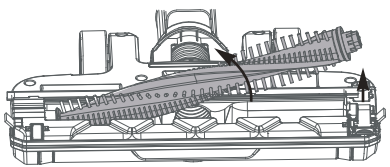

04 To reassemble:
1. Align one end of brushroll with floor nozzle gear.
2. Press other end into slot.
3. Reinstall the release tab.

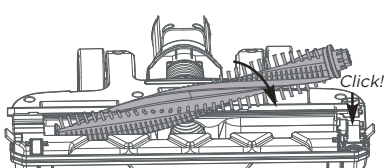

TROUBLE SHOOTING

Problem	Possible cause	Solution
Motor will not start	Product has powered off or battery is low	Please charge the product before use
	Product suction port is blocked	Cleaning product suction mouth
Not enough suction power	Dust cup & filter assembly is dusty/full	Empty dust cup and clean or change filters
	Brushroll has hair or other objects wrapped around it	Clean the brushroll
	There is a blockage in the wand	Carefully clean and check for blockage
Different motor operation sound	There is a blockage in the wand	Carefully clean and check for blockage
	Filter assembly is blocked	Thoroughly clean the filters
Product can not be charged	Charger not properly connected	Please check connections
	Mains supply is not switched on	Check the mains supply is switched on
	Situation still remains	Contact the service center

TABLE DES MATIÈRES

English **02**

French **14**

CONSIGNES DE SÉCURITÉ 15

PRÉSENTATION DU PRODUIT 18

INSTRUCTIONS D'UTILISATION 19

NETTOYAGE ET ENTRETIEN 22

DÉPANNAGE 25

German **26**

Italian **38**

Spanish **50**

Polish **62**