


WB80 W+200

WALL BOX FOR PS80 SAM115

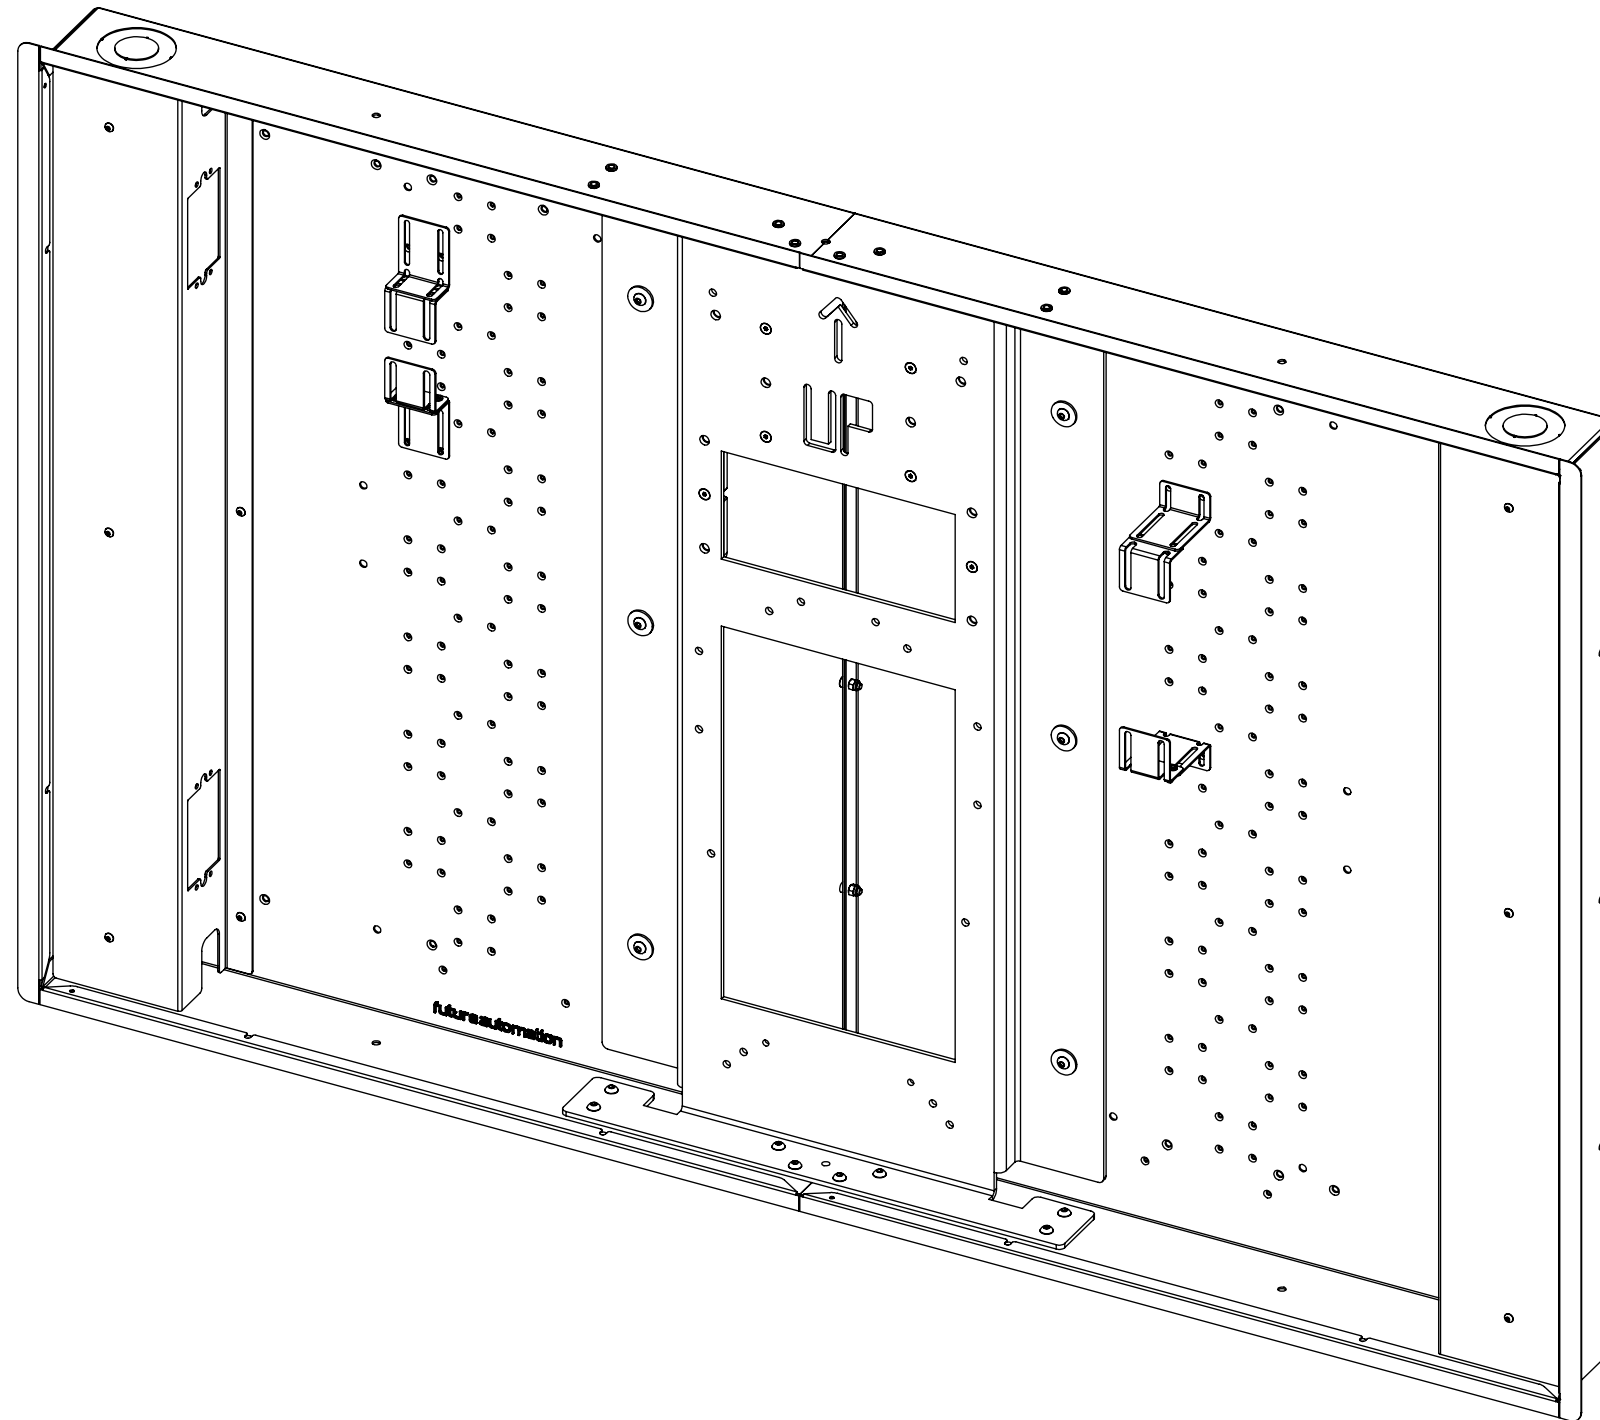

future automation




WB80 W+200

WALL BOX FOR PS80 SAM115






future automation

WALLBOX MOUNTING DIMENSIONS

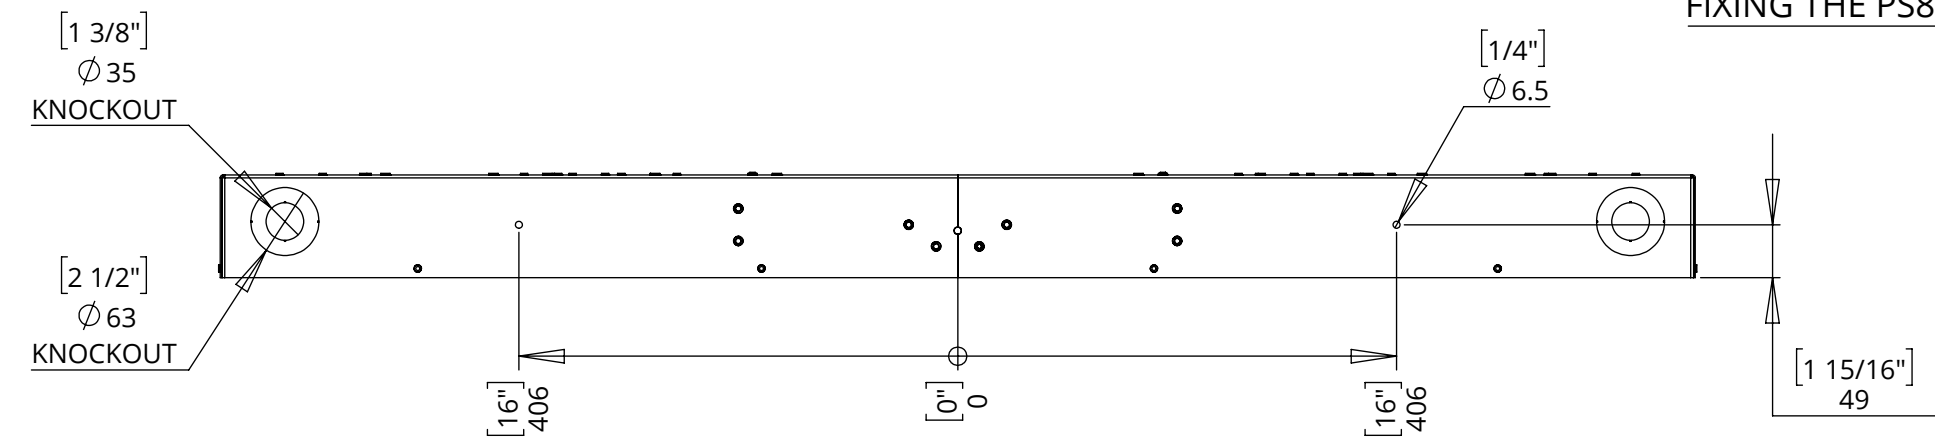

FOR EASE OF INSTALLATION,
MOUNT THE WALL BOX BEFORE
FIXING THE PS80 IN PLACE

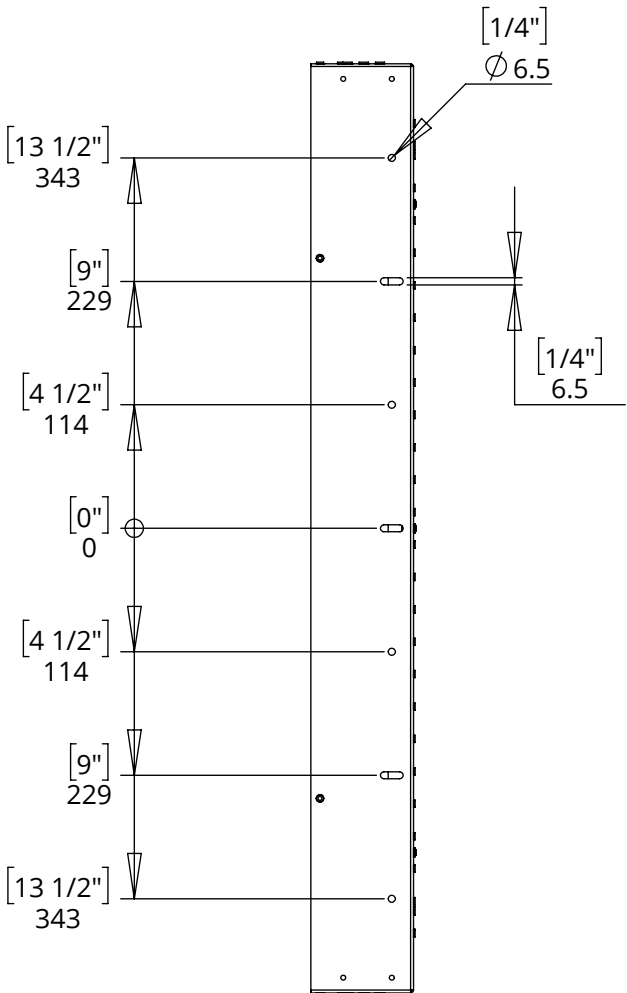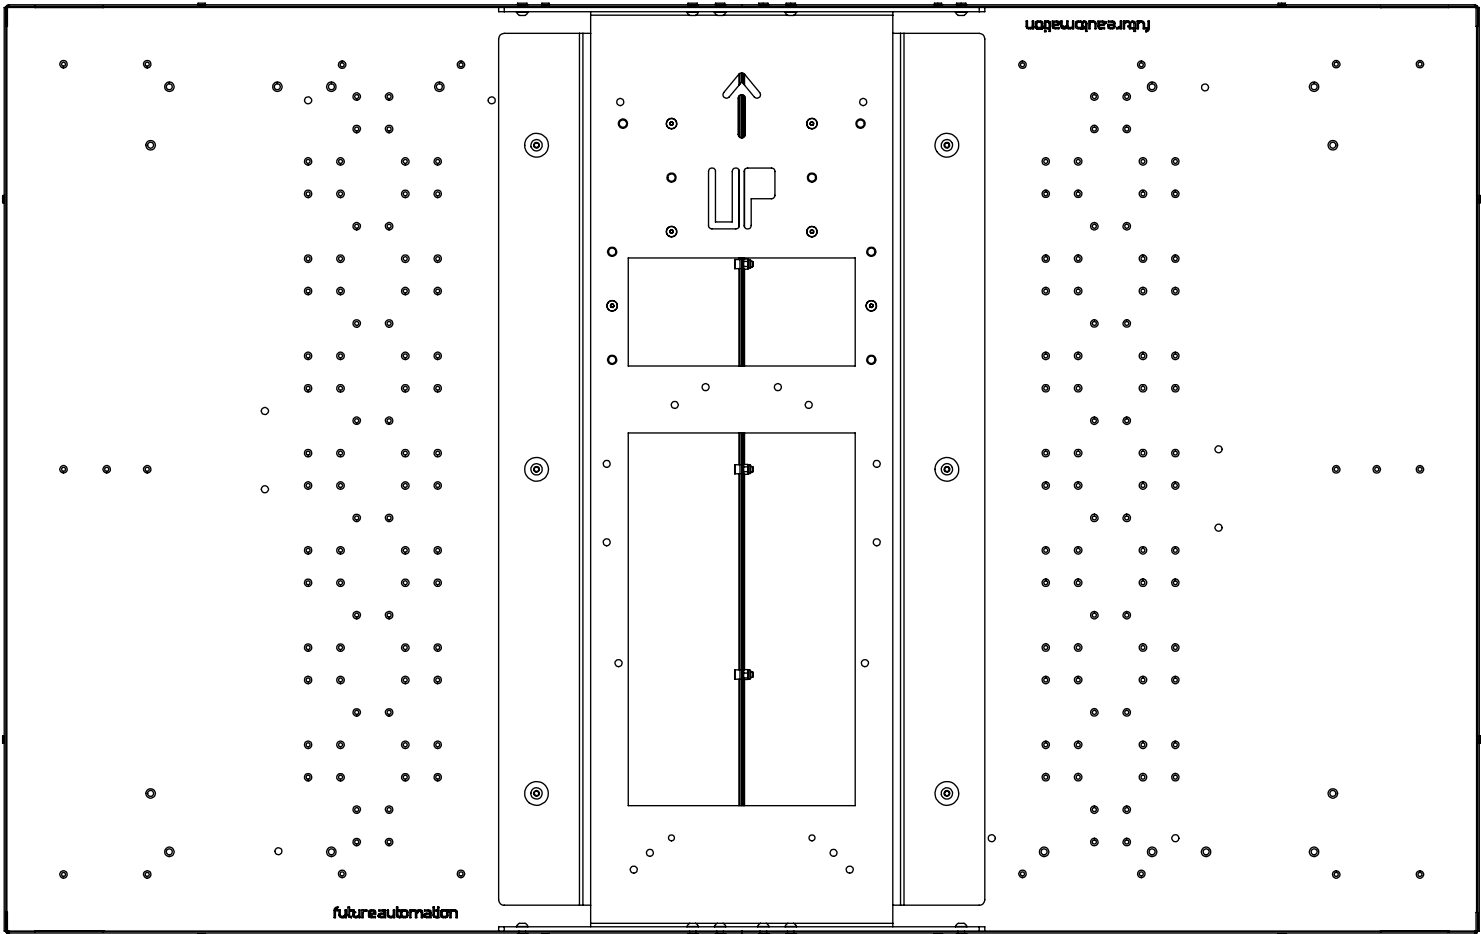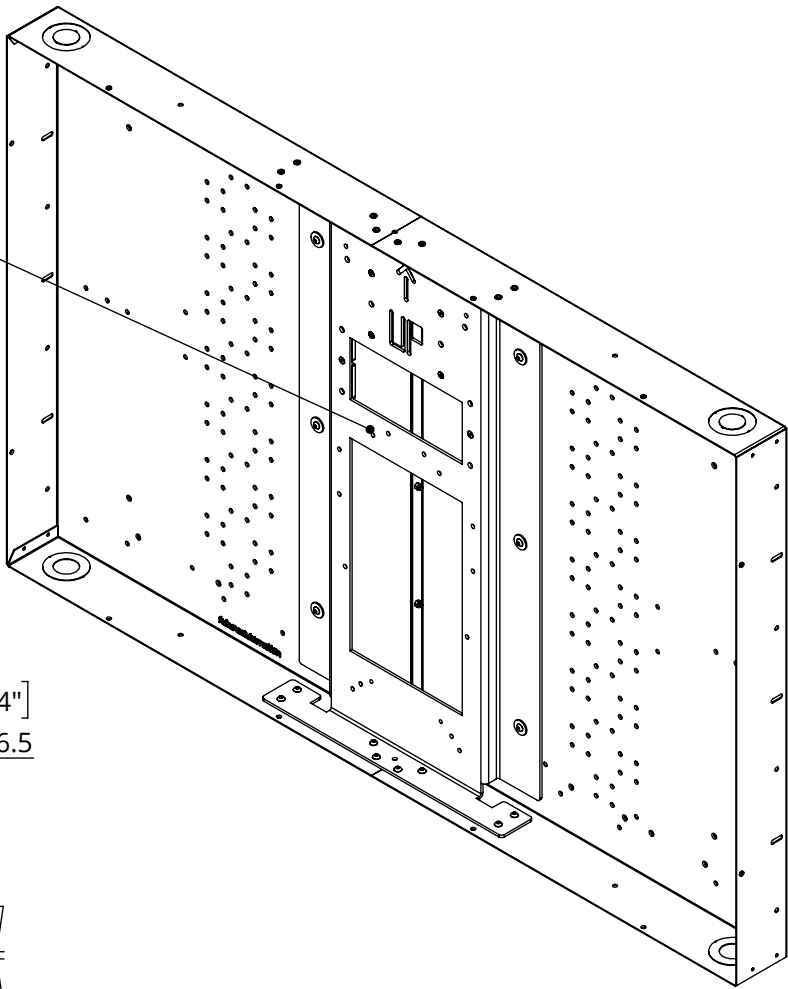


WB80 W+200

WALL BOX FOR PS80 SAM115



future automation

GENERAL DIMENSIONS

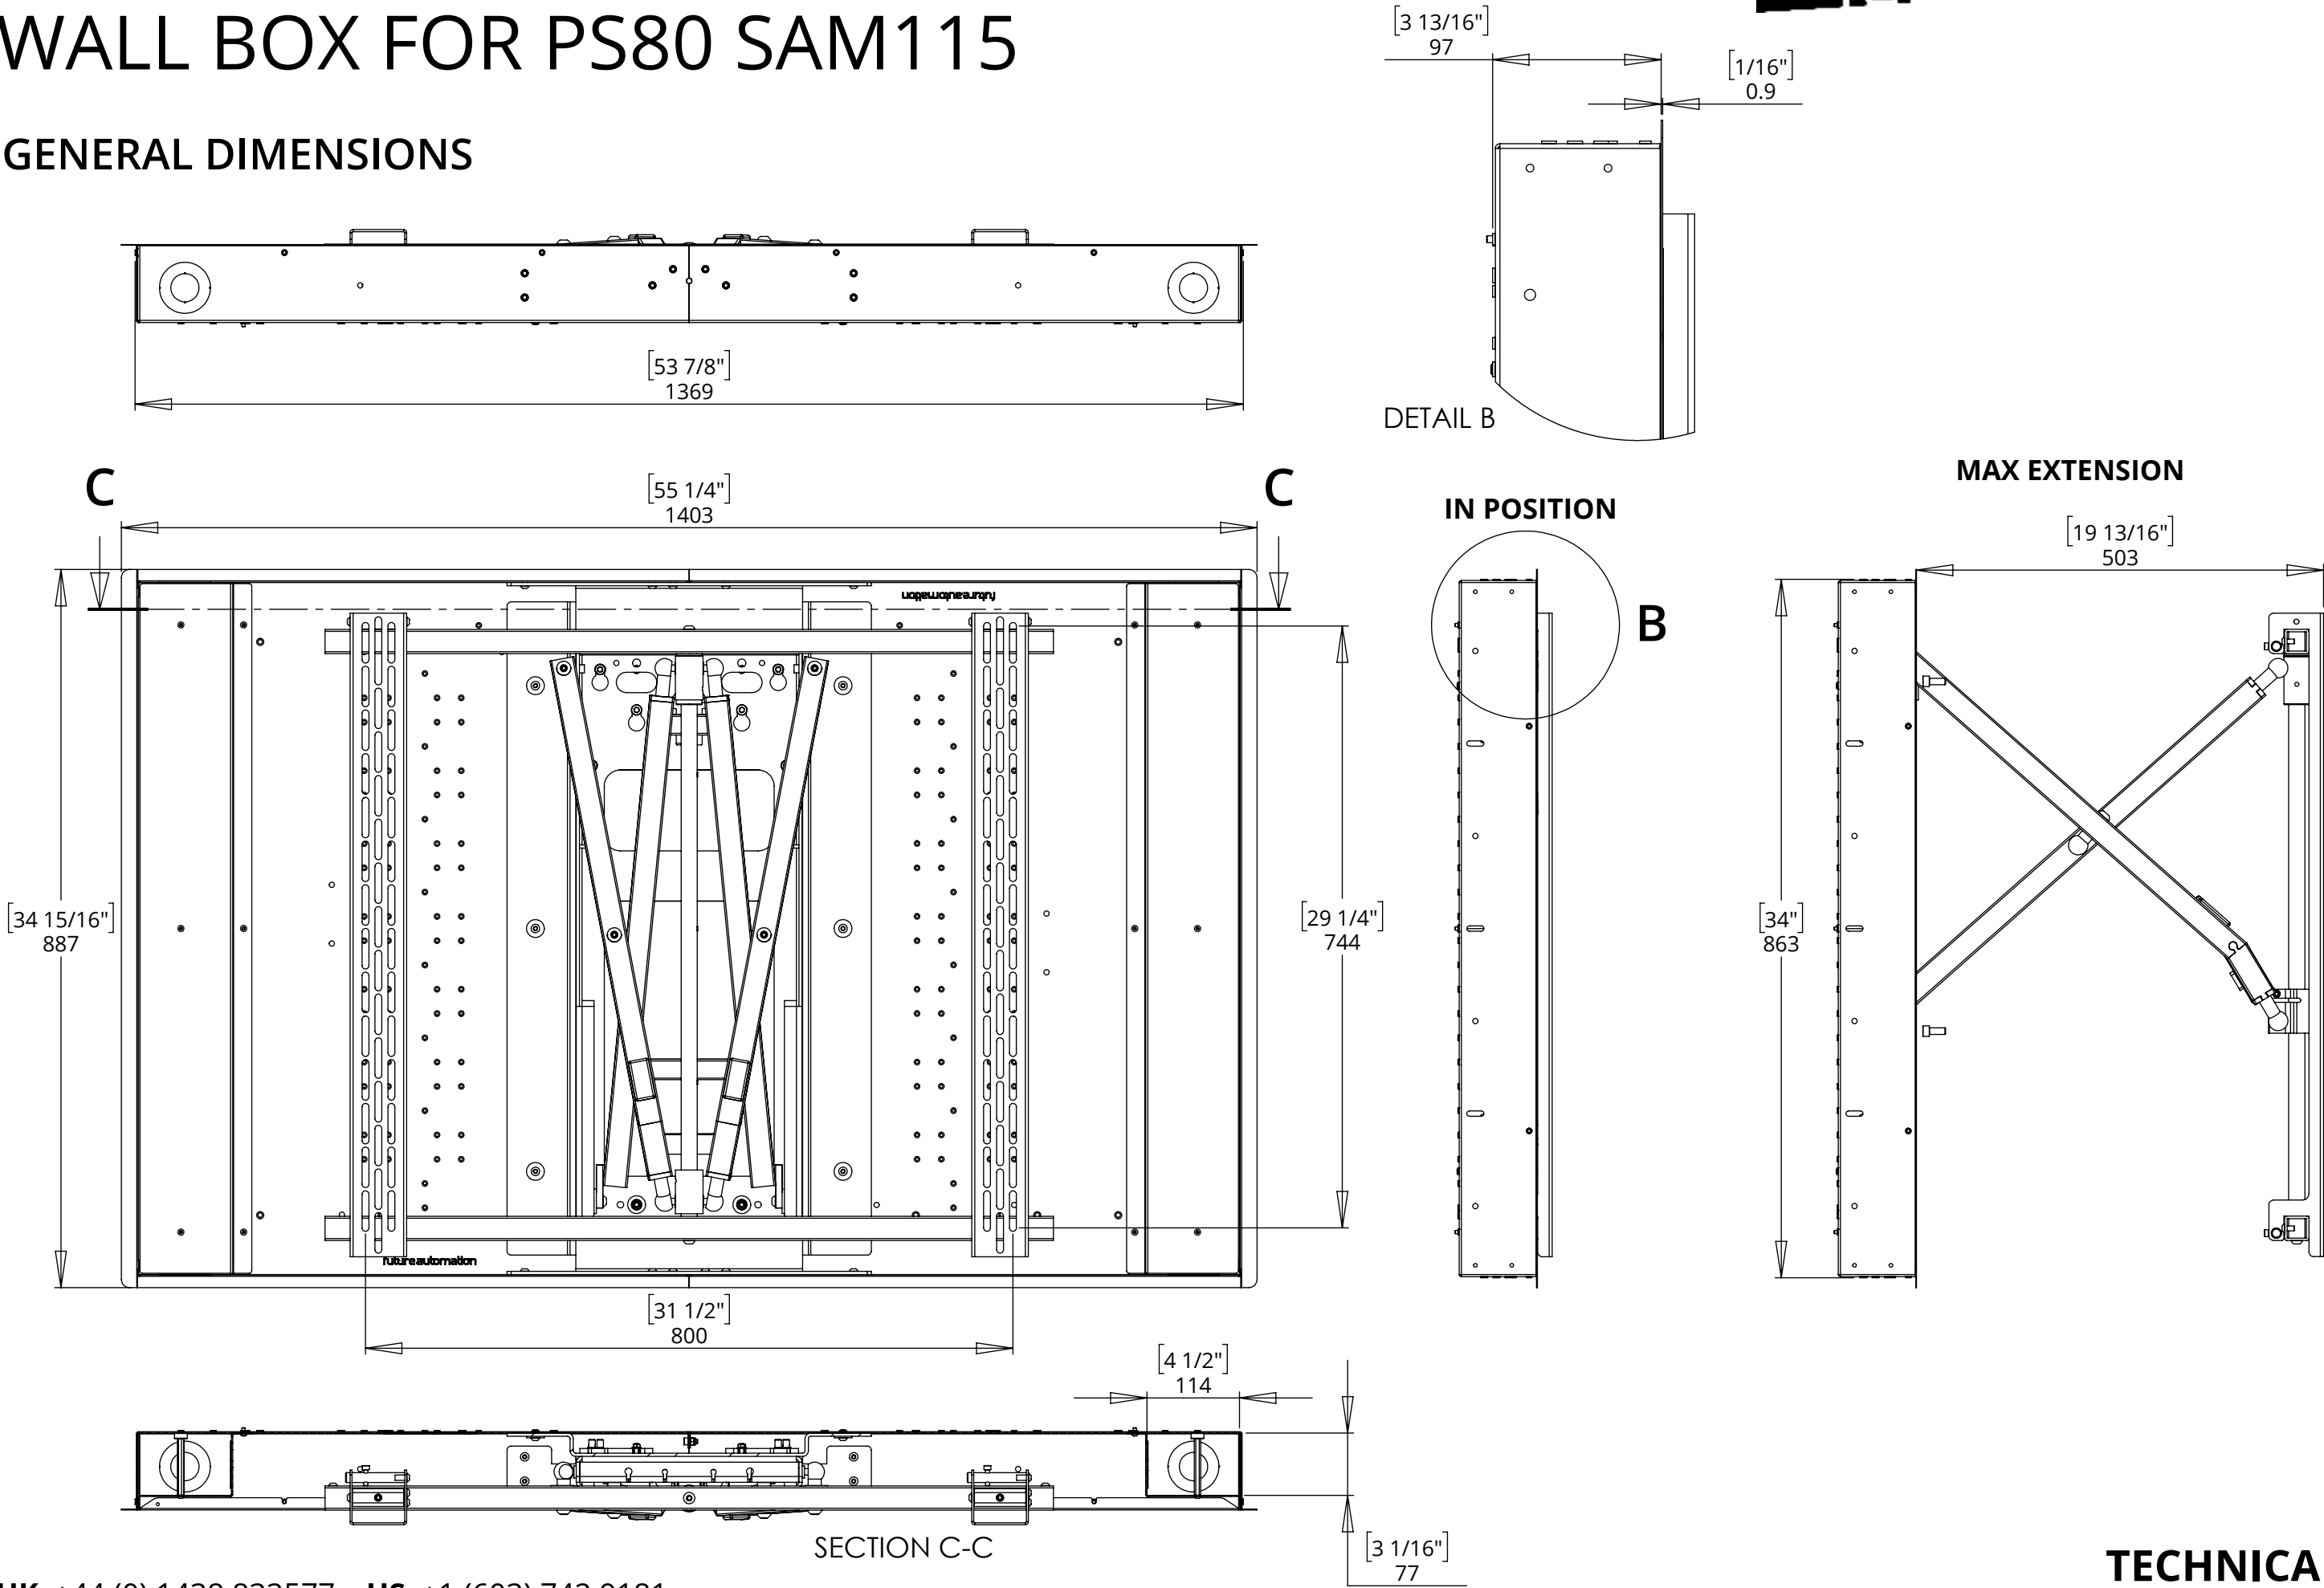


WB80 W+200

WALL BOX FOR PS80 SAM115

WALL FRAMING DIMENSIONS

Horizontal studs should be used, with the Wall Box fixed through the three top and three bottom fixing holes.

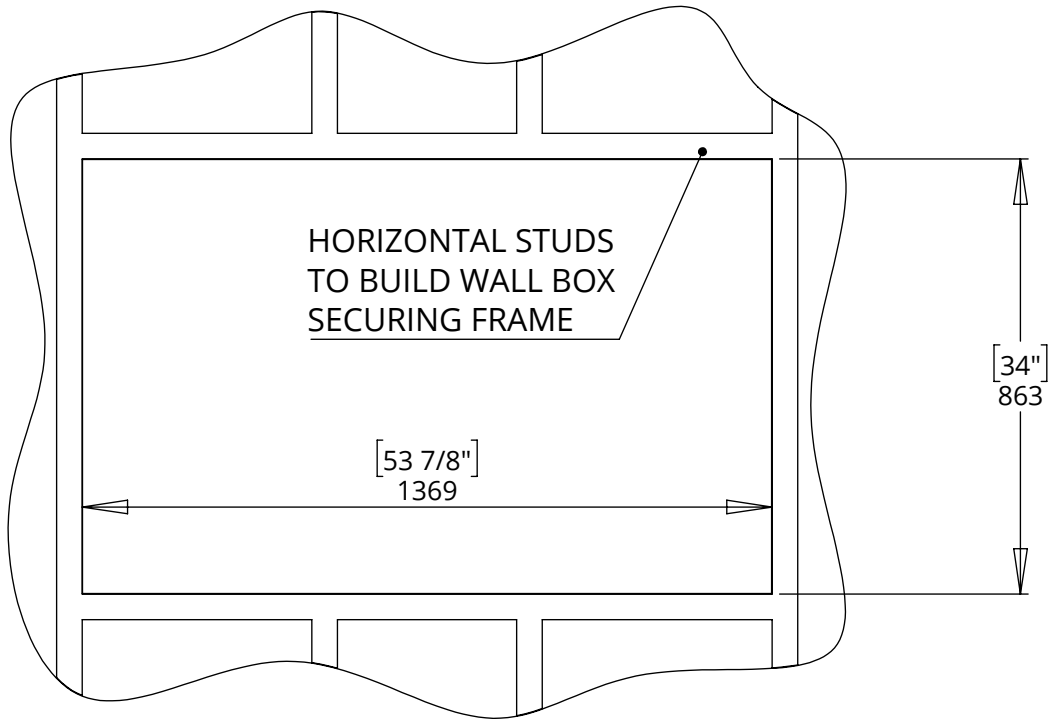

INSERT THE WALL BOX INTO THE VOID AS SHOWN
THEN SECURE THROUGH THE SIDE FIXING HOLES AND SLOTS

