


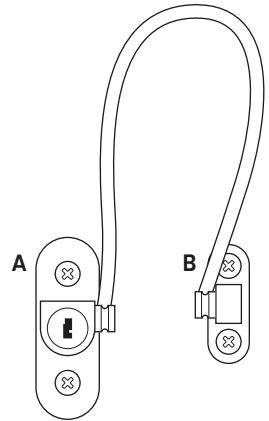

Fitting Instructions

Mini Cable Restrictor



Typical Top Hung Window

1. Place the restrictor body (A) on the window frame in a suitable position and mark the location of the 2 screw fixing holes. We advise drilling pilot holes first for ease of fixing.
2. Fix the restrictor body (A) to the frame using suitable type and length of fixing screws for the application.
3. Ensuring the window is closed, place the restrictor body (B) directly onto the sash adjacent and mark the 2 screw fixing holes. Again, we advise drilling pilot holes first for ease of fixing.
4. Fix the restrictor body (B) to the sash using suitable type and length of fixing screws for the application.

Important Information: To comply with BS EN 14351-1:2006, the cable restrictor should be fitted and locked with key removed.

Suitability of screws: Please ensure the screws used to fix the cable restrictor are suitable for the application. I.E. Timber Window, PVC-u Window, with or without reinforcement, Aluminium Window.

Typical Top Hung Window Application - We advise fitting the cable restrictor towards the bottom (opening side of a window) ensuring the opening does not exceed 10cm or 100mm.

Typical Side Hung Window Application - We advise fitting the cable restrictor towards the middle (opening side of a window) ensuring the opening does not exceed 10cm or 100mm.