



PermaLawn


The Permanent Lawn People




Fitting Instructions - how to install your beautiful new PermaLawn

Tools


- 1 artificial grass adhesive
- 2 seam tape
- 3 carpet knife
- 4 adhesive comb

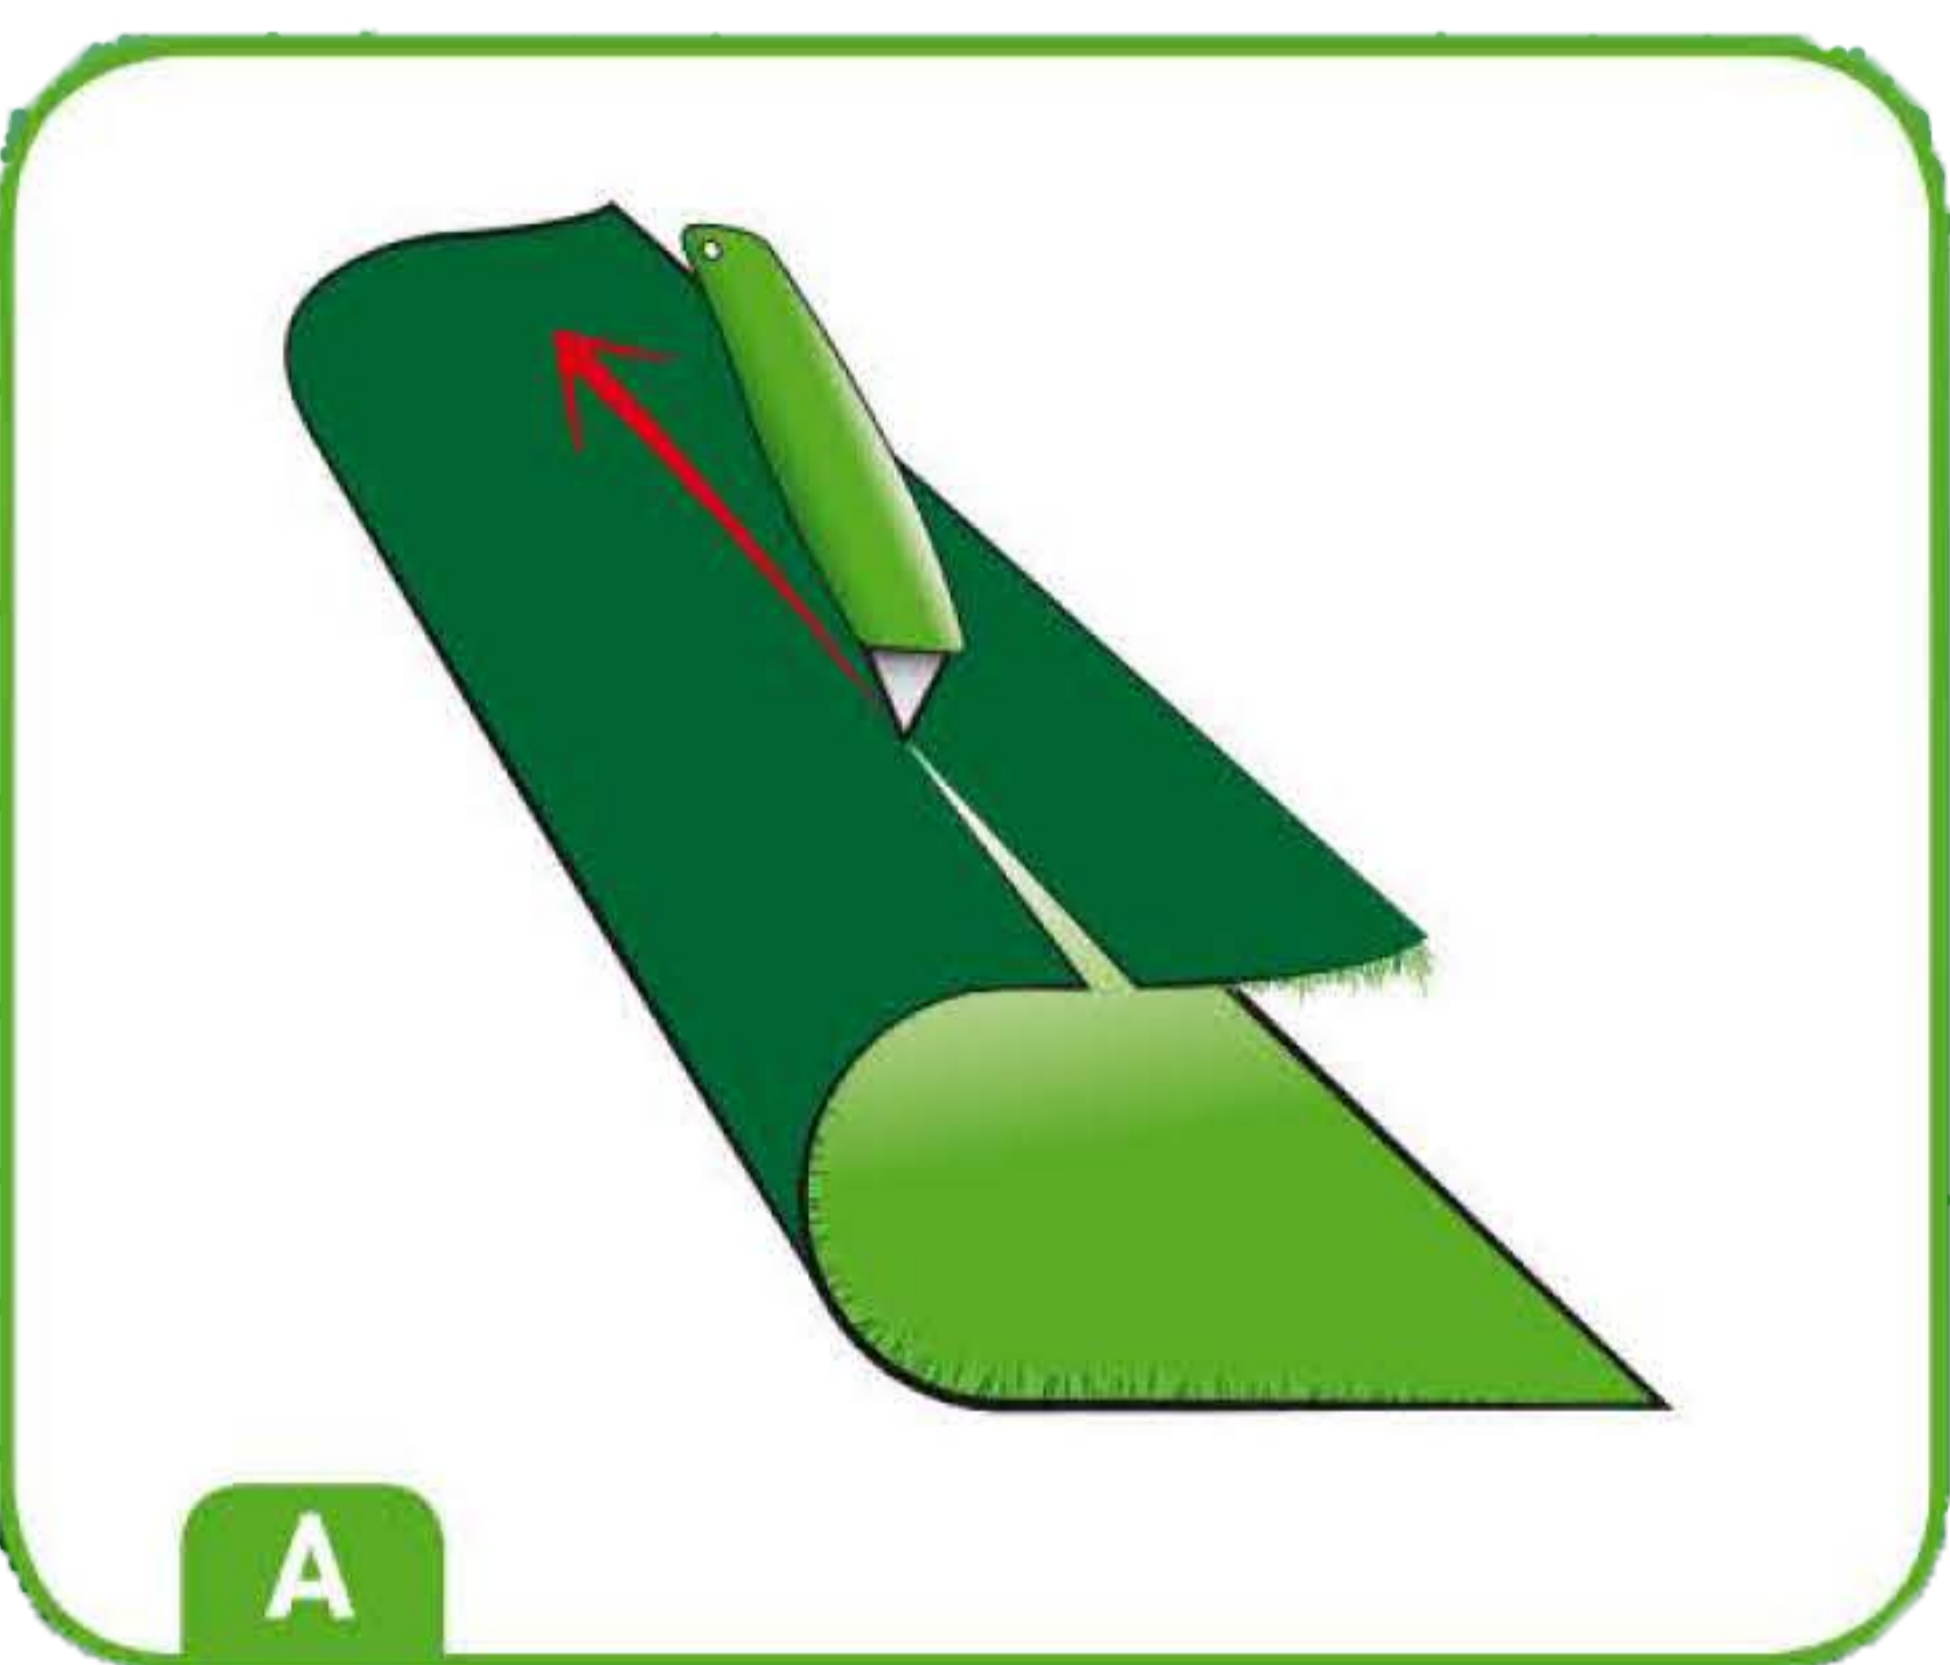


A
Cut the sides of the artificial grass

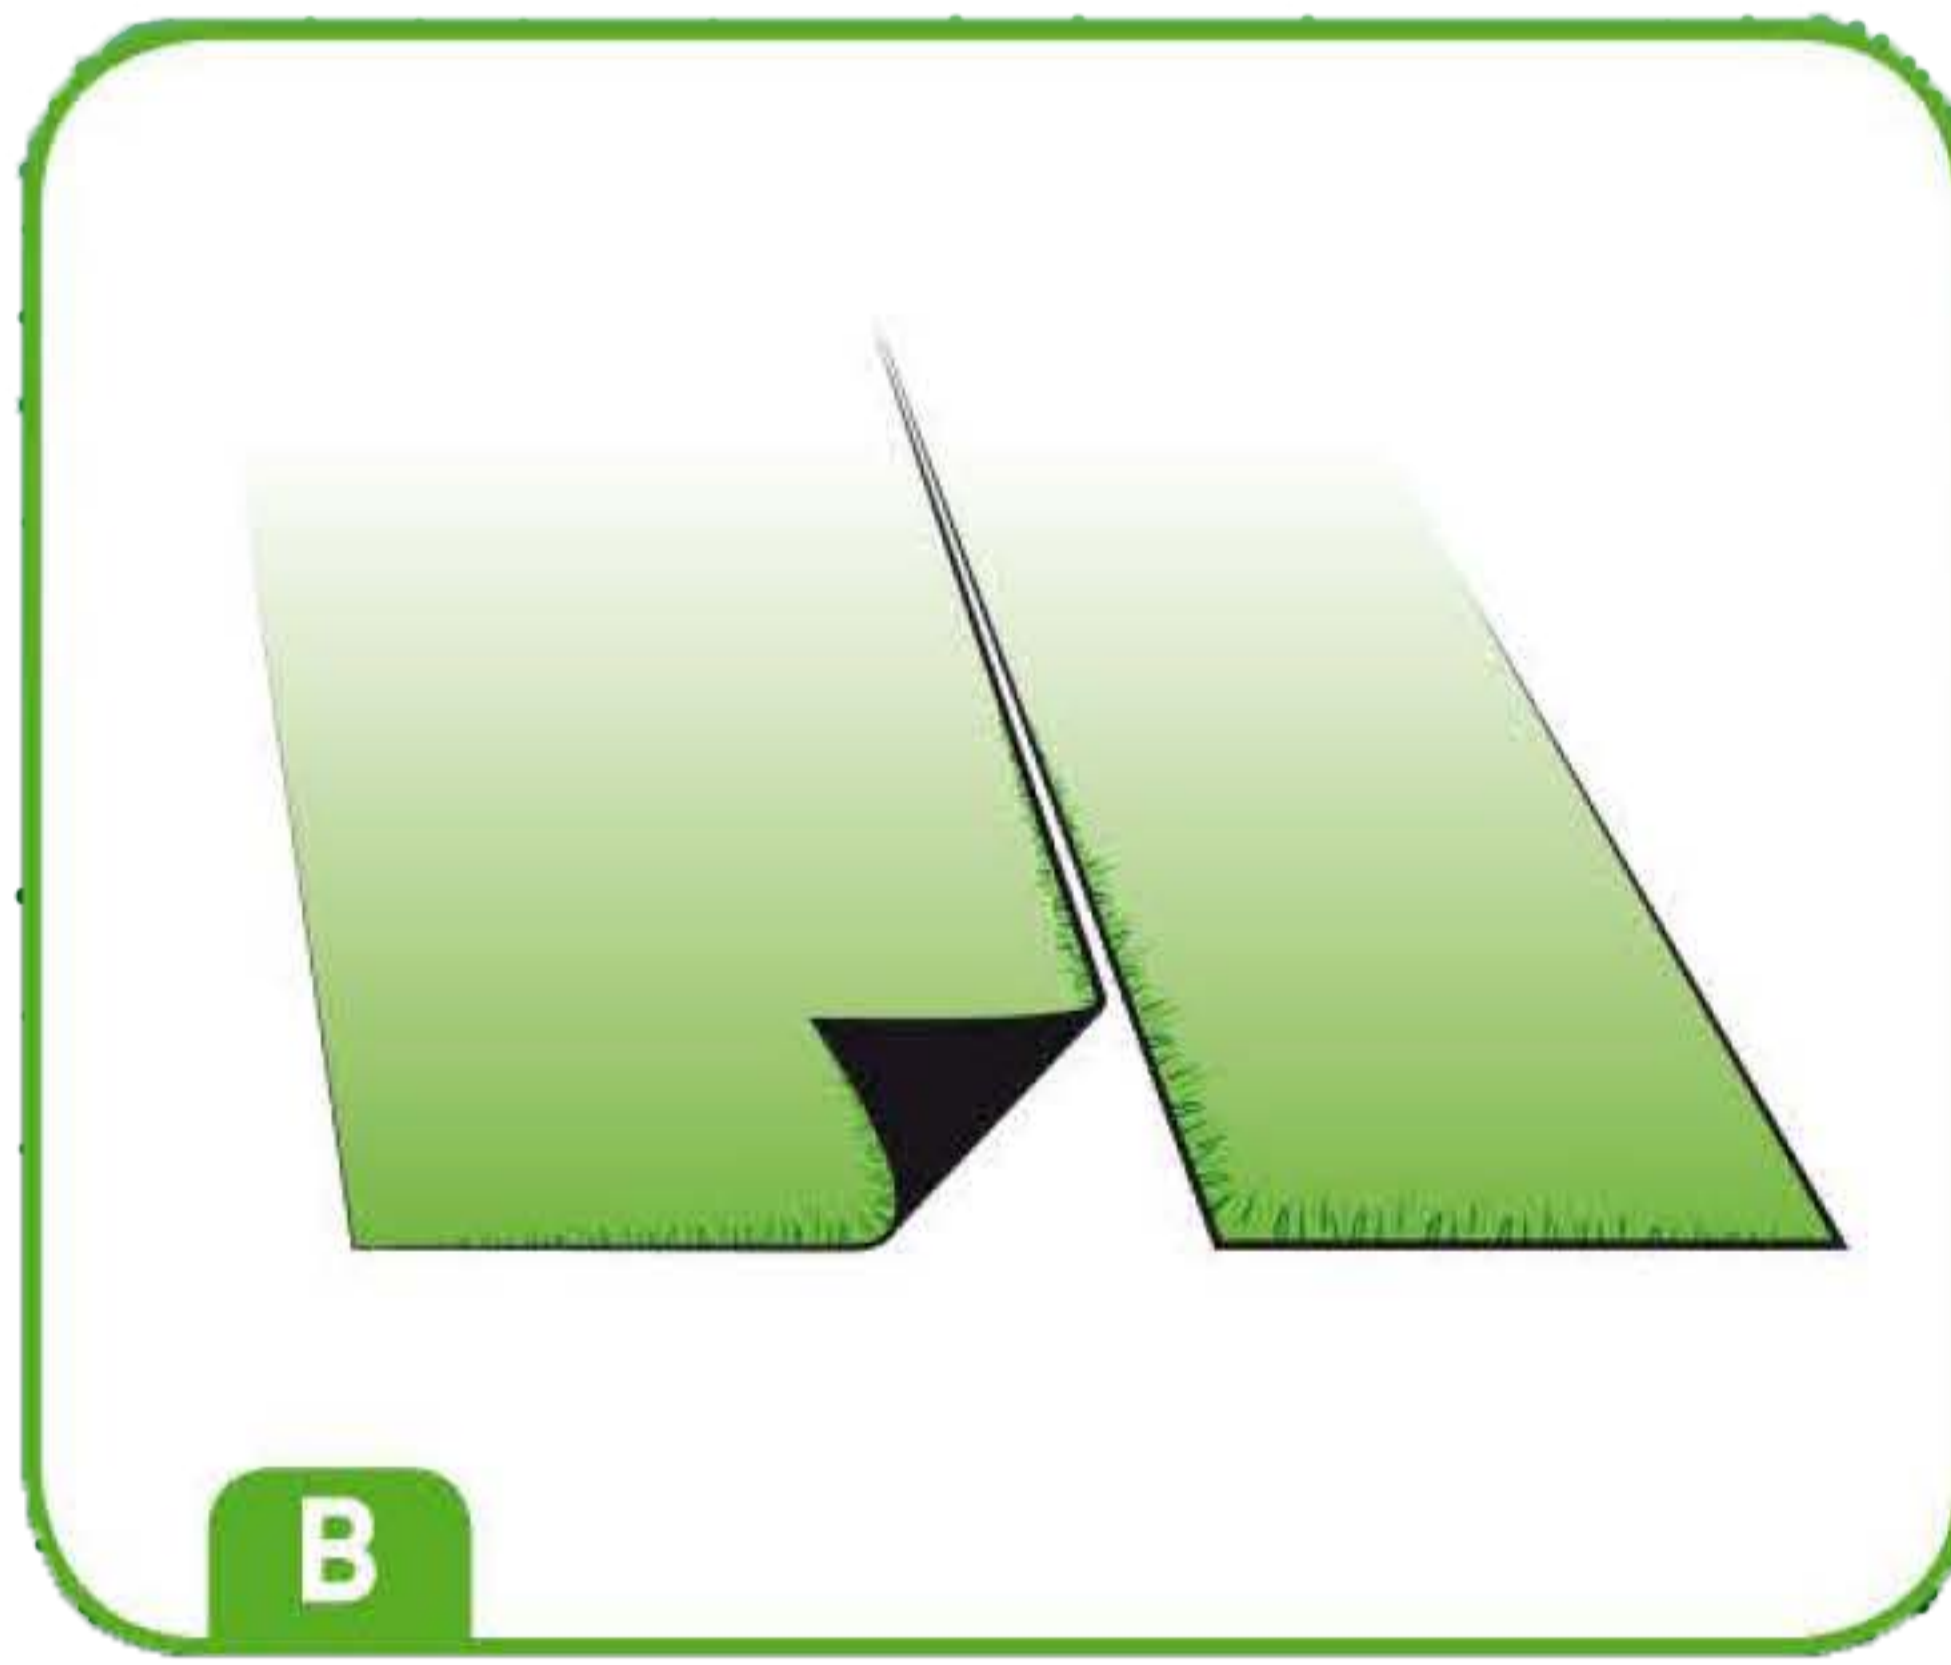


B
The max width of the seam is 4mm

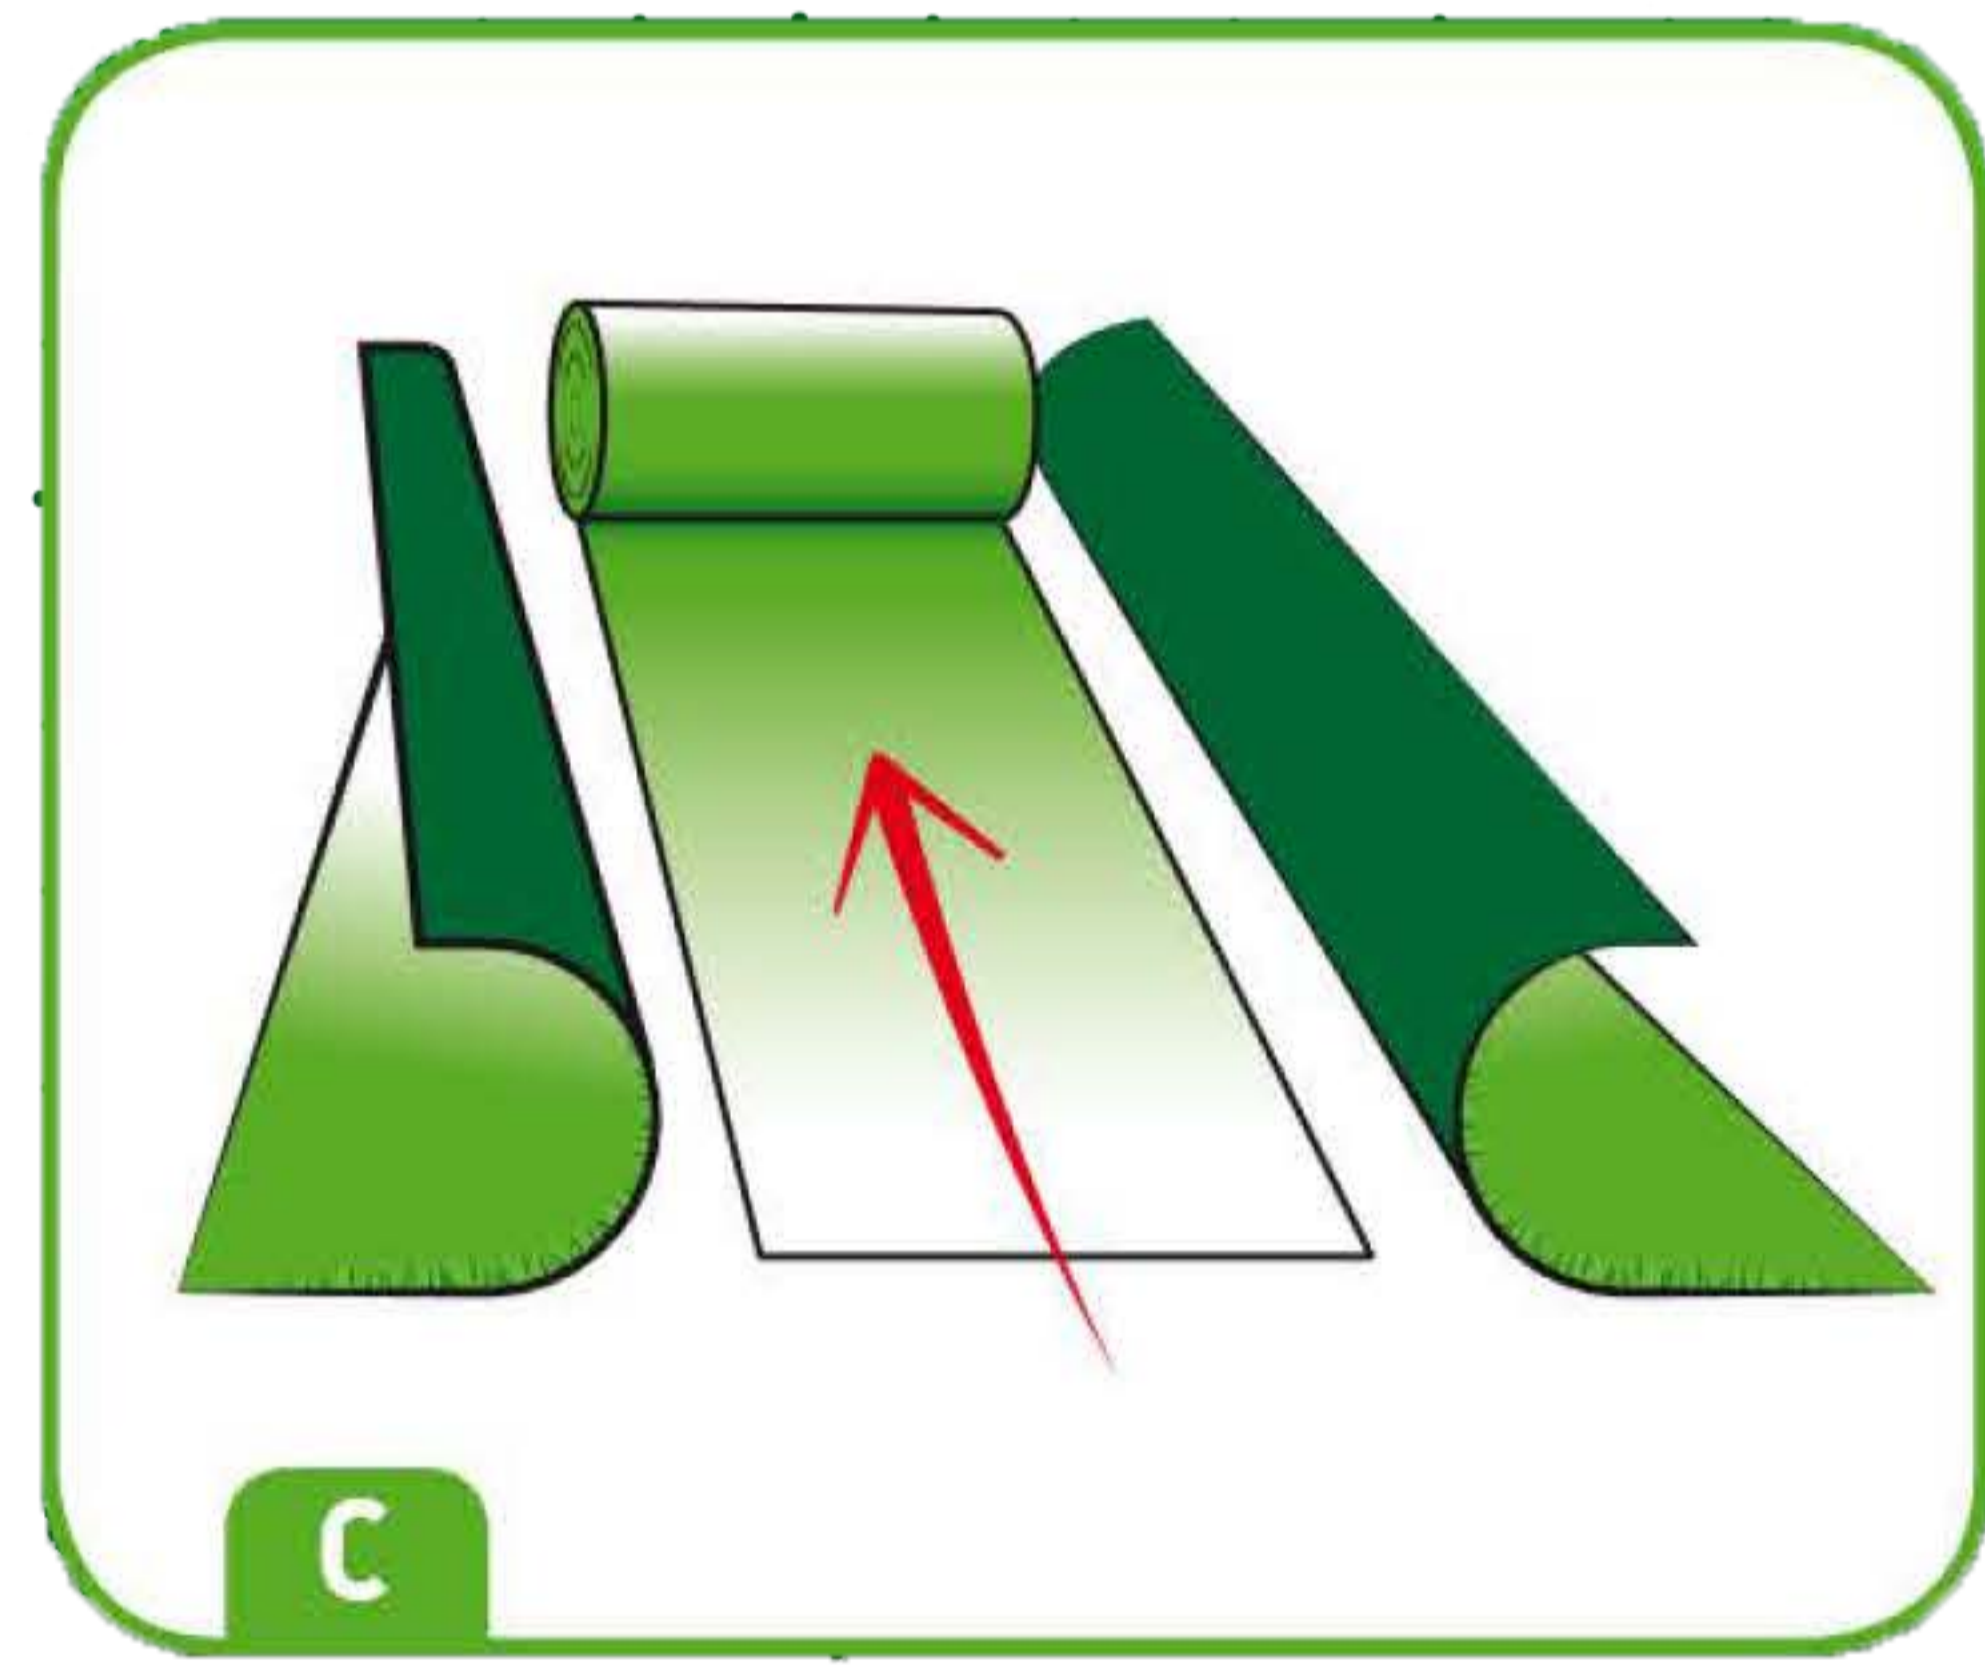


C
Roll out the seam tape

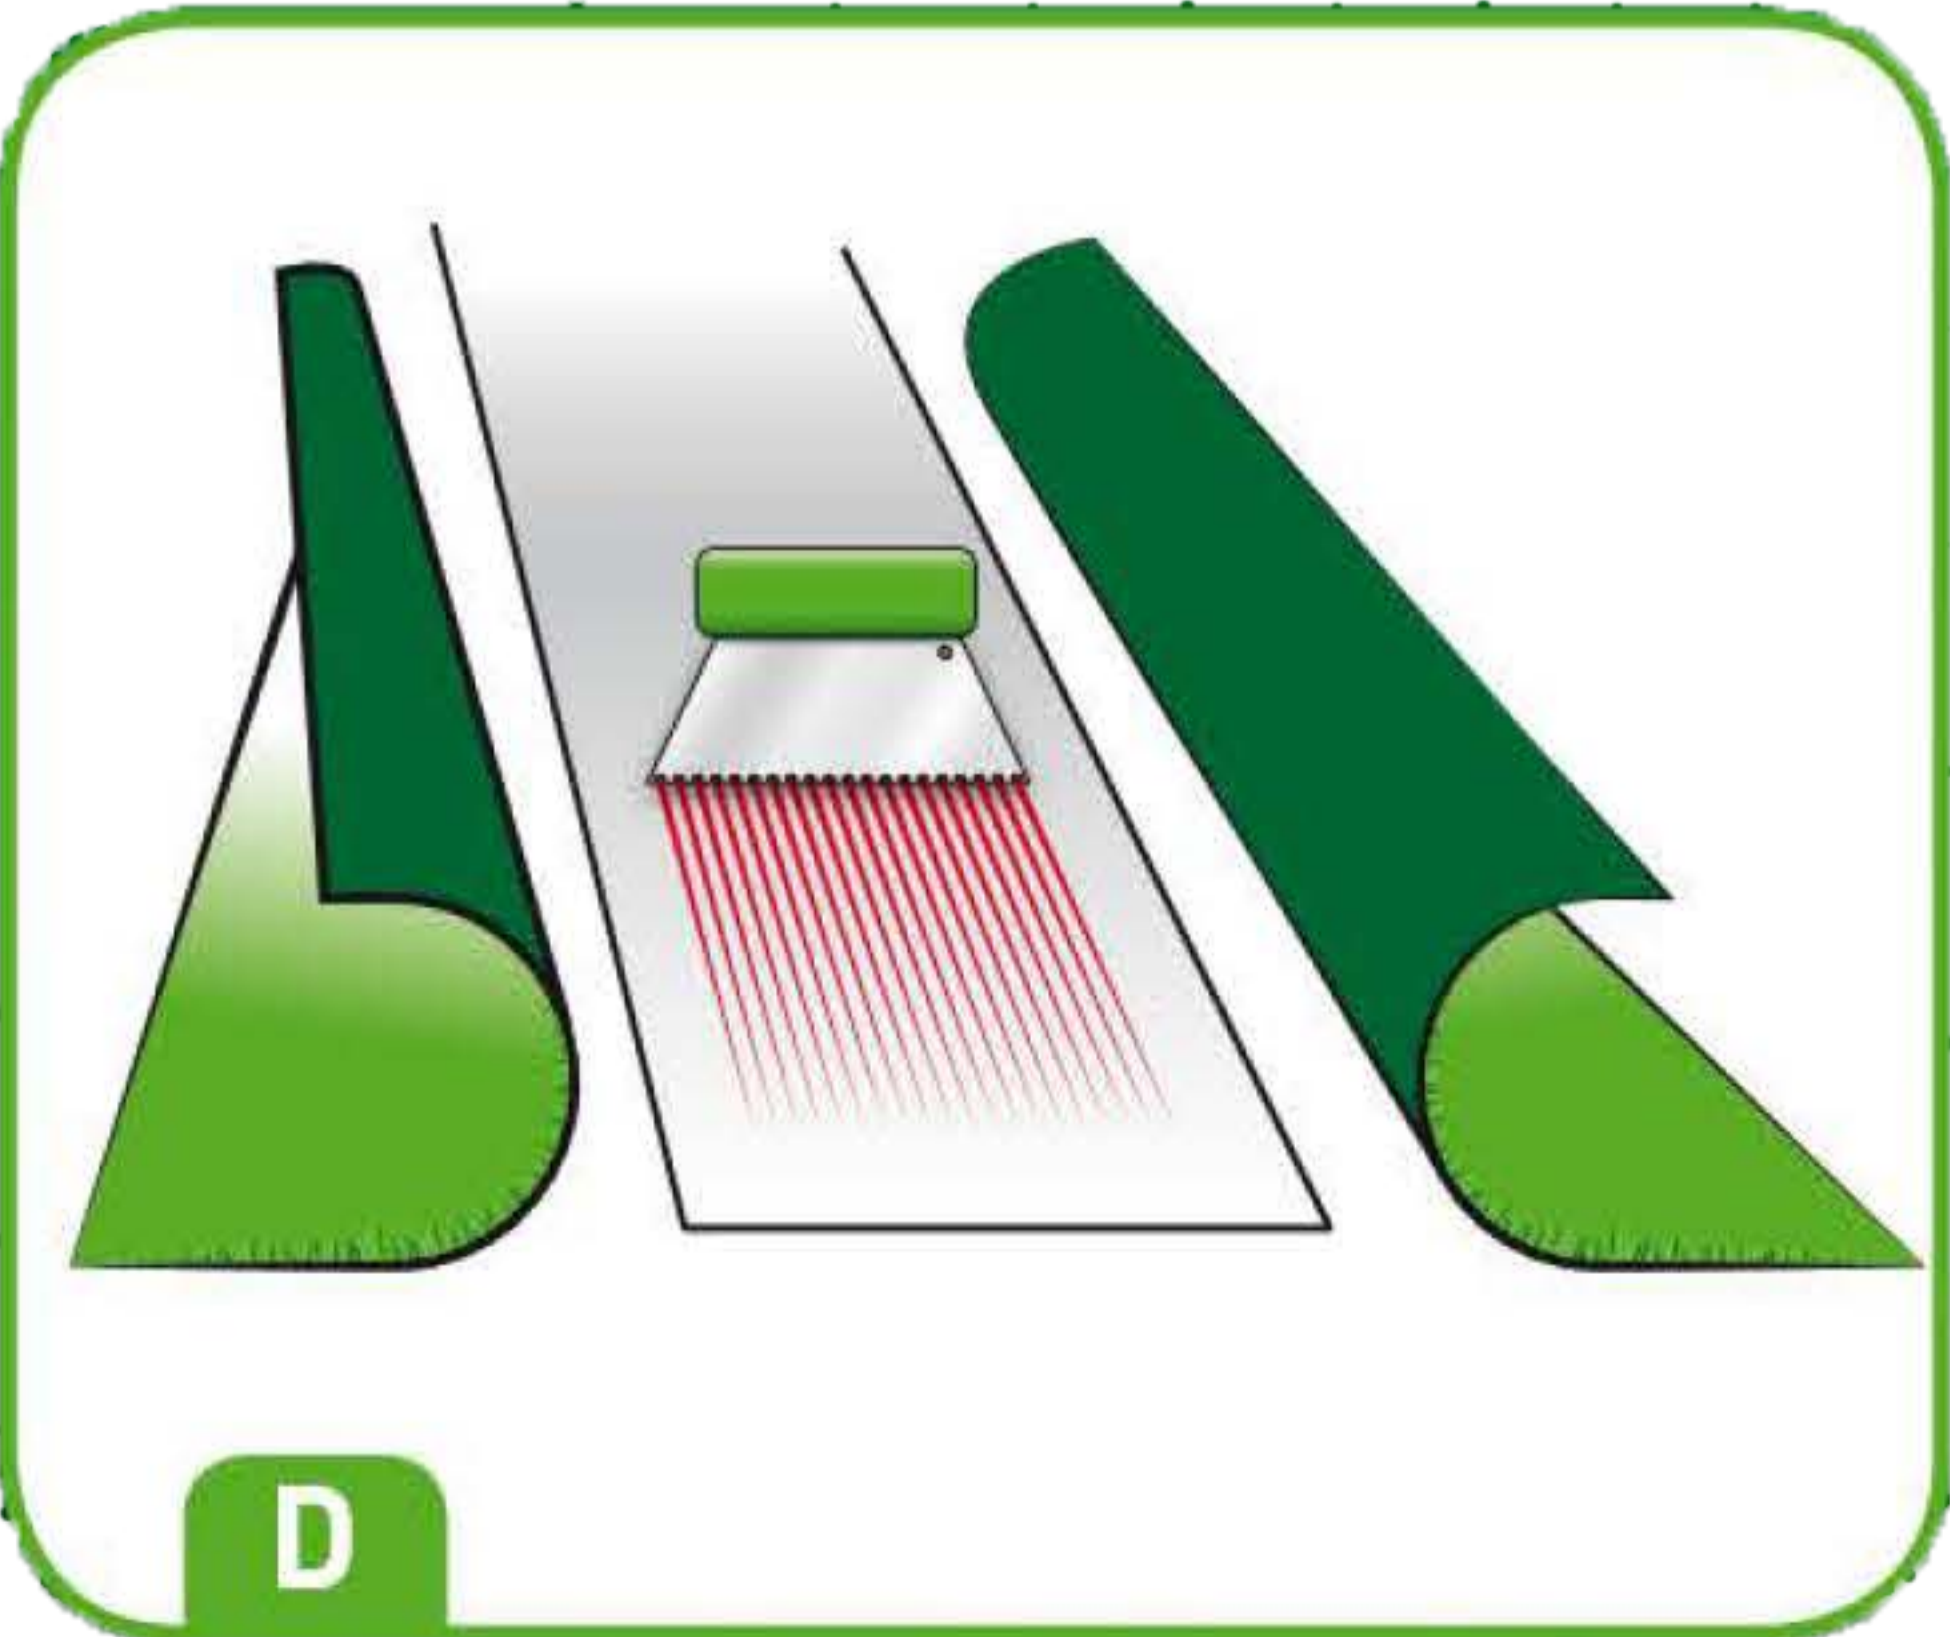

D
Apply the right amount of adhesive

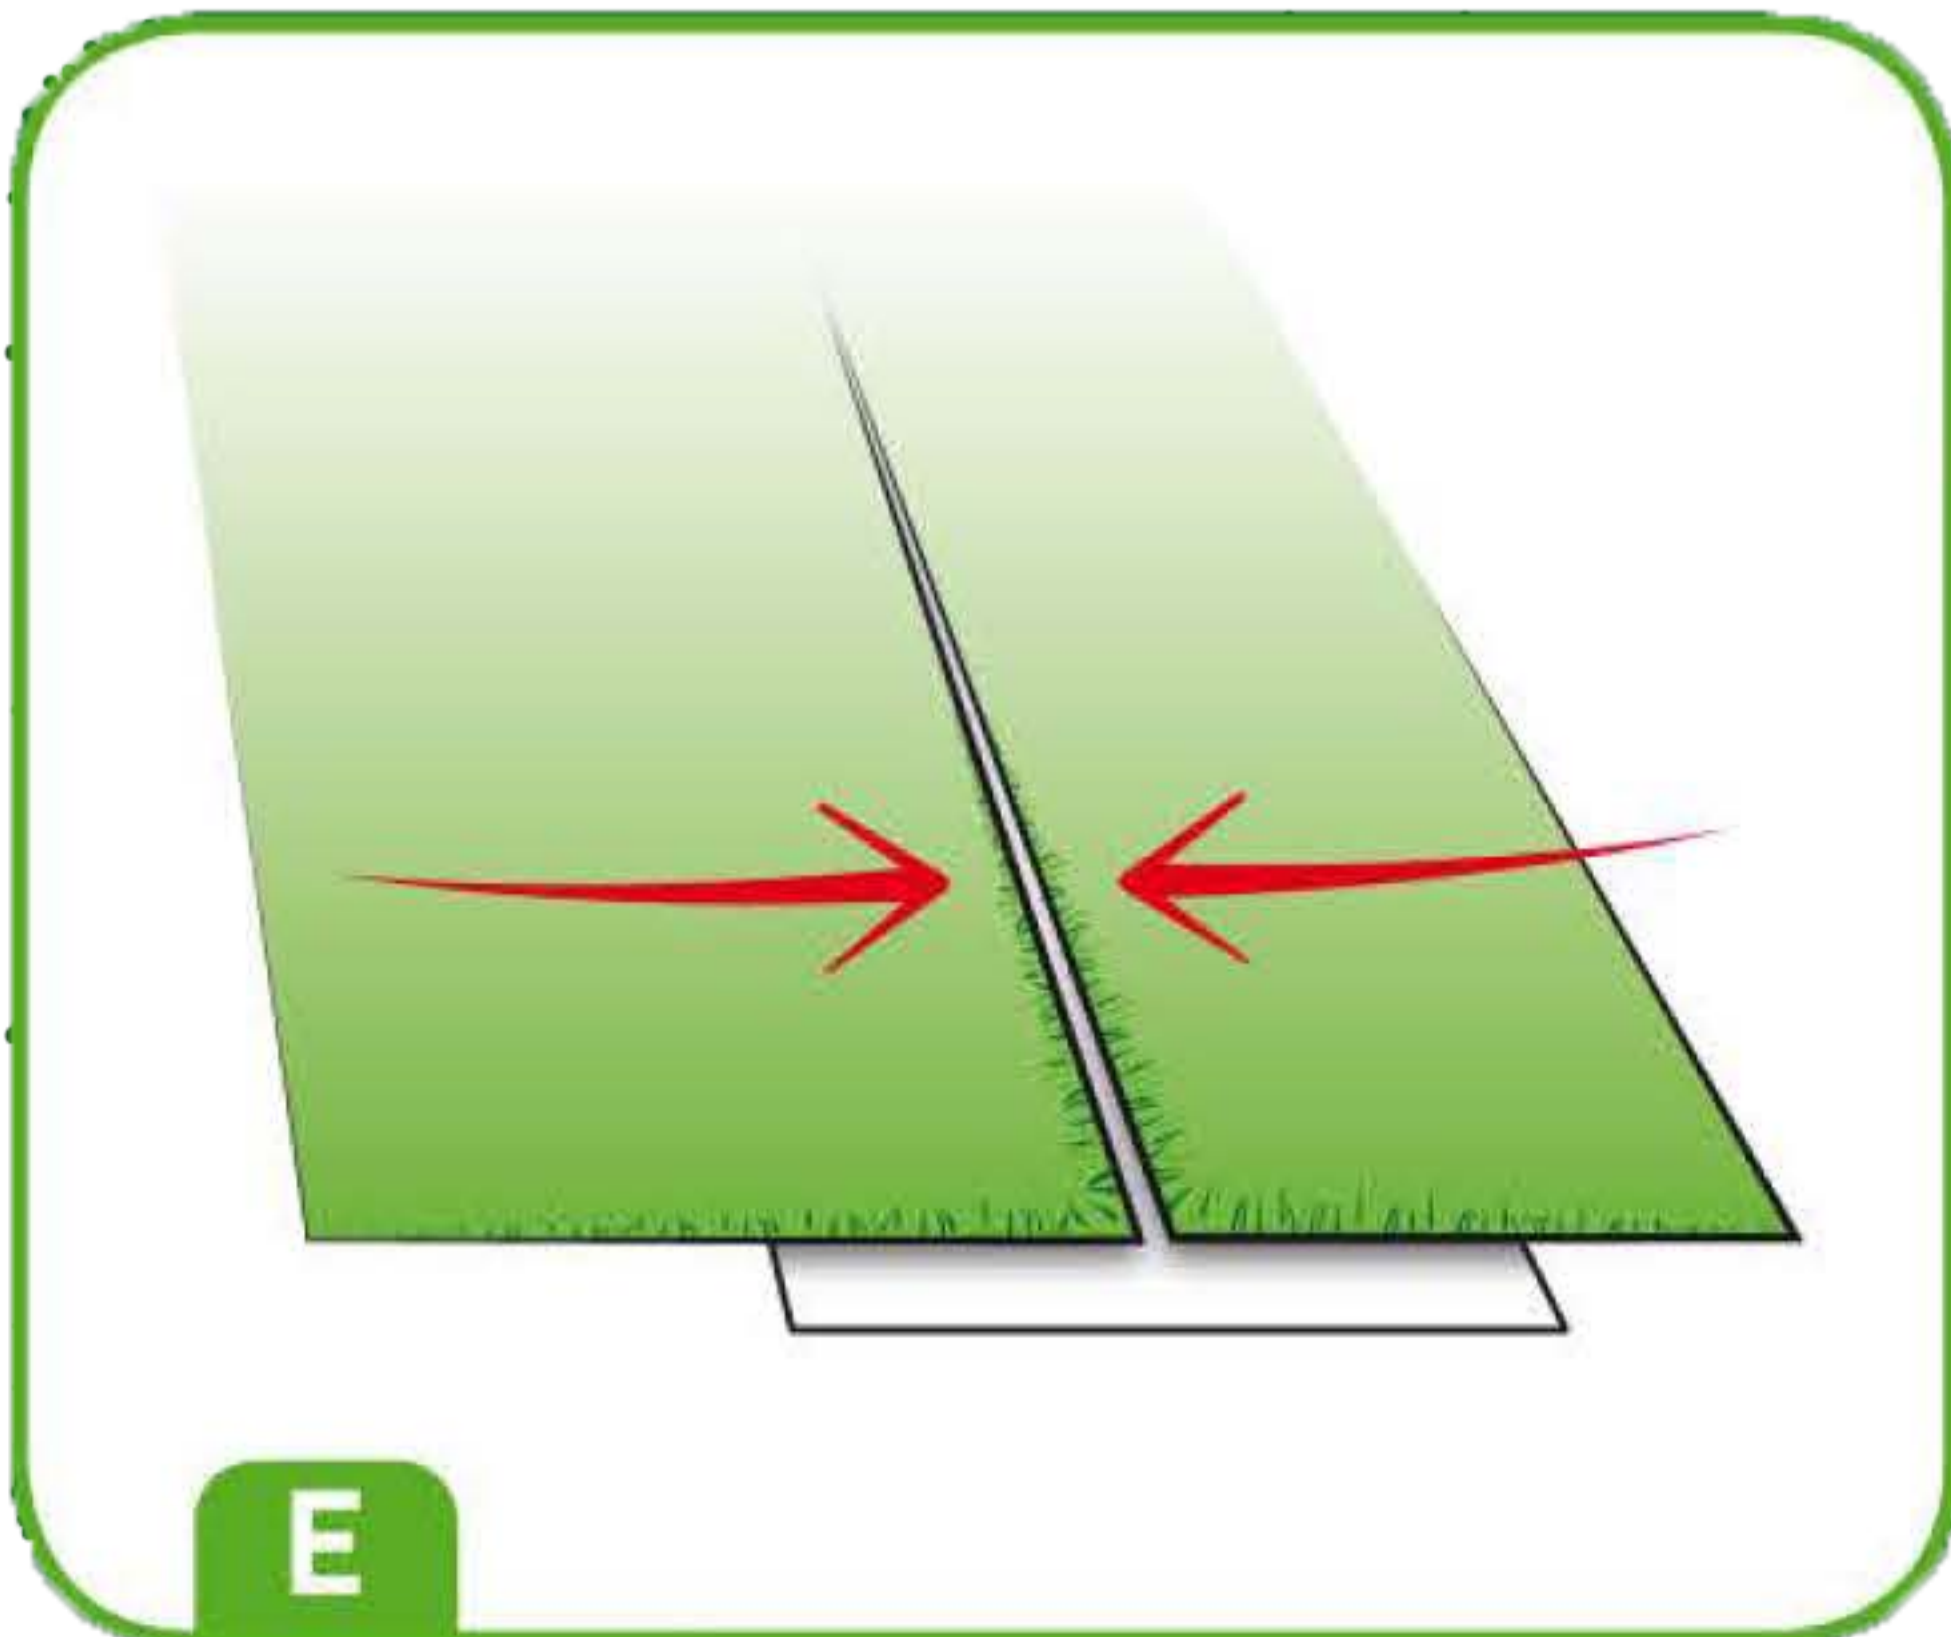

E
Press the artificial grass on to the adhesive

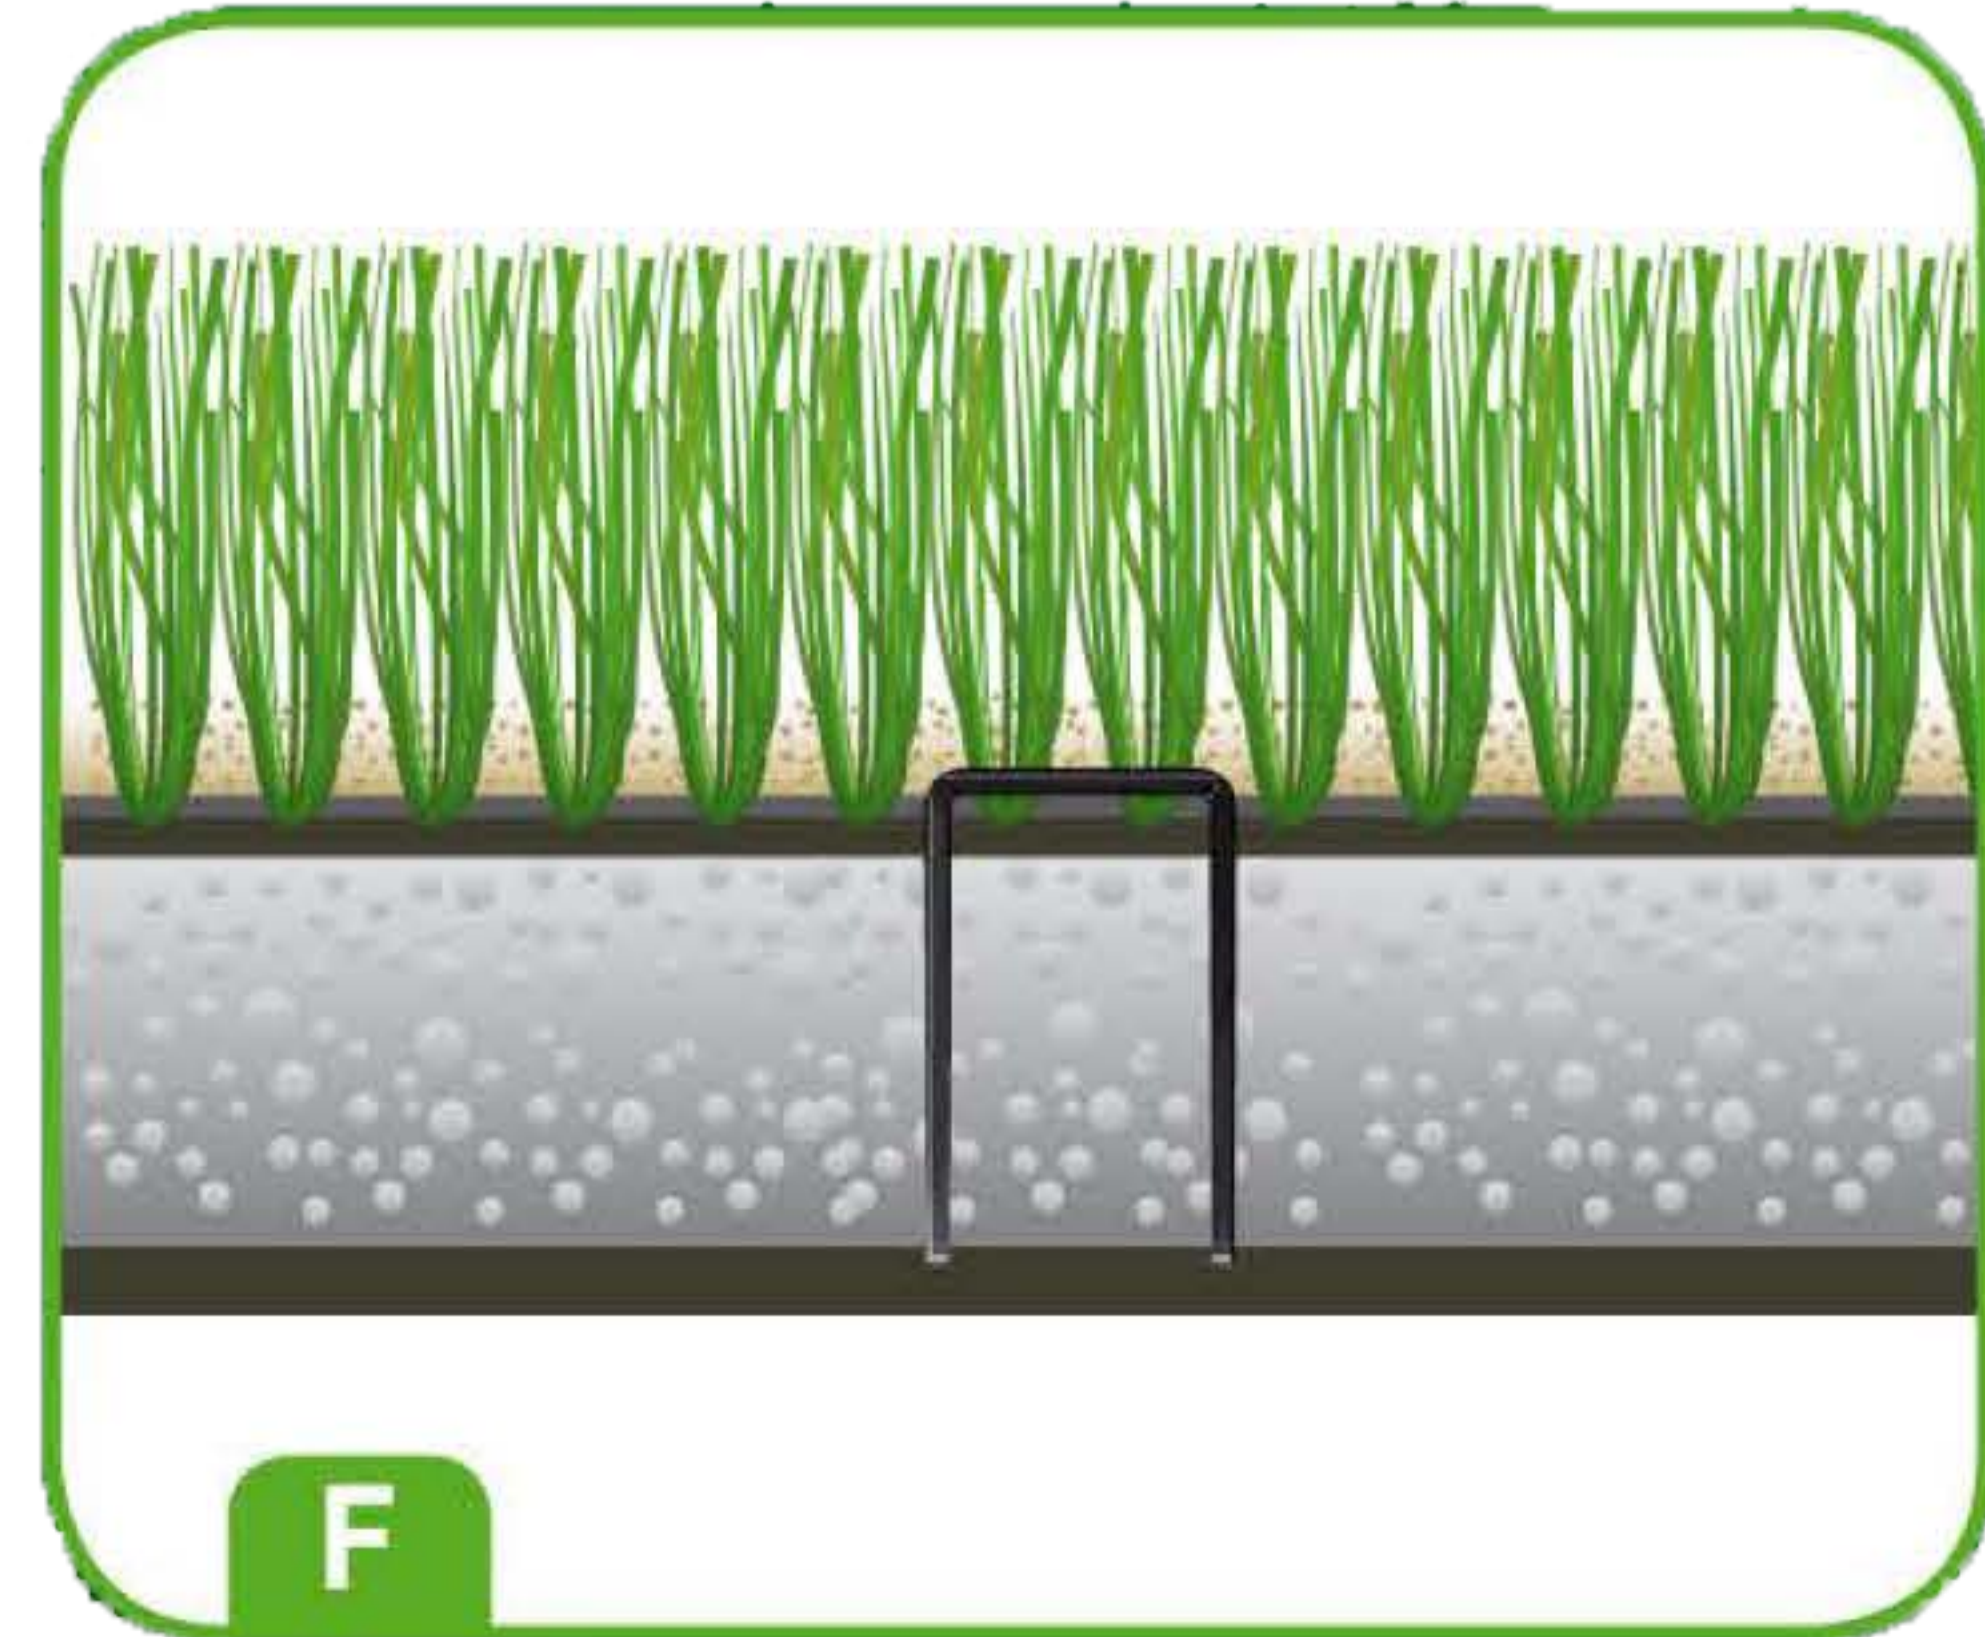

F
Fixate the artificial grass with PermaLawn turf anchors