

cayman 40 plus cayman 40 colour cayman 40 classic



tridonic, philips

SOSTITUZIONE REATTORE ELETTRONICO


N.B. Prima di svolgere qualsiasi operazione, scollegare la spina dalla rete di alimentazione. Tali operazioni devono essere svolte da Personale Qualificato.

- 1 Svitare le due viti presenti nella parte posteriore del coperchio (a) e sollevare lo sportello posizionandolo come indicato in figura (b).
- 2 Scollegare i cavi del reattore elettronico premendo con un cacciavite sui bottoni della morsettiera.
- 3 Staccare il reattore elettronico, fissato alla base da un biadesivo.

ELECTRONIC BALLAST REPLACEMENT

N.B. The following operations must be done by a qualified electrician. Before carrying out any installation it is recommended to pull out the plugs from the power supply

- 1 Unscrew the rear part of the aquarium cover (a), open it and put in the same position as shown in the picture (b).
- 2 Disconnect the electronic ballast by pressing on the buttons of the terminal board using a screwdriver.
- 3 Remove the electronic ballast, which was fixed on the lid by means of a biadhesive tape.

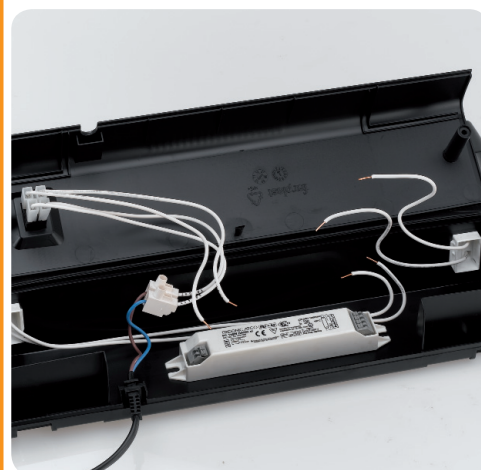

4 Posizionare il nuovo reattore elettronico nell'apposita sede (b), fissandolo con del nuovo biadesivo, precedentemente applicato sul coperchio (a).

5 Collegare i cavi provenienti dal portalampada più vicino ai morsetti 3 e 4, mentre i cavi del portalampada più lontano ai morsetti 1 e 2.

6 Versione bipolare: collegare i cavi provenienti dall'interruttore ai morsetti del reattore. Versione monopolare: collegare il cavo proveniente dalla morsettiera e quello proveniente dall'interruttore ai morsetti del reattore.

7 Riassemblare il coperchio posteriore fissandolo con le 2 viti.

4 Place the new electronic ballast on its proper housing, fixing it by a new biadhesive tape, to be stick on the lid before this operation.

5 Connect the cables coming from the nearest lamp holder to terminal board 3 and 4, the cables from the farther lamp holder to terminal board 1 and 2.

6 Bipolar version: connect the cables coming from the switch to the ballast terminal board. Unipolar version: connect the cable from the switch and the one from the terminal board to the ballast.

7 Assemble the rear cover and screw it.

