



# ACRYLIC BATHTUB INSTALLATION

Suggested Skirted Bath Install Method  
Other methods be adopted pending type of installation

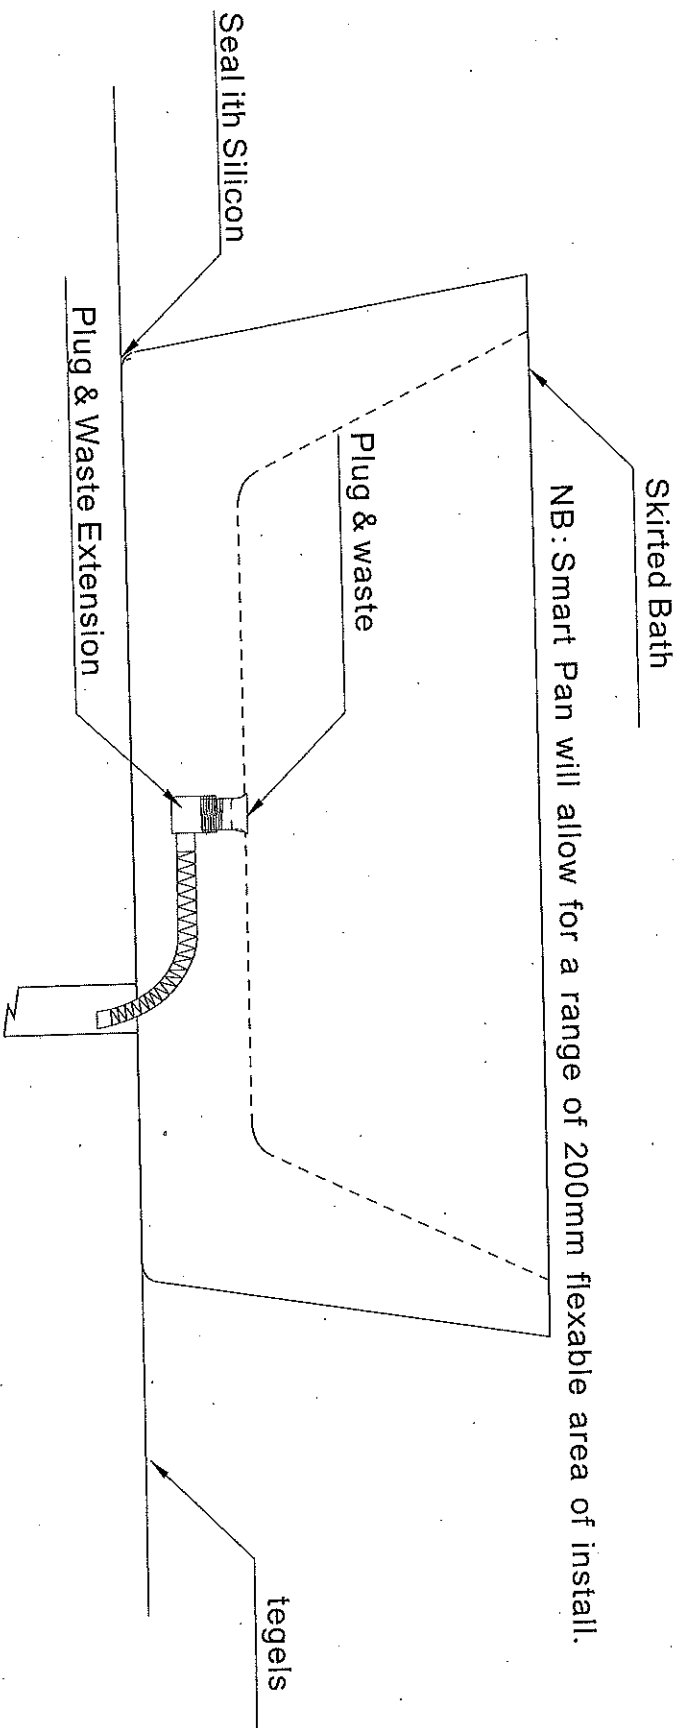


# ACRYLIC BATHTUB INSTALLATION

⚠ Assemble bath on a mat to protect against damage to bath surface.

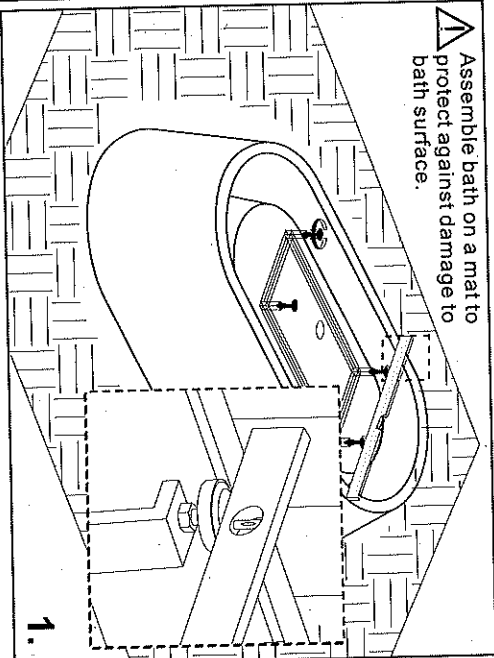


1.

• Ensure legs are adjusted in line with the base of bath.

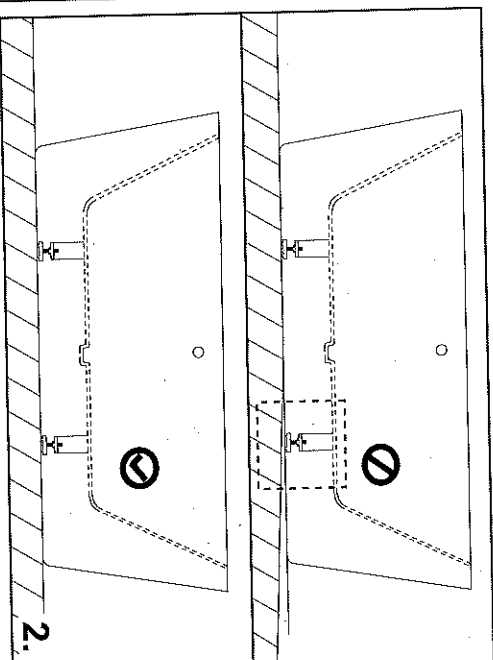

2.

• Check that bath sits flat; if required adjust legs to compensate for floor level.

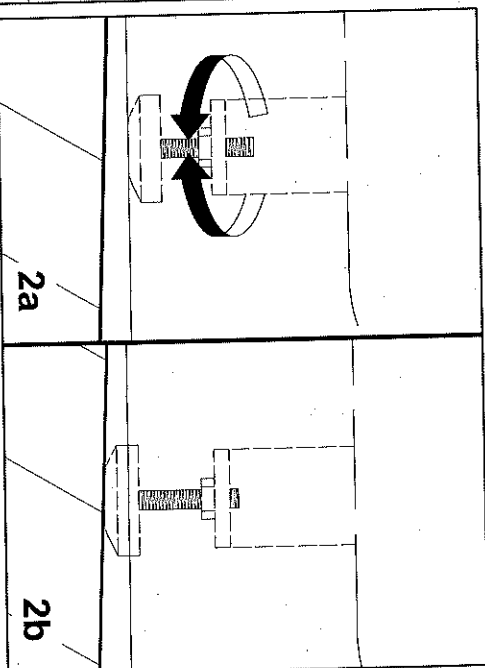


2a

2b


⚠ Before step 3 set waste connection in position.

⚠ Use appropriate silicone for surface type.

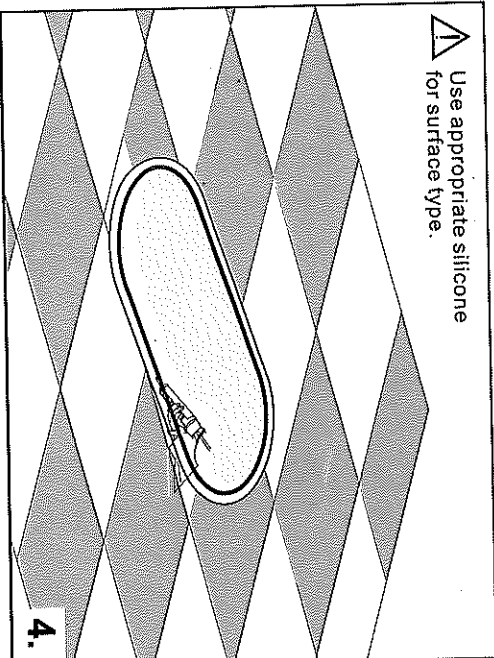

4.

• Apply a thick bead of silicone within bath outline.

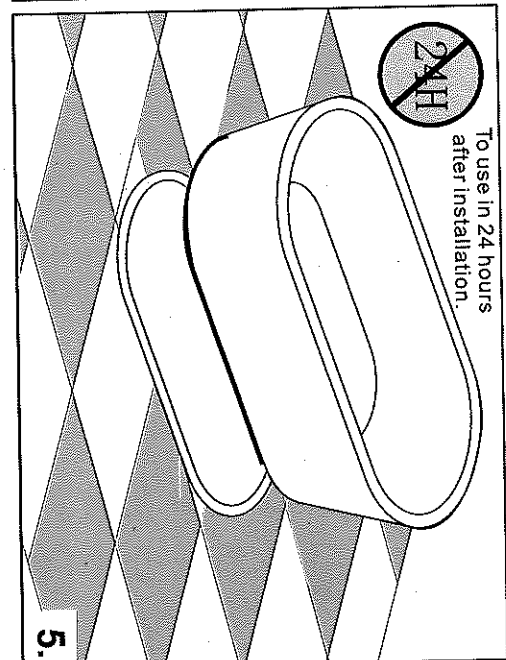

5.

• Set bath in final position.



This installation guide does not include details of waste connection; final decision about installation of waste connection should be taken by a suitably qualified person.