




Ideal Standard

# Steel Bath Installation Instruction

Hand Grip Version Bath

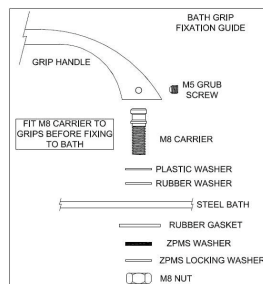

## Fixing the feet

<p><b>!</b> Important: Fully inspect the bath prior to assembly for any defects</p>	<p>1</p> <p>Place the bath with its packaging upside down.</p>	<p>2</p> <p>Slot the arm straps of the bath cradle (b) onto the lugs on the base of the bath.</p>
<p><b>WARNING</b> Never overtighten – HAND TIGHT ONLY</p>	<p>3</p> <p>Use threaded rod (c) to connect the feet, and tighten by hand.</p>	<p>4</p> <p>Turn over bath, align with the help of a spirit level by turning the screw and tighten the locknut (d). With the use of the Kaldevei sound insulation set, and provided installation is effected properly, the requirements of DIN 4109/A1 are fulfilled. Baths must also be mounted with bath anchors (not included in the scope of delivery)</p>

## Fixing the Bath and Panel

<p>1</p> <p>Measure and mark the required height, level and fix support battens to the walls</p>	<p>2</p> <p>Run a bead of silicone along the sides of the bath rims that come into contact with the walls</p>	<p>3</p> <p>Position the bath into place ensuring all sides are level</p>	<p>4</p> <p>Build a frame to required width and height to support the panel</p>
<p>5</p> <p>Position framework under bath</p>	<p>6</p> <p>Fill gap with silicone</p> <p>Measure required depth to suit thickness of panel then secure into place</p>	<p>7</p> <p>Seal gap between panel and bath rim with silicone</p>	

## Care instructions for enamelled steel baths


- After use, rinse the surface with water and wipe with a suitable cloths
- Remove light marks with a mild acid-free household detergent, soak heavier marks before cleaning.
- Calcium deposits may be avoided by removing water after use. It is important to ensure that fittings don't leak. Any calcium deposits that do occur can be removed with a 1:1 solution of vinegar and water. Do not use concentrated vinegar, powder cleaner or acidic cleaners. After cleaning, rinse the surface thoroughly.
- Use of drain cleaning product: Read the manufacturer's instructions carefully. Pour the cleaner directly into the wastepipe. Remove any cleaner that may have splashed onto the enamel immediately.

## Installation instructions for steel enamel bathtubs

- When handling steel enamel baths, care must be taken, that they are treated correctly. This applies to their transport, unpacking and installation.
- It is recommended that baths are fitted during the fine installation, i.e. after the bathroom has been tiled and that they are covered until all the building work.
- During installation, ensure that the surface below the lower edge of the bathtub does not come into direct contact with mortar or adhesive. Please read and follow the usage instructions for all materials and tools used during installation. In particular, this includes all safety requirements in the relevant manufactures instructions as well as the curing and flash-off times for multi-component mortar, adhesives and sealants.

Note: For Anti-Slip models only

- The Anti-Slip pattern shown is the Anti-Slip surface

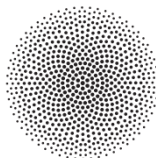

**Ideal Standard**

The Bathroom Works  
National Avenue  
Kingston upon Hull  
HU5 4HS  
England  
Telephone: (01482) 346461  
Telefax: (01482) 445886.

**CUSTOMER CARE HELPLINE**

**0870 1296085**

**CUSTOMER CARE FAX LINE 01482 499611**

**email: [ukcustcare@IdealStandard.com](mailto:ukcustcare@IdealStandard.com)**

We pursue a policy of continuing improvement in design an performance of our products.  
The right is, therefore, reserved to varify specifications without notice.

Ideal Standard (UK) Ltd.



13 DoP-14516 PH EN 14516 - CL1 + CL 2 Baths for domestic purposes

CA - DA [www.idealstandard.com/dop](http://www.idealstandard.com/dop)

