


90mm Shower Tray Waste Installation and Assembly Instructions

1. Remove upper assembly, and seals from the bottle trap.
2. Re-assemble on to the Shower Tray as shown in diagram below.
The upper seal is optional to fit and if preferred, because of aesthetics, can be left out.
3. To clean the trap, remove the dome then twist and remove the inner section. Wipe clean, re-assemble and fit.

NB: A suitable quality silicone sealant should be used on all surfaces against the Shower Tray.

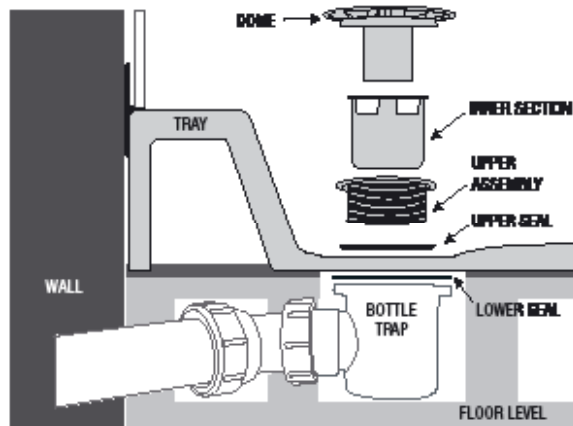

Twyford Bathrooms Registered Office
Geberit House
Edgehill Drive
Warwick
Warwickshire
CV34 6NH

UK technical Helpline
Telephone: 01926 516800
Email: technical@geberit.co.uk
Website: www.twyfordbathrooms.com


Part of the Geberit Group

226BES

90mm Shower Tray Waste Installation and Assembly Instructions

1. Remove upper assembly, and seals from the bottle trap.
2. Re-assemble on to the Shower Tray as shown in diagram below.
The upper seal is optional to fit and if preferred, because of aesthetics, can be left out.
3. To clean the trap, remove the dome then twist and remove the inner section. Wipe clean, re-assemble and fit.

NB: A suitable quality silicone sealant should be used on all surfaces against the Shower Tray.

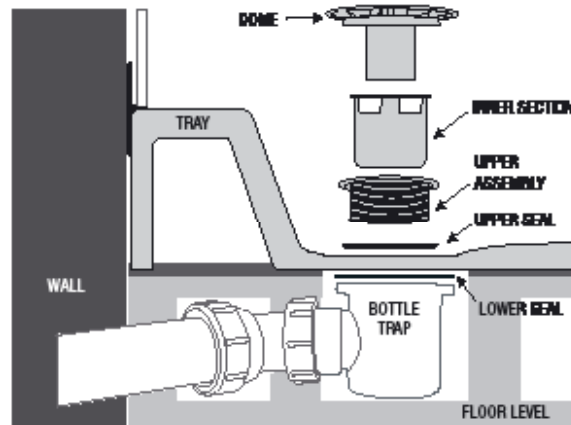

Twyford Bathrooms Registered Office
Geberit House
Edgehill Drive
Warwick
Warwickshire
CV34 6NH

UK technical Helpline
Telephone: 01926 516800
Email: technical@geberit.co.uk
Website: www.twyfordbathrooms.com

Part of the Geberit Group

226BES