




Electric Wood Venetian Blind Fitting Instructions

MOUNTING HARDWARE



Mounting
Bracket



Screw #1




Valance Clip



Centre Support Screw #2



Screw #3



Valance Return
Clip

(Note: Centre support supplied for
blind width 100cm or over)


TOOLS RECOMMENDED FOR INSTALLATION:



Metal tape
measure



Pencil



Drill



Philips Head
Screwdriver




Step
Ladder




Drill Bit
(1/8" diameter)


MOUNTING INSTRUCTIONS

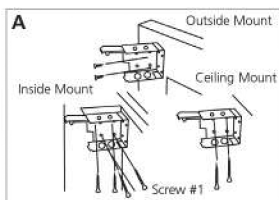


A. Brackets should be placed at the width of blinds headrail 6mm past each end. The bracket doesn't necessarily need to touch the inside face of the window frame.

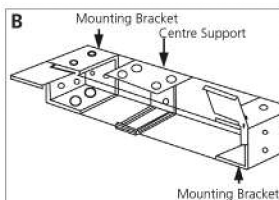


B. Align the top of the centre support bracket with the top of the mounting bracket before installation. Install with the bigger flap of the centre support bracket on the top side and clear of the slat ladder positions.

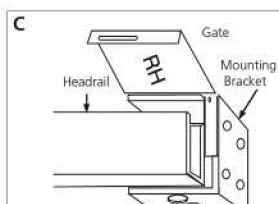


C. Push rail into brackets. Then press gate to close brackets.

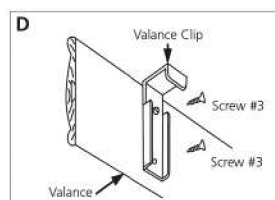

D. Screw valance clips onto back side of the valance with screws provided (Screw #3)

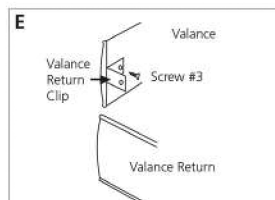

E. For Outside Mount: Screw one end of the valance return clip onto the valance using Screw #3. Align the edge of the valance return with the valance. Screw the other end of the valance clip onto the valance return.

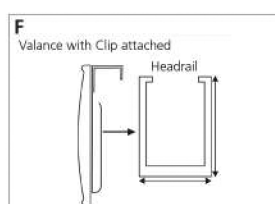

F. Hook valance clip with valance attached onto the top of the headrail.

RECOMMENDED CARE FOR WOODEN BLINDS

1. When opening or closing blind only raise or lower the blind when the slats are in the horizontal (open) position. Larger blinds must be raised or lowered in stages. Raising or lowering in one singular motion places excessive stress on the mechanism, strings and brackets. Do not force the cord when tilting the blinds, this may cause the mechanism to break.
2. It is not recommended that wooden blinds be fitted in damp or wet environments as warpage may occur.
3. Dust blinds regularly.

4. If the blind becomes damp or wet, wipe down immediately. The slats should be horizontal (open) and the blind released and lowered completely. Allow to dry by removing the blinds from the brackets and lay down on a hard surface. Do not place in direct sunlight as excessive heat may cause the slats to warp. If the blinds are excessively wet do not place the blinds on a surface that may absorb any stain.

5. This wooden blind does not require any oiling.

If you have any doubts about the care or maintenance of your wooden blind do not hesitate to contact your nearest supplier for advice.