

Perfect Fit Roller Blind System


Measuring & fitting instructions




PERFECT FIT

Assembling your Perfect Fit Frame

Slide top of curved section into the rest of the frame

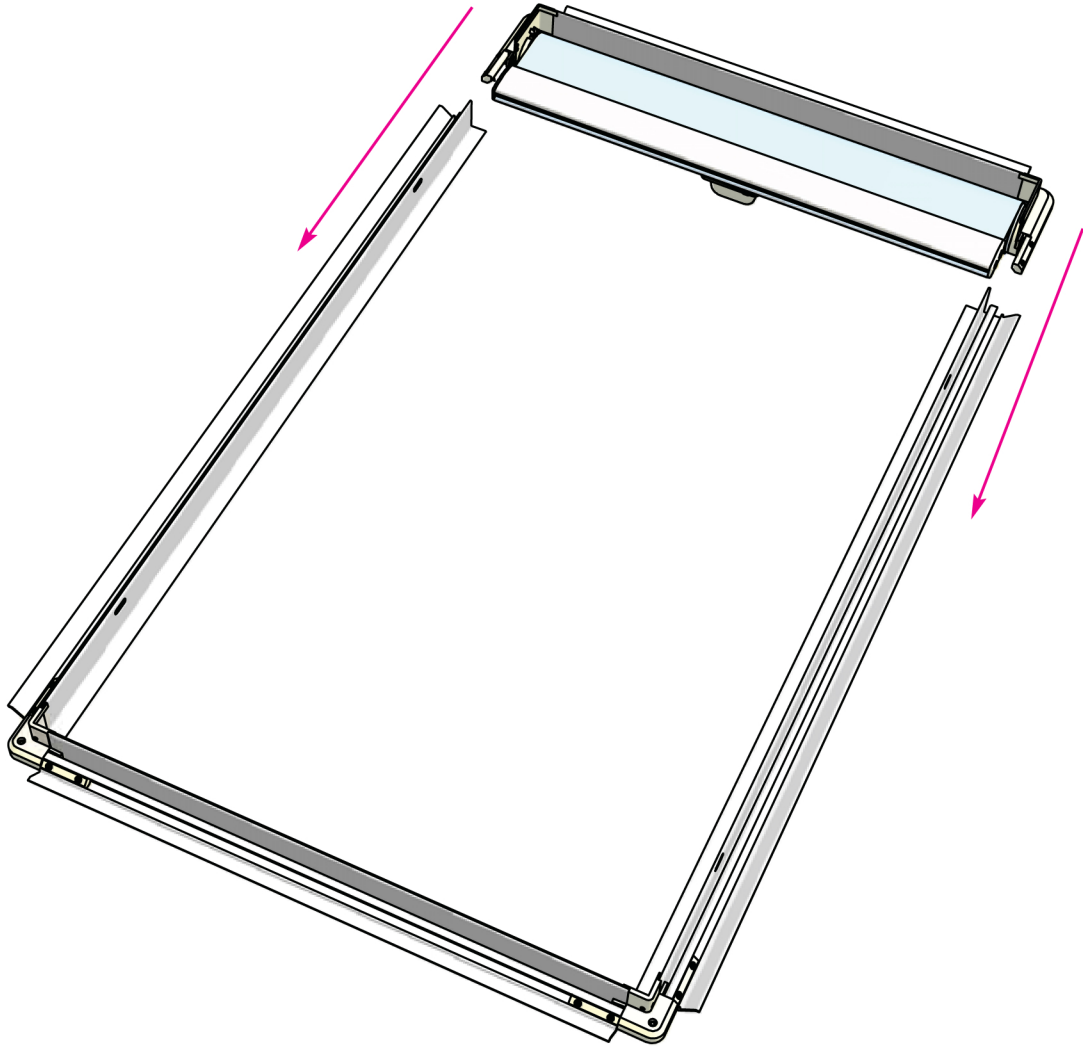

Fix securely with the two screws on each joint.

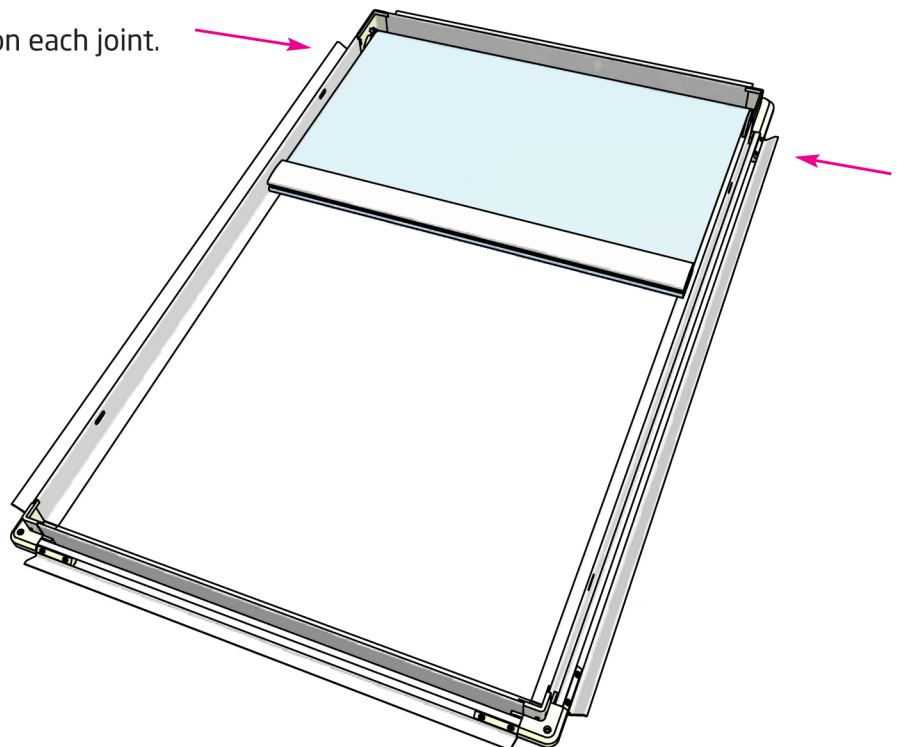


PERFECT FIT

Fitting Perfect Fit

To ensure all brackets are in the correct position for fitting (85mm from beading) use a credit card in the corner of the window to locate the bracket position.

For ease of insertion, use a lubricant in the form of washing up liquid on the base of each bracket.

Line up bracket with edge of card

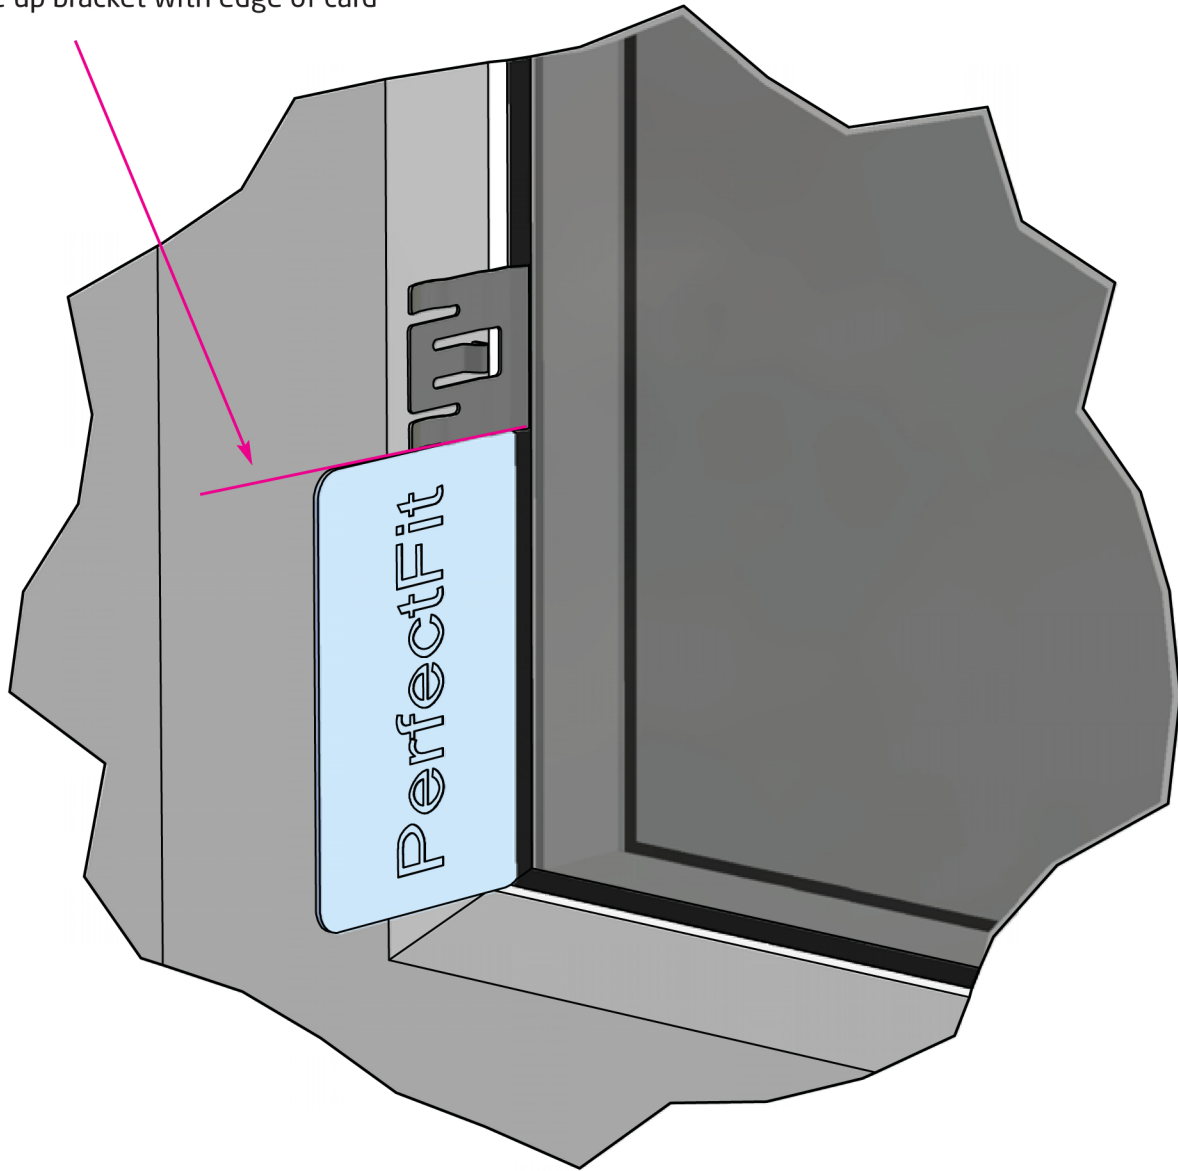


Line up the bracket with the base or top of the credit card (depending on which corner of the window you are working) and fit the bracket by pushing it between the glass and the rubber seal of the window.


Repeat for all 4 corners of the window, and intermediate brackets (if required) then clean excess lubricant prior to fitting the frame.

Fitting the Frame

Line up the holes in the frame with the brackets

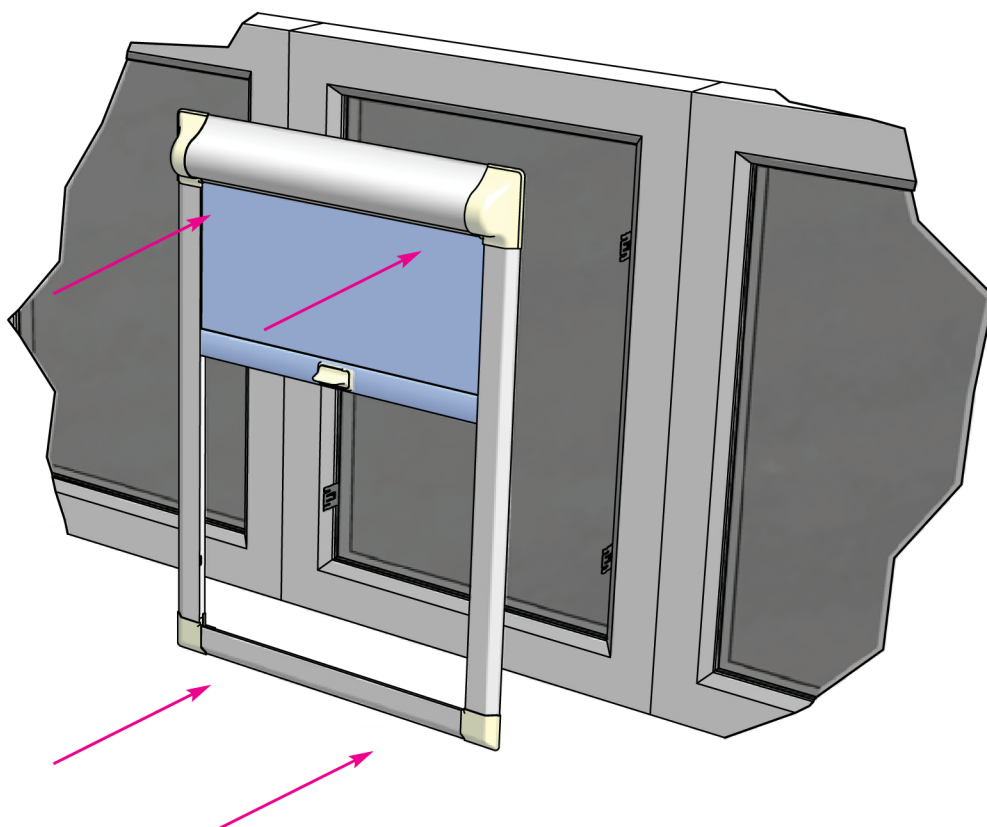

Firmly press the frame down onto each bracket.
Fit one side at a time for an easier installation.

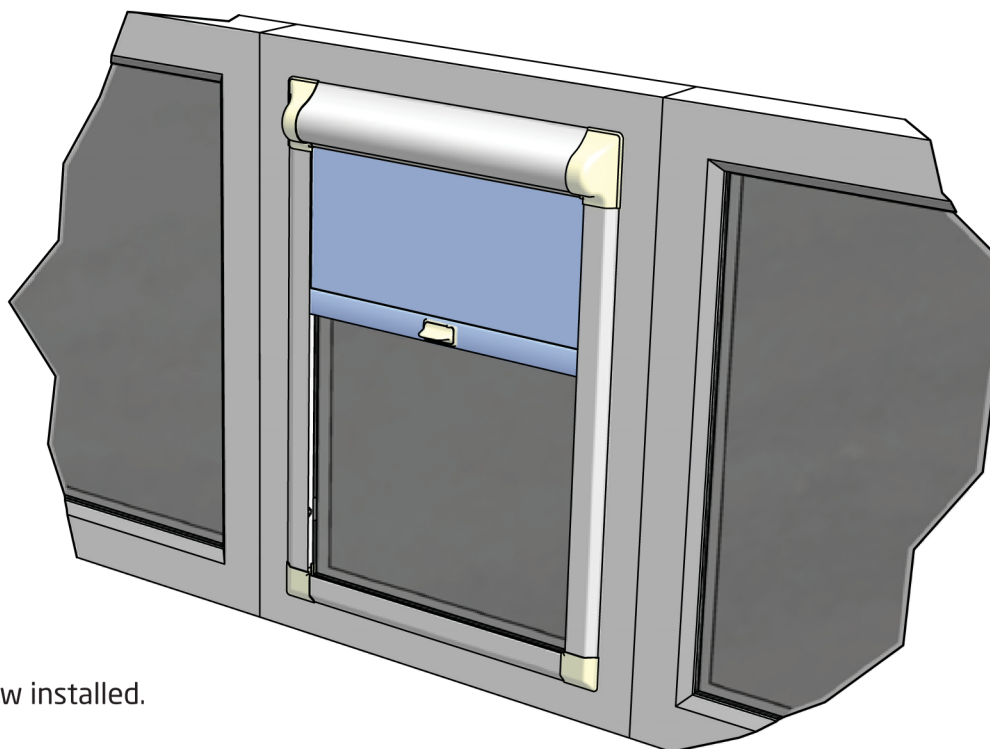

Your blind is now installed.

PERFECT FIT


Re - Tensioning (If required)

1. Pull down the blind (do not manually push back up as it needs to raise naturally with the tension)


2. Insert a 4mm allen key or a power tool, or an angled allen drive attachment (R9002 as shown) into the hexagon slot in the control end

3. Turn 'anti-clockwise' to add tension until the blind starts to lift.

4. Tension is complete when the blind is fully opened. (i.e. all the fabric is wrapped around the roller)

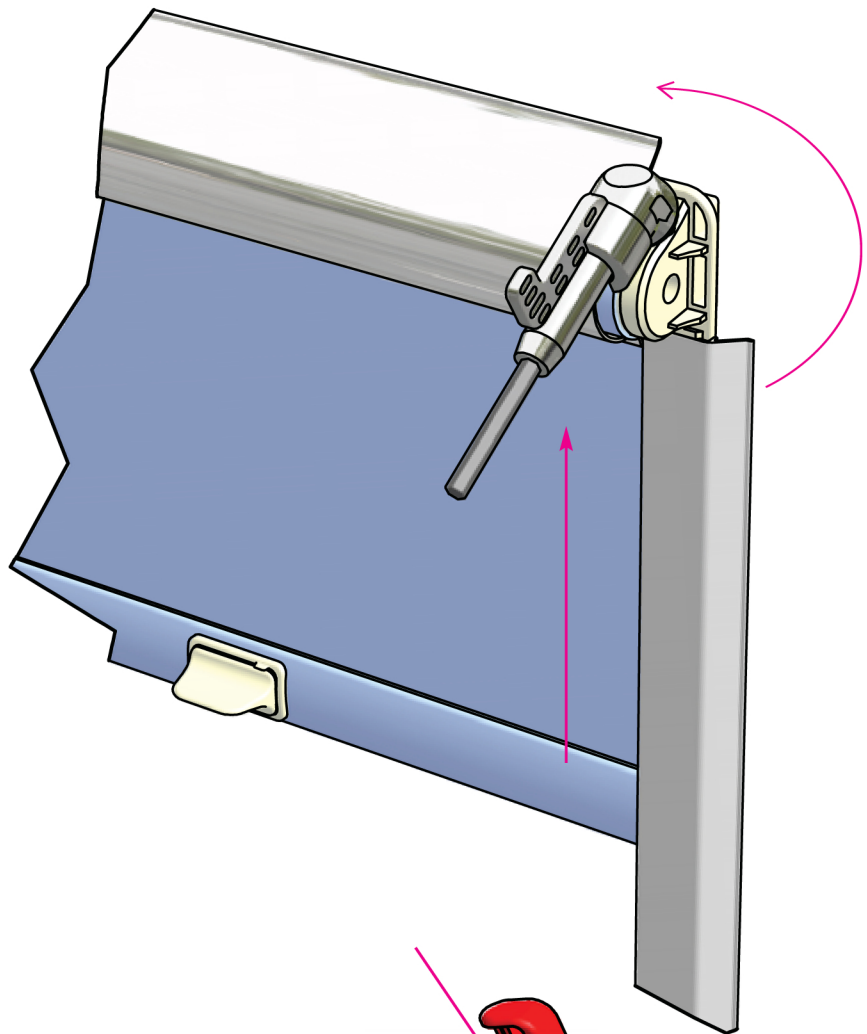

5. Push the worm retaining clip into the hexagon slot to secure the tension.

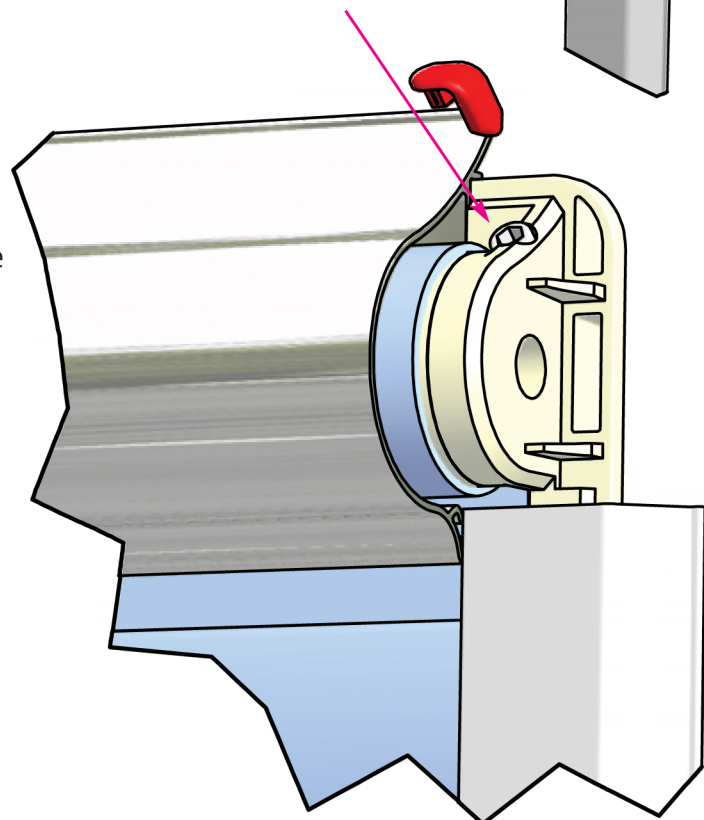

PERFECT FIT