

MEGANE SCENIC RENAULT RPM FITTING INSTRUCTIONS.

The RPM unit has been programmed with the Engine management code for your vehicle. Follow the instructions below to install:-

Refit the engine ECU

Drop the BCH unit (see Fig1) down on to drivers pedals.

Connect the black GRND wire from the RPM unit to Black & Orange wire on BCM connector PP1 (see Fig 2)

Connect the red IGNITION wire from the RPM unit to Cream & Purple wire on the connector PP1 (see fig 2)

Connect the Yellow wire from the RPM unit to wire on Pin 16 on BCM connector PE3 (see fig3). Then cut the wire from this pin before the newly made joint (see fig 4).

To stop the Immobiliser light flashing on the dashboard cut wire from pin 20 on connector PE3 (see fig 3)

FIG 1

BCH UNIT

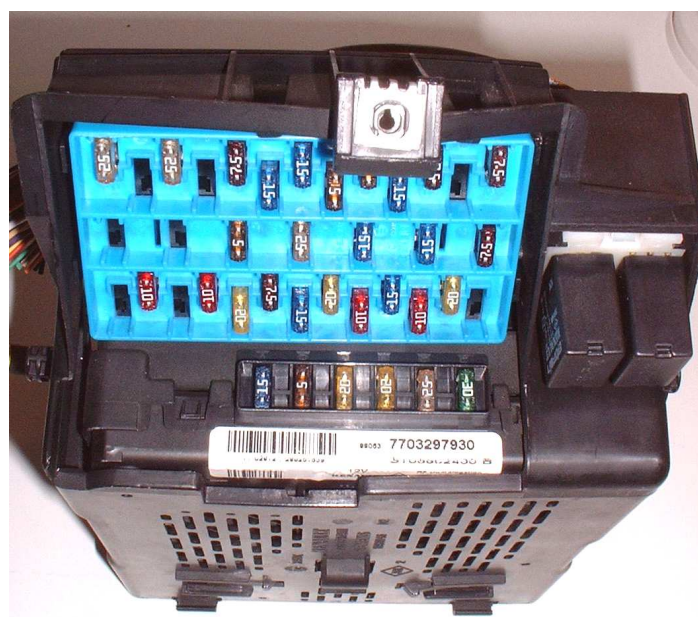


FIG 2 **BCH CONNECTOR PP1**

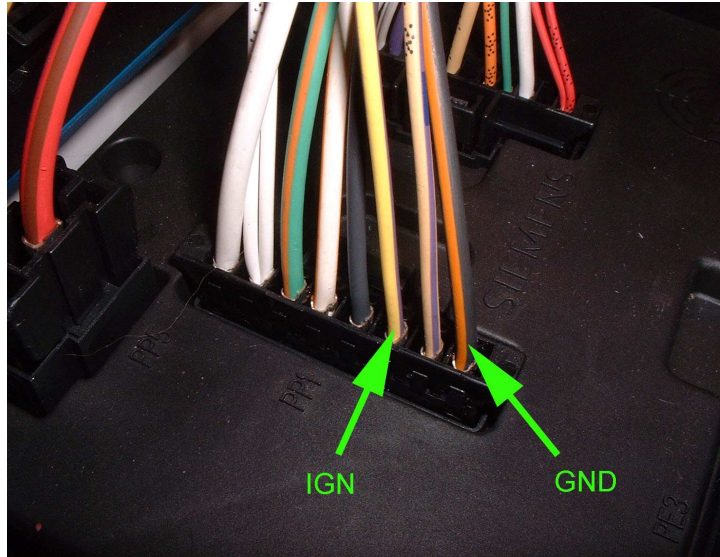


FIG 3 **BCH CONNECTOR PE3**


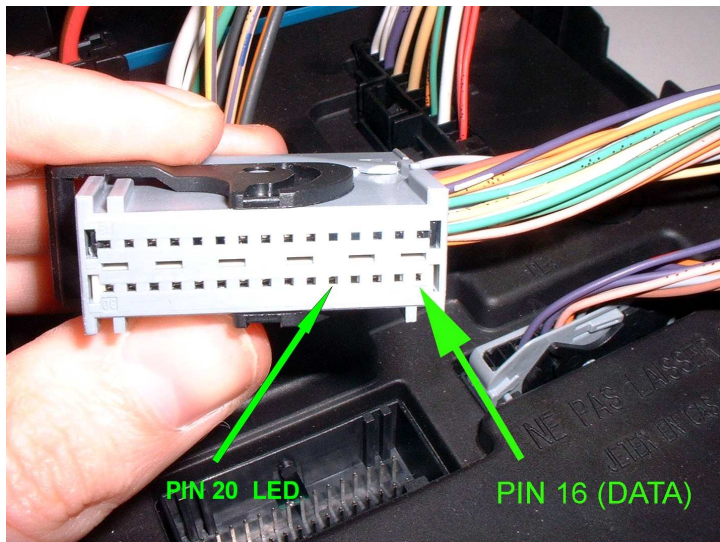


FIG 4 **BCH DATA WIRE SCHEMATIC**

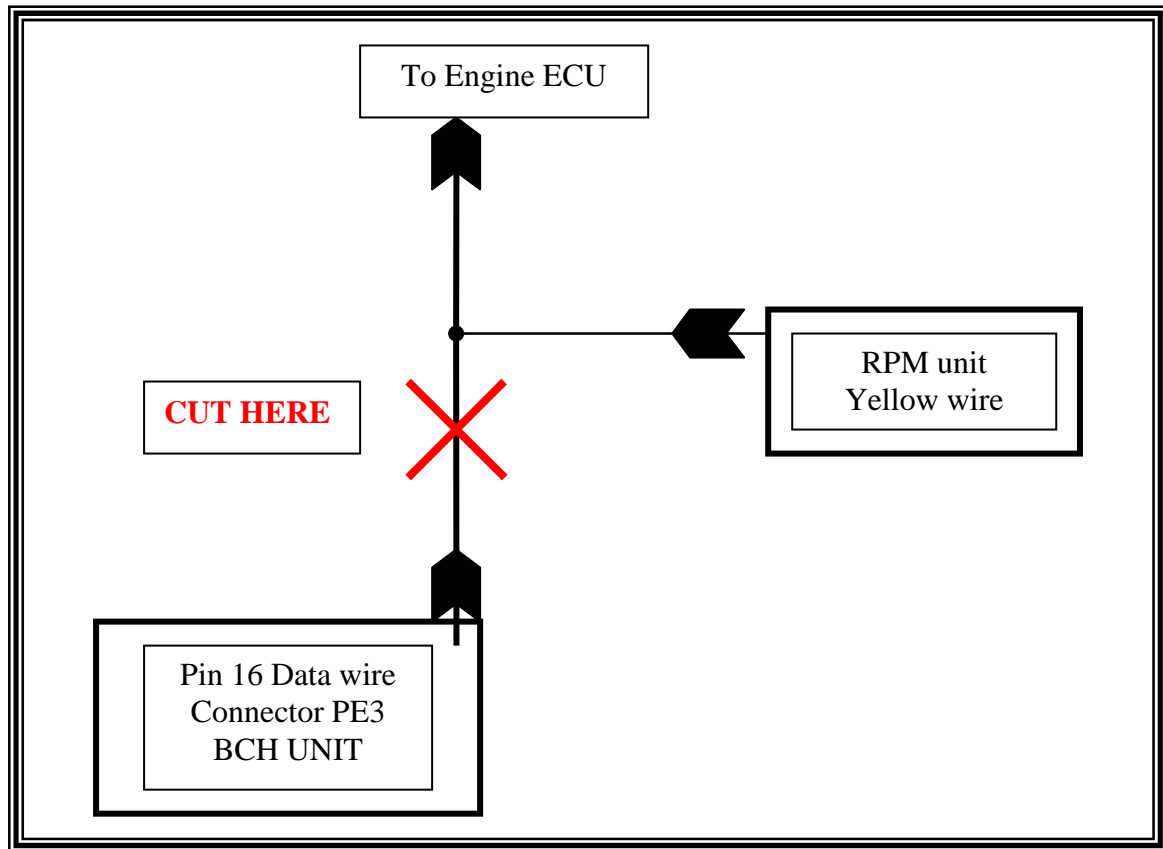

WHEN THE RPM UNIT HAS BEEN INSTALLED CUT THE SIGNAL WIRE FROM THE UCH UNIT AS ABOVE AND THEN START THE VEHICLE