



Anziehvorschrift für Zylinderkopf		764.703		
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a Mercedes-Benz		
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		Das Original

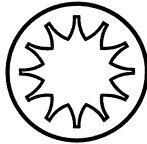

819.956
M 12 x 119

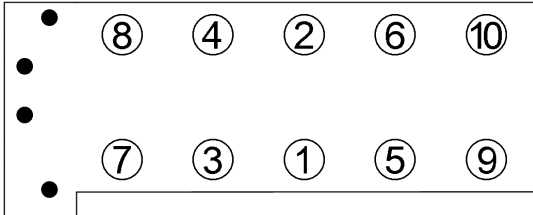

Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ➤	M 12 55 Nm 90° 90°	M 8 bis 1984 * 25 Nm	M 8 ab 1985 * 21 Nm
---	-------------	-----------------------------	----------------------------	---------------------------

Zeichenerklärung / Explanations / Explication / Explicacion

✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Mot. 102.910/919/920/921/922/924/938/939/961/
962/963/965
1797 ccm / 1997 ccm
190 E 1.8, 190 E (W 201)
200 (W 123)

6/1980>12/1985

ElringKlinger AG, Max-Eyth-Str.2
72581 Dettingen / Erms. Tel. 07123/724 601

764.703