

SAMUEL HEATH


Product Data Sheet

V651-D Cross Top (Pair)

V651-L Luxe Roundel (Pair)



V651-D

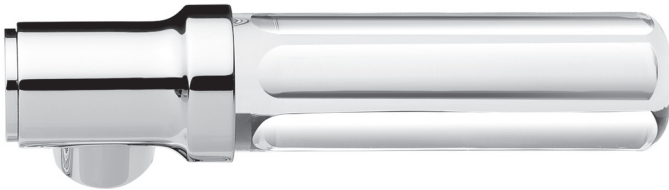


V651-L


For more technical information visit:
www.Samuel-Heath.com

Fitting Instructions

1.

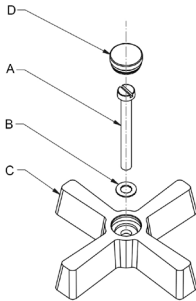

2.

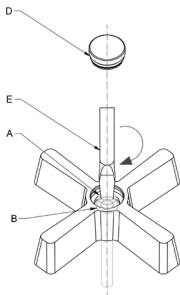

1. Remove screw (A) and washer (B) from spindle.

2. Position cross top (C) to tap body and assemble anti-rotational washer (B) followed by screw (A).

Note: It is imperative that the anti-rotational washer is installed

3. Levers are also available (Assembly method is identical). Position lever at the preferred angle.

4. Using a flat edge screwdriver (E), tighten the screw (A) down against the anti-rotational washer (B) to its fullest extent.

5. Insert the indice (D) to complete assembly.


SAMUEL HEATH
Head Office and Customer Service

Leopold Street
Birmingham
England
B12 0UJ


T: +44 (0)121 766 4200
F: +44 (0)121 772 3334

Info@samuel-heath.com
www.samuel-heath.com

1.

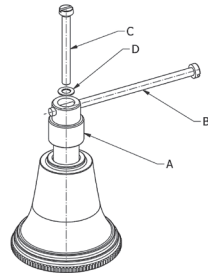

2.

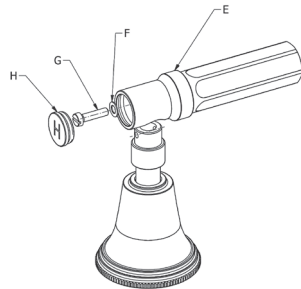

1. Place adapter (A) onto the side valve spindle.

2. Align the adapter (A) using assembly guide screw (B) to mimic the desired position of the Luxe Lever.

3. Carefully remove screw (B) and secure adapter using screw (C) and washer (D).

4. Attach Luxe Lever (E) to adapter (A) using screw (G) and washer (F).

5. Conceal screw using indice (H).

US Customer Service
Federal I.D. No. 58-1504682
www.samuel-heath.com

8-40293DL
Issue: C