


Wire Bundle Mounting Size 0

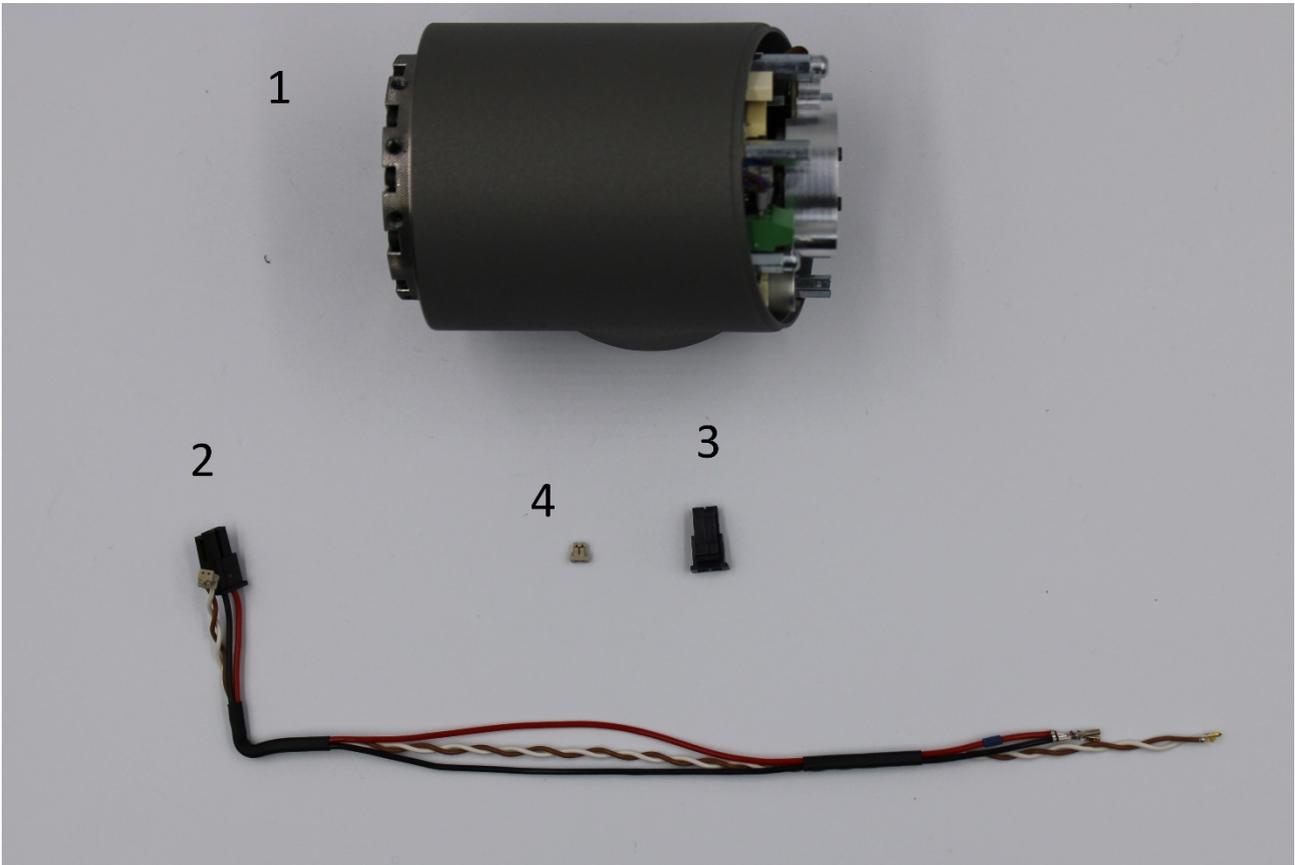

You need:


1: 1 pcs. Size 0 Joint

2: 1 pcs. Wire bundle for Size 1(2 different types) – **Included in wire bundle kit**


3: 1 pcs. Power Connector – **Included in wire bundle kit**

4: 1 pcs. Communication Connector – **Included in wire bundle kit**


Note: Always use an ESD wristband when working with UR joints and electronics

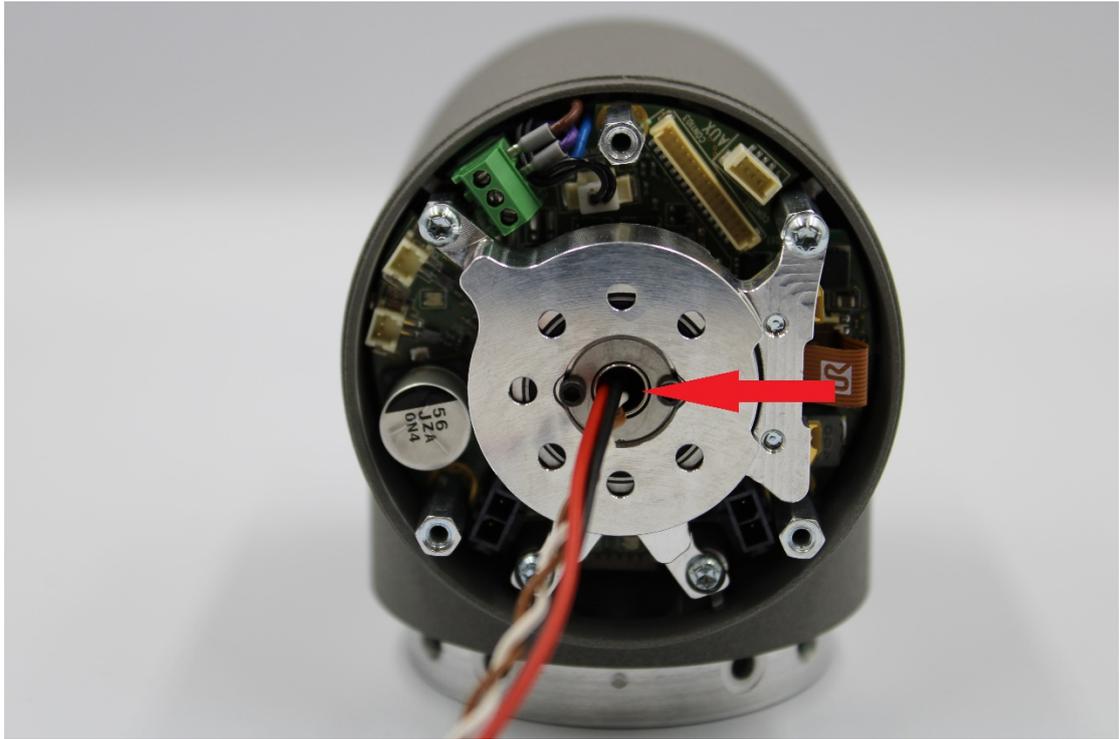


Pull the wire bundle through the joint. Start with the naked wires from the joint PCB site

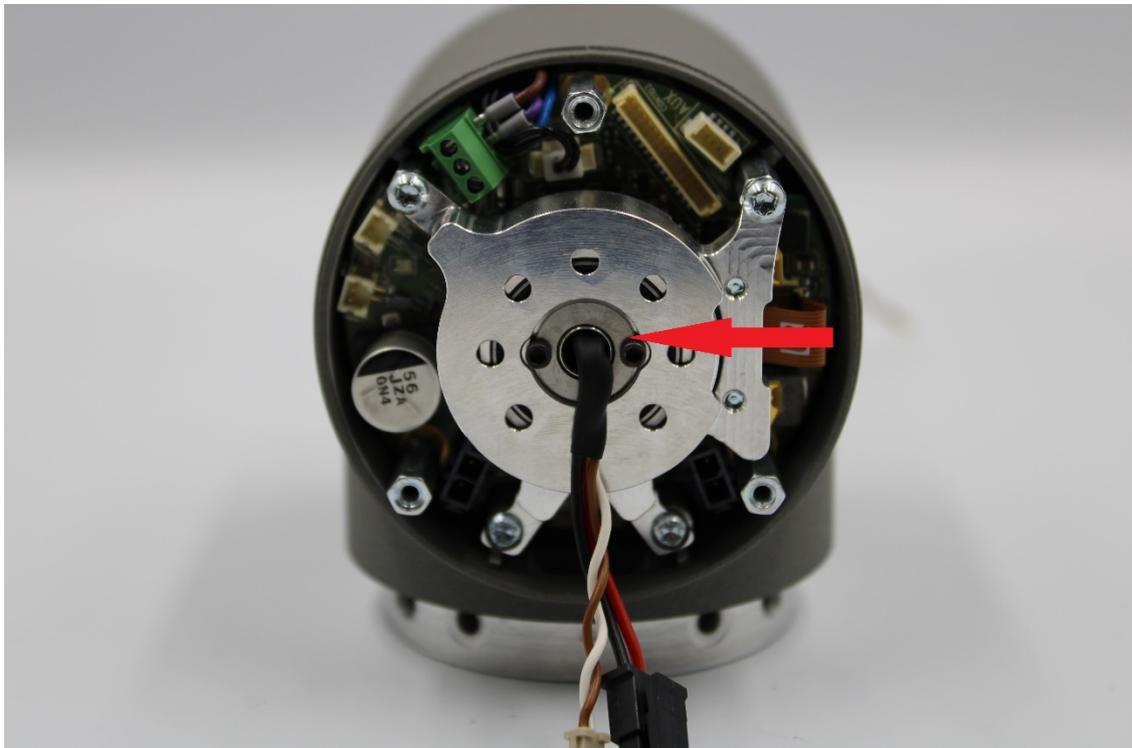


Pull it all the way through until the bend on the wire bundle.

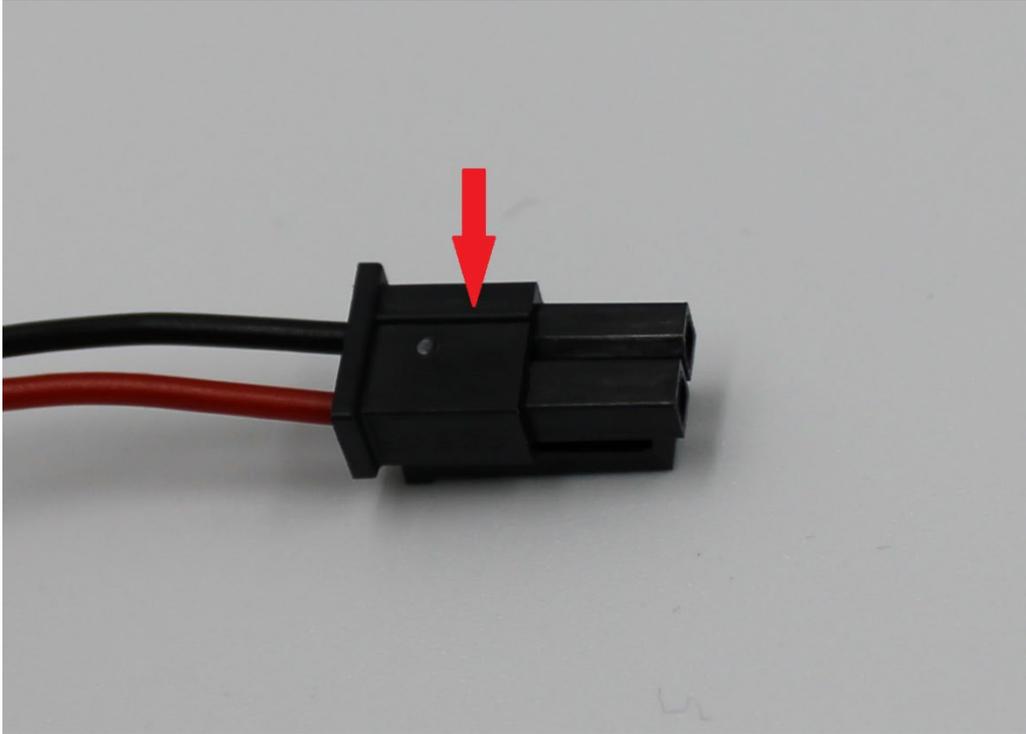

Mount the red and black power wires in the connector. The black wire on side with the black line on the connector.

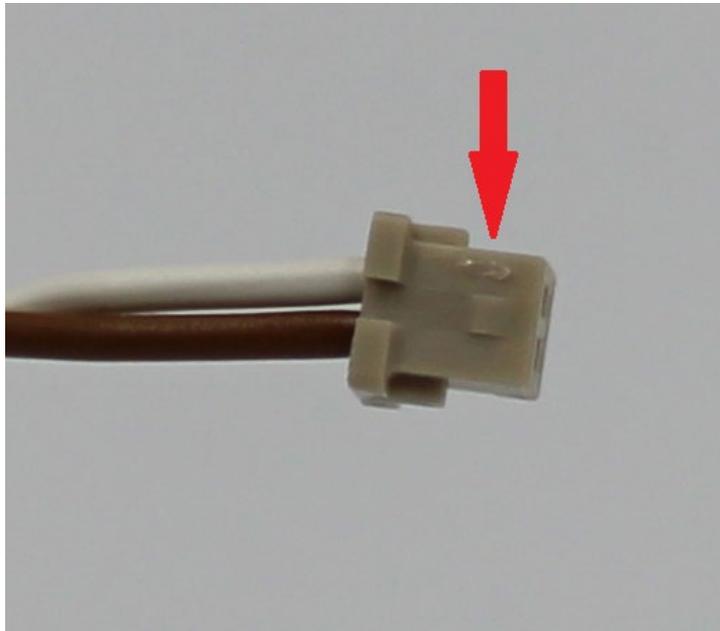

Mount the white and brown communication wires in the connector. The white wire on the side with the mark line on the connector.

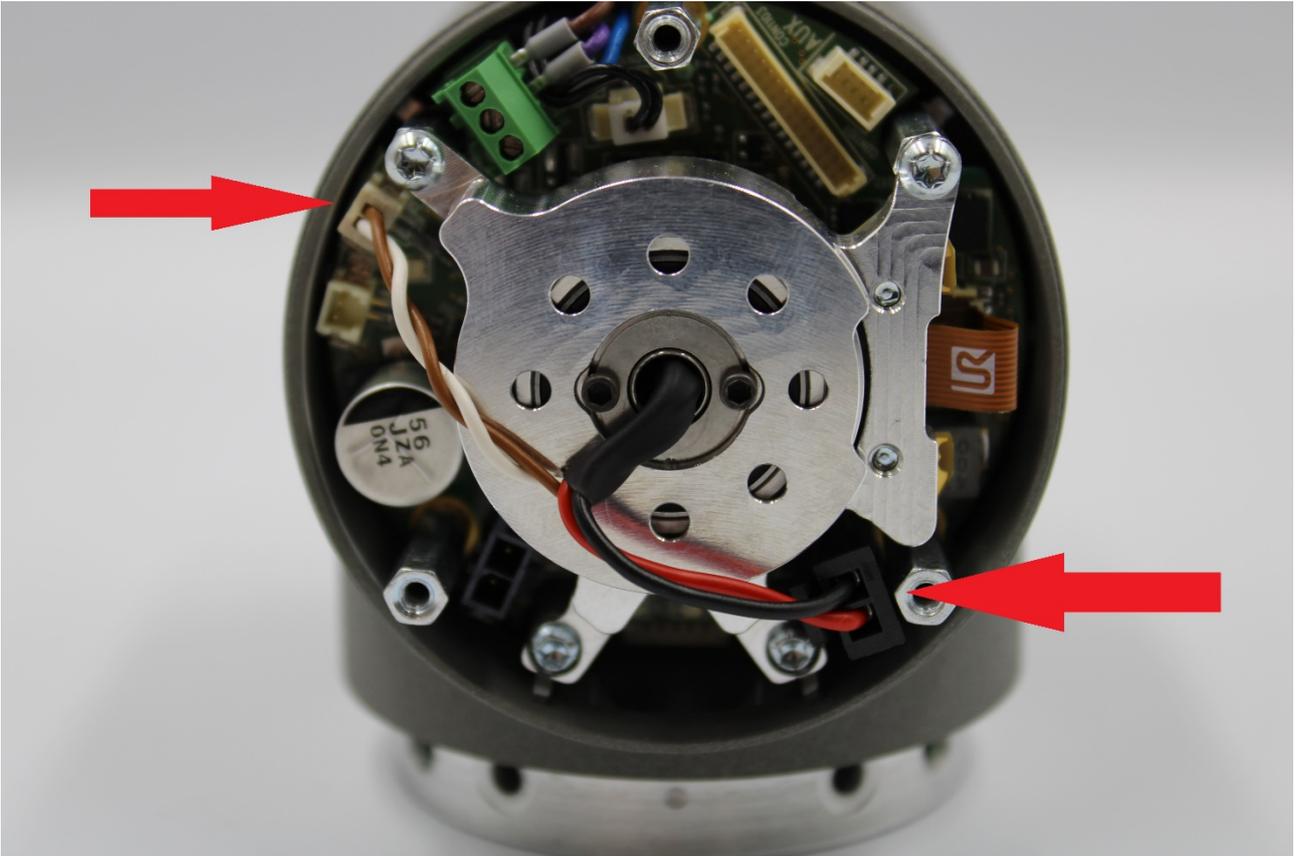

Mount the connectors on the joint PCB as shown.

The wire bundle has now been mounted and the joint is ready to be mounted.