


Wire Bundle Mounting Size 1

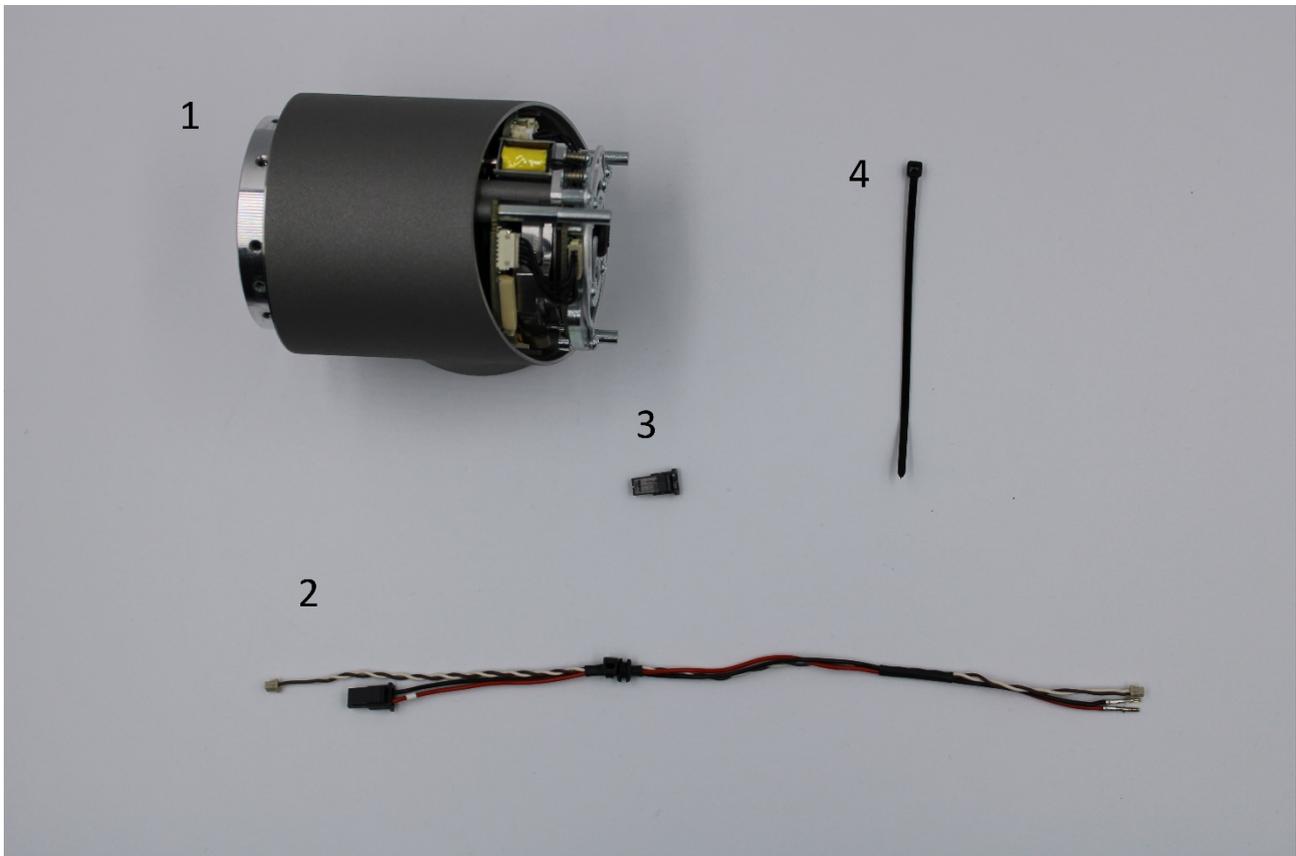

You need:

1: 1 pcs. Size 1 Joint

2: 1 pcs. Wire bundle for Size 1(3 different types) – **Included in wire bundle kit**


3: 1 pcs. Power connector – **Included in wire bundle kit**

4: 1 pcs. Cable tie – **Included in wire bundle kit**


Note: Always use an ESD wristband when working with UR joints and electronics




Pull the wire bundle through the joint. Start with the naked wires from the output flange site.

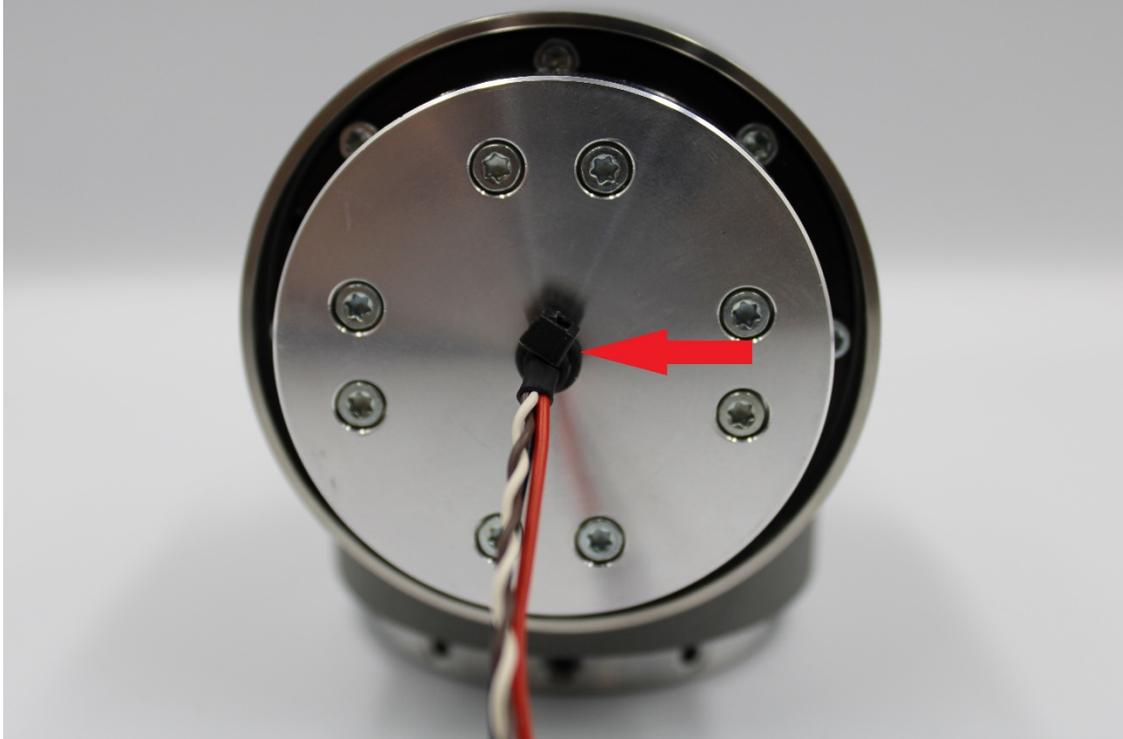


Pull it all the way through until the grommet is set firmly in the output flange.

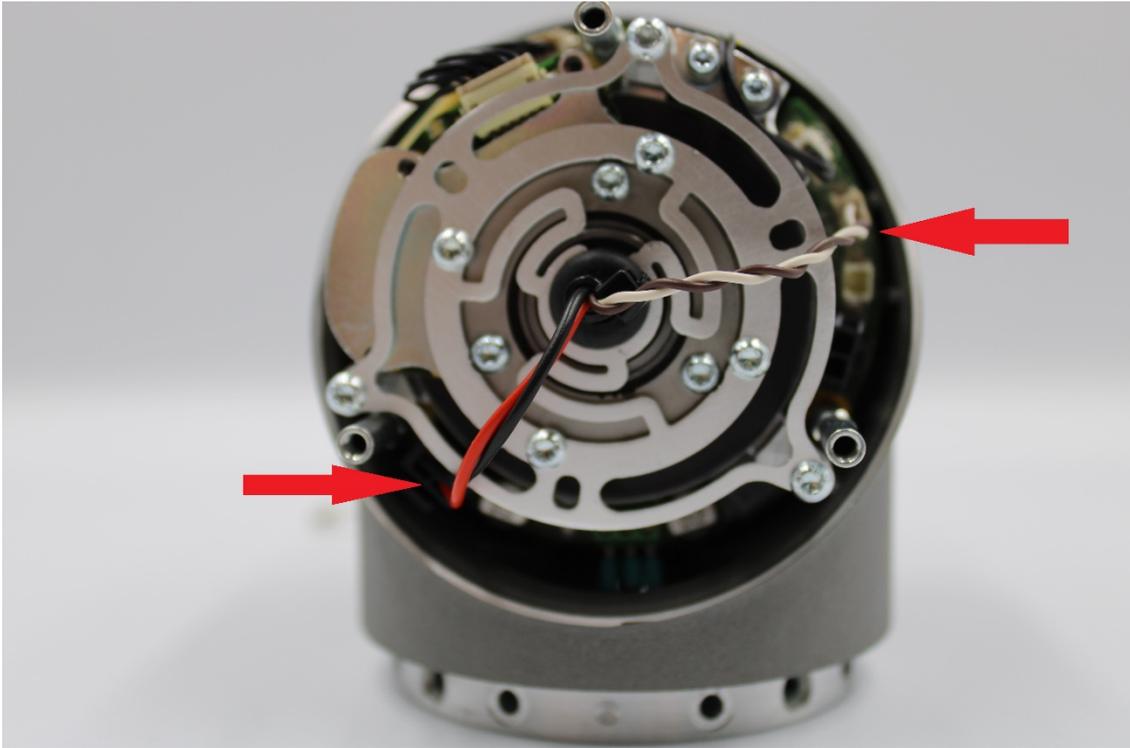


Make sure the wire bundle goes through the grommet on the other site of the joint. I bit of the Crimpflex should be visible.

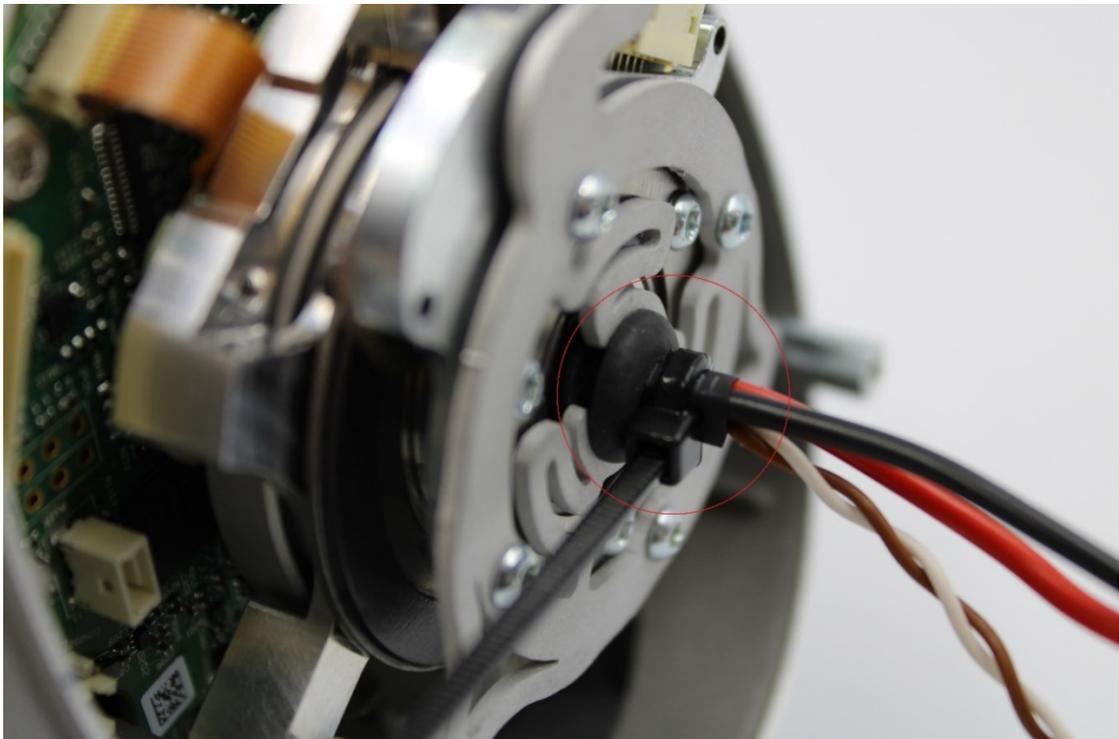

Mount the cable tie on the visible piece of Crimpflex.

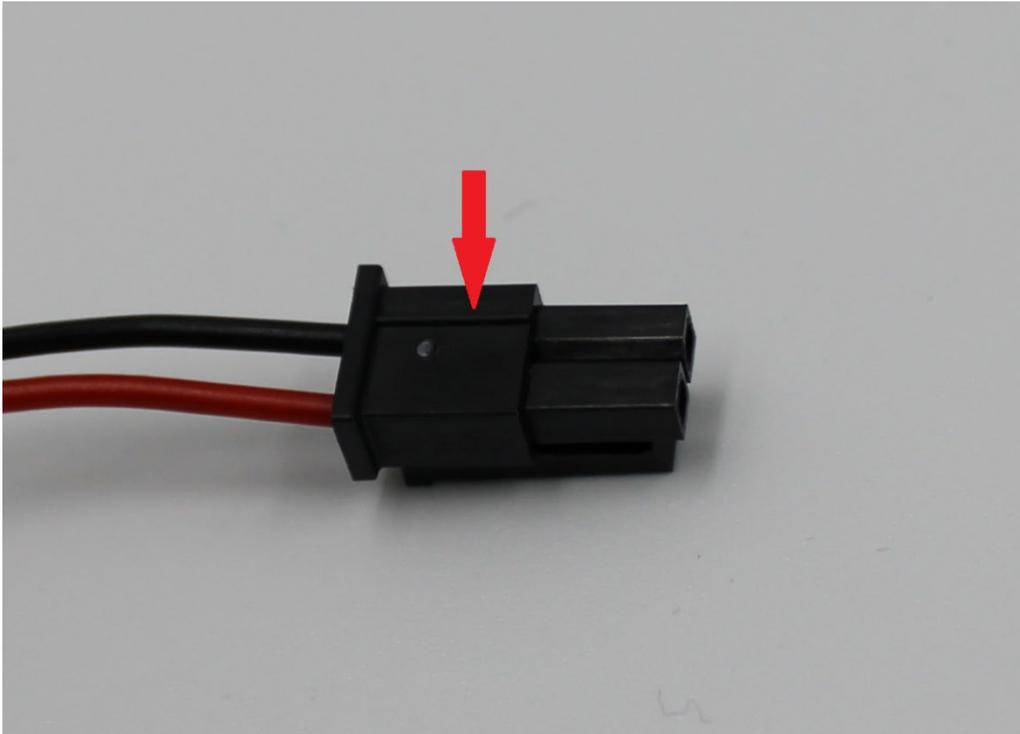

Mount the red and black power wires in the connector. The black wire on the side with the black line on the connector.

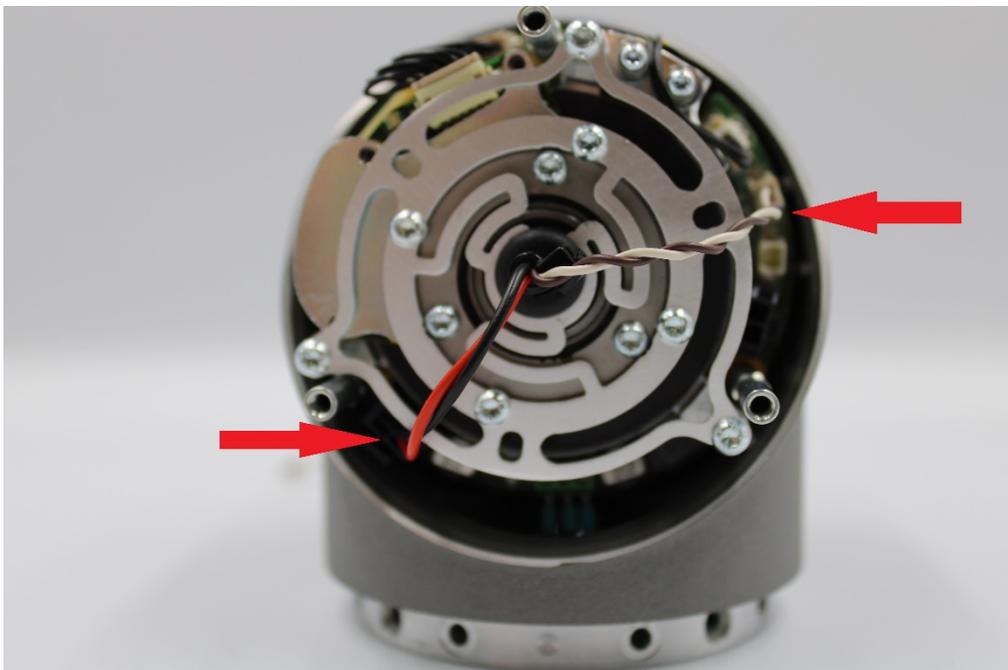

Mount all the wires correctly on the joint PCB as shown

The wire bundle has now been mounted and the joint is ready to be mounted.