DRAPER

EN

Original Instructions
Version 2
June 2026

230V ROTARY

MULTI-TOOL KIT

98521



UK CA CE

1. Preface

These are the original product instructions. Read the instruction manual in full and retain for future reference.

Please visit **drapertools.com/manuals** for the latest version of this manual and the associated parts list, if applicable.

1.1 Product Reference

User Manual for: 230V Rotary Multi-Tool Kit

Stock No: 98521

Part No: MT135SF40

1.2 Revisions

Version 1: December 2021
First release

Version 2: June 2026

1.3 Understanding the Safety Content of This Manual

WARNING! – Situations or actions that may result in personal injury or death.

CAUTION! – Situations or actions that may result in damage to the product or surroundings.

Important: – Information or instructions of particular importance.

2. Contents

1. Preface **2**
- 1.1 Product Reference 2
- 1.2 Revisions 2
- 1.3 Understanding the Safety Content of This Manual 2

2. Contents **3**

3. Product Introduction **4**
- 3.1 Intended Use 4
- 3.2 Specification 4

4. Health and Safety Information **5**
- 4.1 General Health and Power Tool Safety Warnings 5
- 4.2 Safety Instructions For All Operations 6
- 4.3 Further Safety Instructions For All Operations 7
- 4.4 Additional Safety Instructions For Grinding And Cutting-Off Operations 8
- 4.5 Additional Safety Instructions Specific For Wire Brush Operations 9
- 4.6 Connection to the Power Supply 9
- 4.7 Residual Risk 9

5. Identification and Unpacking **10**
- 5.1 Product Overview 10
- 5.2 Packaging 11

6. Operating Instructions **12**
- 6.1 ON/OFF Switch (Fig.1) 12
- 6.2 Variable Speed Dial (Fig.2) 12
- 6.3 Changing Drum/Drill Bits (Fig.3) 12
- 6.4 Fitting Cutting/Sanding Disc (Fig.4) 12
- 6.5 Fitting Sanding Drums (Fig.5) 13
- 6.6 Tips for Usage 13
- 6.7 Recommended Accessory Speeds 13

7. Maintenance and Troubleshooting **14**
- 7.1 General Maintenance 14
- 7.2 Replacing Carbon Brushes (Fig.6) 14

8. Disposal **14**

9. Warranty **14**

10. Explanation of Symbols **15**

3. Product Introduction

3.1 Intended Use

This Multi tool kit comes with an extensive range of accessories making it suitable for a wide range of uses, including cutting, engraving, drilling, grinding and brushing.

Any other application beyond the conditions established for use will be considered misuse. Draper Tools accepts no responsibility for improper use of this product.

Read this manual in full before attempting to assemble, operate or maintain the product, and retain it for later use.

3.2 Specification

Stock No.	**98521**
Part No.	**MT135SF40**
Rated voltage	230V/50Hz
Rated input	135W
Maximum Speed (no load)	35,000rpm
Number of Speeds	7 (1 – 6, Max)
Collet size	3.2mm and 2.3mm
Noise emissions	
Sound pressure level	75.7dB (A)
Sound power level	86.7dB (A)
Uncertainty (K)	3dB (A)
Vibration Level	2.397m/s^2
Uncertainty (K)	1.5m/s^2
Cord length (approx.)	2M
Net weight (approx.)	700g

Important: The declared vibration total values and noise emissions values have been measured in accordance with a standard test method and may be used for comparing one tool with another. These values may also be used in a preliminary assessment of exposure.

WARNING! The vibration and noise emissions during actual use of the product can differ from the declared values depending on the type of work and the area upon which it is used. Before each use, estimate the likely exposure resulting from the actual conditions of use. Take into account all parts of the operation cycle in order to identify any safety measures required to protect the operator.

4.1 General Health and Power Tool Safety Warnings

WARNING! Read all safety warnings, instructions, illustrations and specifications provided with this power tool. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

The term 'power tool' in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

Work Area Safety

- **Keep work area clean and well lit.**
  - Cluttered or dark areas invite accidents.
- **DO NOT operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.**
  - Power tools create sparks which may ignite the dust or fumes.
- **Keep children and bystanders away while operating a power tool.**
  - Distractions can cause you to lose control.

Electrical Safety

- **Power tool plugs must match the outlet. NEVER modify the plug in any way. DO NOT use any adapter plugs with earthed (grounded) power tools.**
  - Unmodified plugs and matching outlets will reduce risk of electric shock.
- **Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.**
  - There is an increased risk of electric shock if your body is earthed or grounded.
- **DO NOT expose power tools to rain or wet conditions.**
  - Water entering a power tool will increase the risk of electric shock.
- **DO NOT abuse the cord. NEVER use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.**
  - Damaged or entangled cords increase the risk of electric shock.
- **When operating a power tool outdoors, use an extension cord suitable for outdoor use.**
  - Use of a cord suitable for outdoor use reduces the risk of electric shock.
- **If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.**
  - Use of an RCD reduces the risk of electric shock.

Personal Safety

- **Stay alert, watch what you are doing and use common sense when operating a power tool. DO NOT use a power tool while you are tired or under the influence of drugs, alcohol or medication.**
  - A moment of inattention while operating power tools may result in serious personal injury.
- **Use personal protective equipment. ALWAYS wear eye protection.**
  - Protective equipment such as a dust mask, non-skid safety shoes, hard hat or hearing protection used for appropriate conditions will reduce personal injuries.
- **Prevent unintentional starting. Ensure the switch is in the 'OFF' position before connecting to power source, picking up or carrying the tool.**
  - Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.
- **Remove any adjusting key or wrench before turning the power tool on.**
  - A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- **DO NOT overreach. Keep proper footing and balance at all times.**
  - This enables better control of the power tool in unexpected situations.
- **Dress properly. DO NOT wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts.**
  - Loose clothes, jewellery or long hair can be caught in moving parts.
- **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.**
  - Use of dust collection can reduce dust-related hazards.

- **DO NOT let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles.**
  - A careless action can cause severe injury within a fraction of a second.

Power Tool Use and Care

- **DO NOT force the power tool. Use the correct power tool for your application**.
  - The correct power tool will do the job better and safer at the rate for which it was designed.
- **DO NOT use the power tool if the switch does not turn it on and off.**
  - Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- **Disconnect the plug from the power source and/or remove the battery pack, if detachable, from the power tool, before making any adjustments, changing accessories or storing power tools.**
  - Such preventive safety measures reduce the risk of starting the power tool accidentally.
- **Store idle power tools out of the reach of children and DO NOT allow persons unfamiliar with the power tool or these instructions to operate the power tool.**
  - Power tools are dangerous in the hands of untrained users.
- **Maintain power tools and accessories. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use.**
  - Many accidents are caused by poorly maintained power tools.
- **Keep cutting tools sharp and clean.**
  - Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- **Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.**
  - Use of the power tool for operations different from those intended could result in a hazardous situation.
- **Keep handles and grasping surfaces dry, clean and free from oil and grease.**
  - Slippery handles and grasping surfaces **DO NOT** allow for safe handling and control of the tool in unexpected situations.

Service

- **Have your power tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.**

4.2 Safety Instructions For All Operations

Safety warnings common for grinding, sanding, wire brushing, polishing or abrasive cutting-off operations:

- **This power tool is intended to function as a grinder, sander, wire brush, polisher, or cut-off tool. Read all safety warnings, instructions, illustrations and specifications provided with this power tool**.
  - Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.
- **DO NOT use accessories which are not specifically designed and recommended by Draper Tools.**
  - Just because the accessory can be attached to your power tool, it does not assure safe operation.
- **The rated speed of the grinding accessories must be at least equal to the maximum speed marked on the power tool.**
  - Grinding accessories running faster than their rated speed can break and fly apart.
- **The outside diameter and the thickness of your accessory must be within the capacity rating of your power tool.**
  - Incorrectly sized accessories cannot be adequately controlled.
- **The arbour size of wheels, sanding drums or any other accessory must properly fit the spindle or collet of the power tool.**
  - Accessories that do not match the mounting hardware of the power tool will run out of balance, vibrate excessively and may cause loss of control.
- **Mandrel mounted wheels, sanding drums, cutters or other accessories must be fully inserted into the collet or chuck.**
  - If the mandrel is insufficiently held and/or the overhang of the wheel is too long, the mounted wheel may become loose and be ejected at high velocity.

- **DO NOT use a damaged accessory. Before each use inspect the accessory such as abrasive wheels for chips and cracks, sanding drum for cracks, tear or excess wear, wire brush for loose or cracked wires. If power tool or accessory is dropped, inspect for damage or install an undamaged accessory. After inspecting and installing an accessory, position yourself and bystanders away from the plane of the rotating accessory and run the power tool at maximum no-load speed for one minute.**
  - Damaged accessories will normally break apart during this test time.
- **Wear personal protective equipment. Depending on application, use face shield, safety goggles or safety glasses. As appropriate, wear dust mask, hearing protectors, gloves and workshop apron capable of stopping small abrasive or workpiece fragments.**
  - The eye protection must be capable of stopping flying debris generated by various operations. The dust mask or respirator must be capable of filtrating particles generated by your operation. Prolonged exposure to high intensity noise may cause hearing loss.
- **Keep bystanders a safe distance away from work area. Anyone entering the work area must wear personal protective equipment.**
  - Fragments of workpiece or of a broken accessory may fly away and cause injury beyond immediate area of operation.
- **Hold power tool by insulated gripping surfaces only, when performing an operation where the cutting accessory may contact hidden wiring or its own cord.**
  - Cutting accessory contacting a 'live' wire may make exposed metal parts of the power tool 'live' and could give the operator an electric shock.
- **ALWAYS hold the tool firmly in your hand(s) during the start-up.**
  - The reaction torque of the motor, as it accelerates to full speed, can cause the tool to twist.
- **Use clamps to support workpiece whenever practical. NEVER hold a small workpiece in one hand and the tool in the other hand while in use.**
  - Clamping a small workpiece allows you to use your hand(s) to control the tool. Round material such as dowel rods, pipes or tubing have a tendency to roll while being cut and may cause the bit to bind or jump toward you.
- **Position the cord clear of the spinning accessory.**
  - If you lose control, the cord may be cut or snagged, and your hand or arm may be pulled into the spinning accessory.
- **NEVER lay the power tool down until the accessory has come to a complete stop.**
  - The spinning accessory may grab the surface and pull the power tool out of your control.
- **After changing the bits or making any adjustments, make sure the collet nut, chuck or any other adjustment devices are securely tightened.**
  - Loose adjustment devices can unexpectedly shift, causing loss of control, loose rotating components will be violently thrown.
- **DO NOT run the power tool while carrying it at your side.**
  - Accidental contact with the spinning accessory could snag your clothing, pulling the accessory into your body.
- **Regularly clean the power tool's air vents.**
  - The motor's fan will draw the dust inside the housing and excessive accumulation of powdered metal may cause electrical hazards.
- **DO NOT operate the power tool near flammable materials.**
  - Sparks could ignite these materials.
- **DO NOT use accessories that require liquid coolants.**
  - Using water or other liquid coolants may result in electrocution or shock.

4.3 Further Safety Instructions For All Operations

Kickback and related warnings

Kickback is a sudden reaction to a pinched or snagged rotating wheel, sanding band, brush or any other accessory. Pinching or snagging causes rapid stalling of the rotating accessory which in turn causes the uncontrolled power tool to be forced in the direction opposite of the accessory's rotation.

For example, if an abrasive wheel is snagged or pinched by the workpiece, the edge of the wheel that is entering into the pinch point can dig into the surface of the material causing the wheel to climb out or kick out. The wheel may either jump toward or away from the operator, depending on direction of the wheel's movement at the point of pinching. Abrasive wheels may also break under these conditions.

Kickback is the result of power tool misuse and/or incorrect operating procedures or conditions and can be avoided by taking proper precautions as given below.

- **Maintain a firm grip on the power tool and position your body and arm to allow you to resist kickback forces.**
  - The operator can control kickback forces, if proper precautions are taken.
- **Use special care when working corners, sharp edges etc. Avoid bouncing and snagging the accessory.**
  - Corners, sharp edges or bouncing have a tendency to snag the rotating accessory and cause loss of control or kickback.
- **DO NOT attach a toothed saw blade.**
  - Such blades create frequent kickback and loss of control.
- **ALWAYS feed the bit into the material in the same direction as the cutting edge is exiting from the material (which is the same direction as the chips are thrown).**
  - Feeding the tool in the wrong direction causes the cutting edge of the bit to climb out of the work and pull the tool in the direction of this feed.
- **When using rotary files, cut-off wheels, high-speed cutters or tungsten carbide cutters, ALWAYS have the work securely clamped.**
  - These wheels will grab if they become slightly canted in the groove and can kickback. When a cut-off wheel grabs, the wheel itself usually breaks. When a rotary file, high-speed cutter or tungsten carbide cutter grabs, it may jump from the groove, and you could lose control of the tool.

4.4 Additional Safety Instructions For Grinding And Cutting-Off Operations

Safety warnings specific for grinding and abrasive cutting-off operations:

- **Use only wheel types that are recommended for your power tool and only for recommended applications. For example: DO NOT grind with the side of a cut-off wheel.**
  - Abrasive cut-off wheels are intended for peripheral grinding, side forces applied to these wheels may cause them to shatter.
- **For threaded abrasive cones and plugs use only undamaged wheel mandrels with an unrelieved shoulder flange that are of correct size and length.**
  - Proper mandrels will reduce the possibility of breakage.
- **DO NOT 'jam' a cut-off wheel or apply excessive pressure. DO NOT attempt to make an excessive depth of cut.**
  - Overstressing the wheel increases the loading and susceptibility to twisting or snagging of the wheel in the cut and the possibility of kickback or wheel breakage.
- **DO NOT position your hand in line with and behind the rotating wheel.**
  - When the wheel, at the point of operation, is moving away from your hand, the possible kickback may propel the spinning wheel and the power tool directly at you.
- **When wheel is pinched, snagged or when interrupting a cut for any reason, switch off the power tool and hold the power tool motionless until the wheel comes to a complete stop. NEVER attempt to remove the cut-off wheel from the cut while the wheel is in motion otherwise kickback may occur.**
  - Investigate and take corrective action to eliminate the cause of wheel pinching or snagging.
- **DO NOT restart the cutting operation in the workpiece. Let the wheel reach full speed and carefully re-enter the cut.**
  - The wheel may bind, walk up or kickback if the power tool is restarted in the workpiece.
- **Support panels or any oversized workpiece to minimize the risk of wheel pinching and kickback.**
  - Large workpieces tend to sag under their own weight. Supports must be placed under the workpiece near the line of cut and near the edge of the workpiece on both sides of the wheel.
- **Use extra caution when making a "pocket cut" into existing walls or other blind areas.**
  - The protruding wheel may cut gas or water pipes, electrical wiring or objects that can cause kickback.

4.5 Additional Safety Instructions Specific For Wire Brush Operations

- **Be aware that wire bristles are thrown by the brush even during ordinary operation. DO NOT overstress the wires by applying excessive load to the brush.**
  - The wire bristles can easily penetrate light clothing and/or skin.
- **Allow brushes to run at operating speed for at least one minute before using them. During this time no one is to stand in front or in line with the brush.**
  - Loose bristles or wires will be discharged during the run-in time.
- **Direct the discharge of the spinning wire brush away from you.**
  - Small particles and tiny wire fragments may be discharged at high velocity during the use of these brushes and may become imbedded in your skin.

4.6 Connection to the Power Supply

CAUTION!
Risk of electric shock. DO NOT open.

This appliance is supplied with an approved plug and cord for your safety.

If the power supply cord is damaged, it must be replaced by Draper Tools, an authorised service agent or similarly qualified personnel in order to avoid a hazard.

The damaged or incomplete plug, when cut from the cord, shall be disabled to prevent connection to a live electrical outlet.

This appliance is Class II† and is designed for connection to a power supply matching that detailed on the rating label and compatible with the plug fitted.

The value of the fuse fitted is marked on the pin face of the plug. Should the fuse need replacing, use a small plain-slot screwdriver to remove the fuse cover. Ensure the substitute is of the correct rating, approved to BS1362 and ASTA or BS Kite marked. This should only be performed by suitably qualified personnel.

ASTA

BSI

Important: If an extension lead is required, use an approved and compatible lead rated for this appliance.

Unwind the entire cable and follow all the instructions supplied with the extension lead.

†**Double insulated** ⧈: This product requires no earth connection as supplementary insulation is applied to the basic insulation to protect against electric shock in the event of failure of the basic insulation.


4.7 Residual Risk

The safety instructions in this manual cannot account for all possible conditions and situations that may occur. Exercise common sense and caution when using this product and protect against any additional conceivable risks.

5. Identification and Unpacking

Carefully remove the product from the packaging and examine it for any signs of damage that may have occurred during shipment. If any part is damaged or missing, **DO NOT** attempt to use the product. Please contact the Draper Helpline; contact details can be found at the back of this manual.

5.1 Product Overview

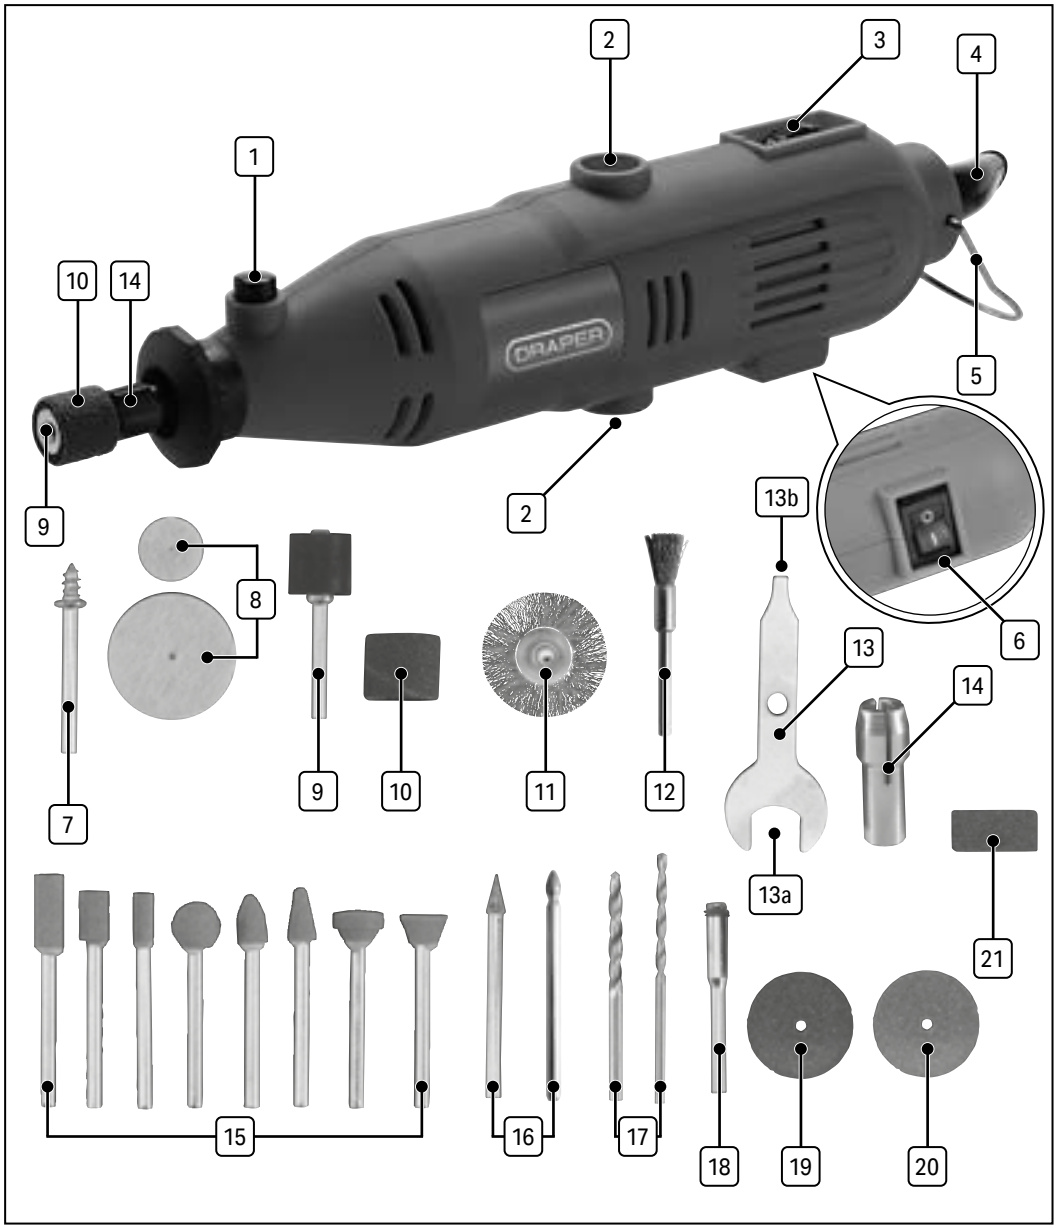

5. Identification and Unpacking

1. Spindle lock
2. 2 × Motor brush cover
3. Variable speed dial
4. Plug and cord
5. Hanging loop
6. **ON/OFF** switch
7. Polishing wheel holder
8. 4 × Polishing wheels (1 × large & 3 × small)
9. Large sanding drum holder
10. 4 × Sanding drums (large)
11. Stainless steel wheel
12. Stainless steel brush
13. Spanner/Screwdriver
    - 13a Collet spanner
    - 13b Plain slot screwdriver
14. 2× Collet (3.2mm fitted/2.3mm)
15. 8 × Grinding points
16. 2 × Diamond grinding points
17. 2 × HSS drill bits
18. Disc holder (cutting/sanding/grinding)
19. 4 × Cut-off discs
20. 4 × Sanding discs
21. Whetstone
22. Replacement carbon brush set (not shown)

5.2 Packaging

Keep the product packaging for the duration of the warranty period for reference should the product need to be returned for repair.

WARNING! Keep packaging materials out of reach of children. Dispose of packaging correctly and responsibly and in accordance with local regulations.

Please visit **drapertools.com** for our full range of accessories and consumables.

6. Operating Instructions

Important: Before operating this product, read and understand all the safety instructions listed in this manual. Ensure that the product is fully assembled and correctly prepared for use.

6.1 ON/OFF Switch (Fig.1)

- To start the tool – press the **'I'/ON'** part of the switch [6].

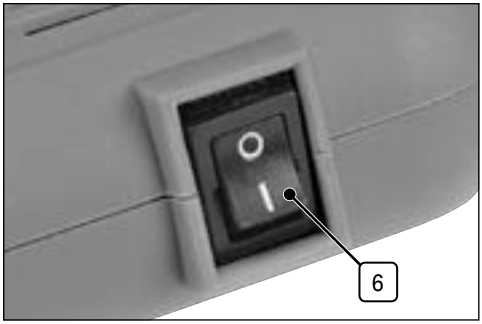


Fig. 1

- To stop the tool – press the **'O/OFF'** part of the switch [6].

6.2 Variable Speed Dial (Fig.2)

- The variable speed dial [3] can be adjusted from speed1 (10,000rpm) to Max speed (35,000rpm).

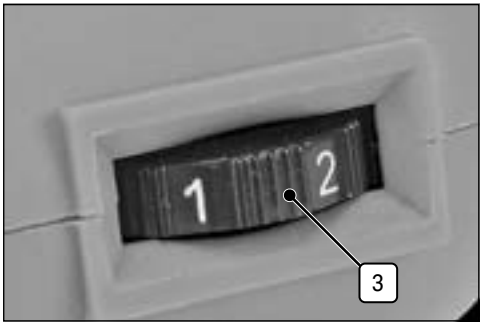


Fig. 2

- Change the speed as required for the application.
- Use lower speed for larger accessories and higher speed for smaller tool accessories.

6.3 Changing Drum/Drill Bits (Fig.3)

- **ALWAYS** switch off and unplug the tool before changing accessories.
- Check the safe working speed is compatible with this tool when buying additional or replacement accessories.

1. Select the correct collet [14] size for the bit shank to be used.
2. Press and hold in the spindle lock [1] to prevent the spindle from rotating.

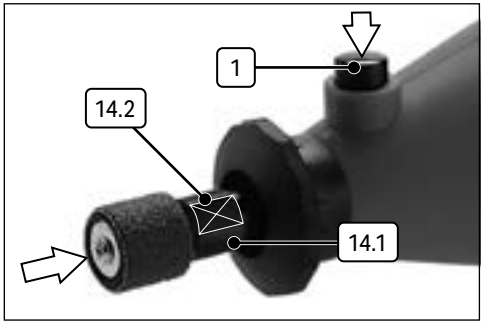


Fig. 3

3. Loosen the collet nut [14.1] using the spanner [13a] on the collet flat [14.2] section.
4. Place the spindle into the collet, press the spindle lock and tighten the collet nut.

6.4 Fitting Cutting/Sanding Disc (Fig.4)

- With the disc holder [18] fitted to the correct sized collet, remove the screw [18.1] using the plain screwdriver [13b] supplied.

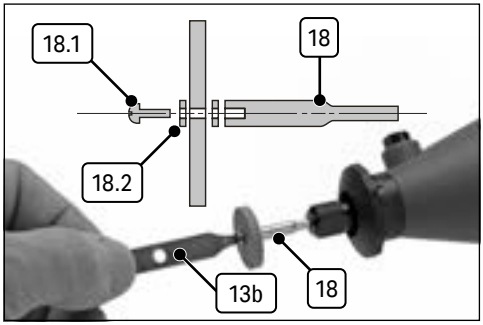


Fig. 4

- Leave one washer [18.2] on the screw and place the cutting disc on the screw and fit the second washer [18.2]. Refit to the disc holder spindle and tighten (**DO NOT** overtighten).

6.5 Fitting Sanding Drums (Fig.5)

1. First loosen the small screw 9.1 in the top of the holder 9.

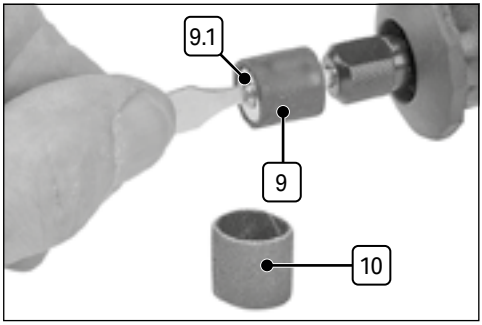






Fig. 5

2. Slide the sanding drum 10 onto the holder.
3. Tighten the screw to secure the drum (**DO NOT** overtighten).

6.6 Tips for Usage

- **Application**s – the tool can be used for drilling, grinding, polishing, milling, brushing, engraving, cutting and removal of rust. Use on most woods, metal, glass and ceramics.
- For precision application such as milling or engraving hold the tool like a pen.
- For heavier applications such as cutting or grinding hold the tool in the palm of your hand.
- It is a good idea to practise on scrap pieces of material before use.
- Best results are achieved using an even speed and pressure. **DO NOT** apply excessive force as this will cause the motor to overheat and fail.
- **DO NOT** cover the exhaust vents during operation as this will cause the tool to overheat.

6.7 Recommended Accessory Speeds

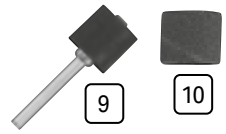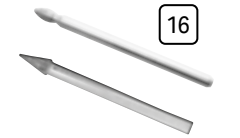Accessory	Material	Speed
Sanding Drums 	Wood	Max
	Steel	1
	Aluminium	3
	Brass	3
	Plastic	1
Grinding Points 	Stone	1
	Steel	5 – 6
	Aluminium	2
	Brass	2
	Plastic	1
Polishing Wheels 	Steel	5 – 6
	Aluminium	3
	Brass	5 – 6
Diamond Grinding Points 	Stone	Max
	Steel	3
	Aluminium	Max
	Brass	Max
	Plastic	1
Steel Brush 	Stone	2
	Aluminium	2
	Brass	2
Cut-off Wheels 	Stone	6
	Steel	3
	Aluminium	6
	Brass	6
	Plastic	1

7. Maintenance and Troubleshooting

Important: ALWAYS switch off and unplug the tool from the power supply before carrying out any cleaning, servicing or maintenance.

7.1 General Maintenance

- Regular inspection and cleaning will reduce the necessity for maintenance operations and will keep your tool in good working condition.
- Wipe over with a damp cloth. **DO NOT** use solvents or abrasives to clean the product.
- When not in use store in a dry safe place out of the reach of children.

7.2 Replacing Carbon Brushes (Fig.6)

- A set of replacement brushes is supplied.
- Replace both brushes at the same time.
- Remove the two covers [2] to replace the worn brushes.



Fig. 6

8. Disposal

At the end of its working life, dispose of the product responsibly and in line with local regulations. Recycle where possible.

- **DO NOT** dispose of this product with domestic waste; most local authorities provide appropriate recycling facilities.



9. Warranty

Warranty period is 24 months from date of purchase. Visit **drapertools.com/warranty/** for more information.

However, if the tools are hired out, the warranty period is 90 days from the date of purchase.

This warranty does not cover consumable parts, normal wear & tear, damage, misuse, careless or unsafe handling,

10. Explanation of Symbols



Read the instruction manual



Wear face mask and safety glasses



Wear protective gloves



Warning! / Caution / Danger



Rated input (Wattage)



Maximum revolutions per minute



Net product weight



Class II construction
(Double insulated)



WEEE –
Waste Electrical & Electronic Equipment
Do not dispose of Waste Electrical & Electronic Equipment in with domestic rubbish



European conformity



UK Conformity Assessed

Contact Details

Draper Tools Limited
Hursley Road
Chandler's Ford
Eastleigh
Hampshire
SO53 1YF
UK

Website: drapertools.com
Email: sales@drapertools.com

Product Helpline: +44 (0) 23 8049 4344
Telephone Sales Desk: +44 (0) 23 8049 4333
General Enquiries: +44 (0) 23 8026 6355

Draper Tools Europe B.V.
Oude Graaf 8
6002 NL
Weert
Netherlands

Please contact the Draper Tools Product Helpline for repair and servicing enquiries.

© Published by Draper Tools Limited