

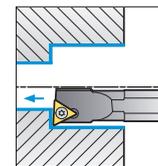


STUPR/L

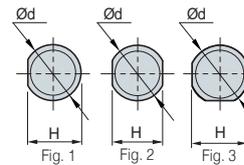

TP□□

ØD Min. machining Dia.

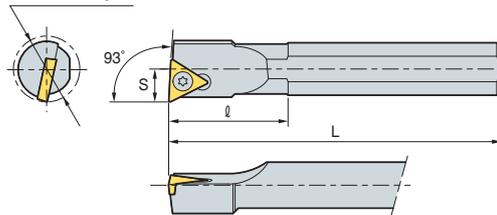

93°

• R type insert (mm)

Steel shank type

| Designation | ØD | Ød | H | L | S | ℓ | Insert | Screw | Wrench | Fig. |
|-----------------|----|----|-----|-----|---|----|---------------|-----------|--------|------|
| S08K-STUPR/L-08 | 10 | 8 | 7 | 125 | 4 | 18 | TP□□0802□□R/L | FTNA02205 | TW06P | 2 |
| A08F-STUPR/L-08 | 10 | 8 | 7.5 | 80 | 5 | 18 | | | | |

Carbide shank type

| Designation | ØD | Ød | H | L | S | ℓ | Insert | Screw | Wrench | Fig. |
|-----------------|----|----|----|-----|----|---|------------|------------|----------|------|
| C08K-STUPR/L-08 | 10 | 8 | 7 | 125 | 5 | | TP□T0802□□ | FTNA02205 | TW06P | 2 |
| C10K-STUPR/L-11 | 12 | 10 | 9 | 125 | 6 | | TP□T1103□□ | FTNA0305 | TW09P | |
| C10M-STUPR/L-11 | 12 | 10 | 9 | 150 | 6 | | | | | |
| C12M-STUPR/L-11 | 15 | 12 | 11 | 150 | 8 | | | | | |
| C12Q-STUPR/L-11 | 15 | 12 | 11 | 180 | 8 | | | | | |
| C16R-STUPR/L-11 | 20 | 16 | 15 | 200 | 10 | | | | | |
| C16S-STUPR/L-11 | 20 | 16 | 15 | 250 | 10 | | | | | |
| C20R-STUPR/L-11 | 25 | 20 | 18 | 200 | 13 | | | | | |
| C20S-STUPR/L-11 | 25 | 20 | 18 | 250 | 13 | | | | | |
| C20R-STUPR/L-16 | 25 | 20 | 18 | 200 | 13 | | | TP□T1604□□ | FTNA0408 | |
| C20S-STUPR/L-16 | 25 | 20 | 18 | 250 | 13 | | | | | |
| C25T-STUPR/L-16 | 32 | 25 | 23 | 300 | 17 | | | | | |
| E08K-STUPR/L-08 | 10 | 8 | 7 | 125 | 5 | | TP□T0802□□ | FTNA02205 | TW06P | 2 |
| E10K-STUPR/L-11 | 12 | 10 | 9 | 125 | 6 | | TP□T1103□□ | FTNA0305 | TW09P | |
| E10M-STUPR/L-11 | 12 | 10 | 9 | 150 | 6 | | | | | |
| E12M-STUPR/L-11 | 15 | 12 | 11 | 150 | 8 | | | | | |
| E12Q-STUPR/L-11 | 15 | 12 | 11 | 180 | 8 | | | | | |
| E16R-STUPR/L-11 | 20 | 16 | 15 | 200 | 10 | | | | | |
| E16S-STUPR/L-11 | 20 | 16 | 15 | 250 | 10 | | | | | |
| E20R-STUPR/L-11 | 25 | 20 | 18 | 200 | 13 | | | | | |
| E20S-STUPR/L-11 | 25 | 20 | 18 | 250 | 13 | | | | | |
| E20R-STUPR/L-16 | 25 | 20 | 18 | 200 | 13 | | | TP□T1604□□ | FTNA0408 | |
| E20S-STUPR/L-16 | 25 | 20 | 18 | 250 | 13 | | | | | |
| E25T-STUPR/L-16 | 32 | 25 | 23 | 300 | 17 | | | | | |

Applicable inserts B90-B93

• Use left handed insert for right handed holder

