

MRX

RF Marker Locator

Technical specification

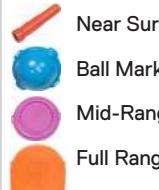


MRX Locator Specification

1. Product Summary

1.1 Product Descriptions	Multi-purpose Precision Locator Cable, Pipe and RF Marker Locator Locate System Receiver Multi-function Precision Locator
1.2 Intended Use	Locating the position / path of buried cables, pipes and RF Markers. Detecting and pinpointing insulation faults on buried pipes and cables
1.3 Standard Equipment	Locator with lithium-ion battery pack Charger and mains lead USB lead User guide

2. Performance

2.1 Sensitivity	6E-15 Tesla 5µA at 1 meter (33kHz)
2.2 Dynamic range	140dB rms/√Hz
2.3 Selectivity	120dB/Hz
2.4 Depth measurement precision ¹	Cable/Pipe/Sonde: ± 3% RF Markers: ± 15% ± 5cm – RF Marker Type dependent. Depth precision valid to:  <ul style="list-style-type: none">Near Surface: 2'/60cmBall Marker: 4.9'/1.5mMid-Range: 5.9'/1.8mFull Range: 7.9'/2.4m 
2.5 Locate accuracy	± 5% of depth
2.6 Active Locate filter bandwidth	± 3Hz, 0 < 1kHz ± 10Hz, ≥ 1kHz
2.7 Start-up time	< 2.5 second
2.8 Maximum depth readout ²	Cable/Pipe: 98'/30m Sonde: 64'/19.5m RF Markers: 16'/5m

3. Locate Functions

3.1 Active Locate Modes	<ul style="list-style-type: none"> Peak Peak+™ (choice of combined Peak & Guidance or Peak & Null) Guidance RF Marker Combined (Cable, Pipe and RF Marker) 																																								
3.2 Gain control	<p>Guidance Mode: Automatic</p> <p>Other modes: Manual gain using “+” or “-” with one touch to return to center (50% of Full Scale)</p>																																								
3.3 Active locate frequencies	<p>8 Frequencies:</p> <p>512Hz, 640Hz, 8kHz, 33kHz, 65kHz, 83kHz, 131kHz and 200kHz</p> <p>*Use of the 200kHz frequency is subject to radio licensing for Short Range Devices in the EU and possibly other countries. Users are responsible for complying with local regulations.</p>																																								
3.4 RF Markers	<table border="1"> <thead> <tr> <th>Utility</th><th>Display abbreviation</th><th>Color</th><th>Frequency</th></tr> </thead> <tbody> <tr> <td>French Power</td><td>PFR</td><td>Natural</td><td>40.0 kHz</td></tr> <tr> <td>General / Non-drinkable water</td><td>PUR</td><td>Purple</td><td>66.35 kHz</td></tr> <tr> <td>Cable TV</td><td>CTV</td><td>Black / Orange</td><td>77.0 kHz</td></tr> <tr> <td>Gas</td><td>GAS</td><td>Yellow</td><td>83.0 kHz</td></tr> <tr> <td>Telephone / Telecoms</td><td>TEL</td><td>Orange</td><td>101.4 kHz</td></tr> <tr> <td>Sanitary</td><td>SAN</td><td>Green</td><td>121.6 kHz</td></tr> <tr> <td>German Power</td><td>PDE</td><td>Blue / Red</td><td>134.0 kHz</td></tr> <tr> <td>Water</td><td>H2O</td><td>Blue</td><td>145.7 kHz</td></tr> <tr> <td>Electrical Power*</td><td>PWR</td><td>Red</td><td>169.8 kHz</td></tr> </tbody> </table> <p>*Use of the red Electrical Power (PWR) marker locate mode is subject to radio licensing restrictions for Short Range Devices in the EU and possibly other countries. Use of the orange Telephone/Telecoms (TEL) marker locate mode is restricted in Canada. Users are responsible for complying with local regulations.</p>	Utility	Display abbreviation	Color	Frequency	French Power	PFR	Natural	40.0 kHz	General / Non-drinkable water	PUR	Purple	66.35 kHz	Cable TV	CTV	Black / Orange	77.0 kHz	Gas	GAS	Yellow	83.0 kHz	Telephone / Telecoms	TEL	Orange	101.4 kHz	Sanitary	SAN	Green	121.6 kHz	German Power	PDE	Blue / Red	134.0 kHz	Water	H2O	Blue	145.7 kHz	Electrical Power*	PWR	Red	169.8 kHz
Utility	Display abbreviation	Color	Frequency																																						
French Power	PFR	Natural	40.0 kHz																																						
General / Non-drinkable water	PUR	Purple	66.35 kHz																																						
Cable TV	CTV	Black / Orange	77.0 kHz																																						
Gas	GAS	Yellow	83.0 kHz																																						
Telephone / Telecoms	TEL	Orange	101.4 kHz																																						
Sanitary	SAN	Green	121.6 kHz																																						
German Power	PDE	Blue / Red	134.0 kHz																																						
Water	H2O	Blue	145.7 kHz																																						
Electrical Power*	PWR	Red	169.8 kHz																																						
3.5 Sonde Frequencies	<p>4 Frequencies:</p> <p>512Hz, 640Hz, 8kHz and 33kHz</p>																																								
3.6 Fault Find	<p>8KFF</p> <p>Locate insulation sheath faults on pipes and cables to 10cm / 4" accuracy using the accessory A-Frame and a compatible transmitter</p>																																								
3.7 Passive Locate Modes	Power, Radio and CPS (Cathodic Protection System)																																								
3.8 Power Filters™ function	<p>Switch out of Radiodetection's sensitive Power Mode to locate on any of 5 individual mains harmonic frequencies.</p> <table border="1"> <thead> <tr> <th>HARMONIC</th><th>50 Hz regions</th><th>60 Hz regions</th></tr> </thead> <tbody> <tr> <td>Primary</td><td>50 Hz</td><td>60 Hz</td></tr> <tr> <td>3rd</td><td>150 Hz</td><td>180 Hz</td></tr> <tr> <td>5th</td><td>250 Hz</td><td>300 Hz</td></tr> <tr> <td>7th</td><td>350 Hz</td><td>420 Hz</td></tr> <tr> <td>9th</td><td>450 Hz</td><td>540 Hz</td></tr> </tbody> </table>	HARMONIC	50 Hz regions	60 Hz regions	Primary	50 Hz	60 Hz	3rd	150 Hz	180 Hz	5th	250 Hz	300 Hz	7th	350 Hz	420 Hz	9th	450 Hz	540 Hz																						
HARMONIC	50 Hz regions	60 Hz regions																																							
Primary	50 Hz	60 Hz																																							
3rd	150 Hz	180 Hz																																							
5th	250 Hz	300 Hz																																							
7th	350 Hz	420 Hz																																							
9th	450 Hz	540 Hz																																							

3.9 Information displayed	<ul style="list-style-type: none"> • Signal strength - moving bar graph and numeric value • Mode indication (Peak, Null, Guidance, Peak+ with option of Guidance arrows or Null arrows) • Line or Sonde locate type • Proportional left/right indication • Compass: full 360° line direction indicator • Accessories in use indication • Accessory specific custom screen • Simultaneous depth and current readout (Line location) • Depth readout (Sonde location) • Gain level (in dB) • Frequency selected • Marker type selected • Battery condition • Speaker volume • Operating frequency • Bluetooth® status • Configuration menu and submenus • Software version • Last calibration date • Fault Find mode indicator • Transmitter communication status • Transmitter standby status • StrikeAlert™ warning • Overload warning • Swing warning
3.10 Audio output tones	<p>Volume level: Vol0, Vol1, Vol2, Vol3, Vol4 and Vol5</p> <p>Audio Pitch: Low and High</p> <p>Audio feedback for menu navigation</p> <p>StrikeAlert audio warning</p> <p>Swing audio warning</p> <p>Power / Radio modes: Real Sound™ derived from detected electromagnetic signal</p> <p>Peak / Peak+ and CPS modes: Synthesized audio tone proportional to signal strength</p> <p>Guidance mode: Continuous tone when locator is to the left of target, intermittent tone when to the right of target</p>
3.11 Accessory locate functions	<p>Locator clamps: Used to identify individual target cable(s) in a bundle or cabinet using signal strength read-out</p> <p>Stethoscopes: Used to identify individual target cable(s) in a bundle or confined space such as a cabinet using signal strength read-out</p>

4. Locate Function Enhancements

4.1 StrikeAlert™	Audio and visual warning when a cable or pipe less than 12" / 30cm deep is detected. Operates in Active and Passive locating modes
4.2 Haptic Vibration	Handle vibrates when StrikeAlert, Swing and Overload warnings activated
4.3 Swing Warning	Audio and visual warning when the user is swinging the locator excessively
4.4 Dynamic Overload Protection™	40dB, automatic <ul style="list-style-type: none"> Automatically manages the system gain to compensate for strong signals e.g. from mains power or substations, to enable accurate locating
4.5 Overload warning	If the MRX becomes overloaded, users will be alerted by a flashing mode icon. Both the depth and current measurements will be disabled in the event of an overload.
4.6 iLOC™	Metric: Remote transmitter control from up to 450m away ³ US Customary: Remote transmitter control from up to 1400' away ³ Control transmitter frequency, power level and SideStep
4.7 SideStep™	Enables locating where other signals are interfering, and without compromising the optimum locate frequency Remotely shifts the locate and transmitter frequency by several Hz, out of the bandwidth of other locate signals that may be interfering with the locate
4.8 Survey Measurements	Store up to 1,000 survey points within the locator, and append GPS data from external GNSS sources over Bluetooth Export data immediately or as a batch over Bluetooth
4.9 Simultaneous depth and current readout	Both utility depth and locate signal current are displayed simultaneously, giving the operator more information to help them to follow the target utility
4.10 Fault Find	Apply a Fault Find signal with a Tx-5 and Tx-10 transmitter, then use an accessory A-Frame to detect and pinpoint insulation faults Fault find accuracy: Metric: 10cm US Customary: 4"
4.11 Peak+ mode	Use the accurate Peak bargraph, and add either proportional Guidance arrows for faster locating, or Null arrows to check for the presence of distortion

5. Configurability

5.1 Phone operating system	Android iOS
5.2 Option selection	All options can be enabled or disabled on the locator or using the RD Manager Online PC software
5.3 Languages supported	Fourteen: English, French, German, Dutch, Polish, Czech, Slovakian, Spanish, Portuguese, Swedish, Italian, Turkish, Russian, Hungarian
5.4 Mains power network options	50 Hz or 60 Hz
5.5 Mode selection	All locate modes can be individually enabled or disabled
5.6 Active RF Marker selection	All RF Markers can be individually enabled or disabled
5.7 Active frequency selection	All active frequencies available can be individually enabled or disabled
5.8 Passive mode selection	All passive modes can be individually enabled or disabled
5.9 StrikeAlert	Enable / disable
5.10 Swing warning	Enable / disable
5.11 Haptic vibration	Enable / disable
5.12 Peak+ arrow selection	Guidance arrows or Null arrows Selected using the locator menu or with a long press of the antenna key
5.13 iLoc Connectivity	On/Off
5.14 Data export protocols supported	PPP/choice of 3 ASCII formats
5.15 Time/date setting	Correct or update locator real-time clock using the RD Manager Online PC software
5.16 Audio	Set audio tone frequency level high or low

6. Connectivity

6.1 Wired connections	<p>Type C USB (cable included as standard): Connect to a PC to configure and update locator, and to retrieve Survey Measurements data</p> <p>3.5mm Stereo jack: Connect wired headphones</p> <p>Accessory port: Connect Radiodetection accessories</p>
6.2 Wireless connections	<p>2 x Bluetooth 2.0 – SPP profile, class 1</p> <p>1 x Bluetooth Low Energy 5.0</p>
6.3 iLoc remote transmitter control range ³	<p>Metric: Up to 450m</p> <p>US Customary: Up to 1400'</p>
6.4 iLoc remote transmitter control functions	<p>Set transmitter frequency</p> <p>Set transmitter power output level</p> <p>Transmitter standby</p> <p>SideStep</p>

7. Data capabilities

7.1 Survey measurement capacity	Up to 1,000 data records	
7.2 Link to external GNSS ('GPS')	<p>Over Bluetooth</p> <p>Connect to an external GNSS enabled device to combine survey measurements with that device's GNSS data on the external device</p>	
7.3 External GNSS position read-in to locator memory	Connect to an external GNSS device to read positional positioning from that device and combine with the locator's survey measurement data on board the locator ⁴	
7.4 Survey measurement data captured	<p>Standard data:</p> <p>Log #</p> <p>Survey Reference</p> <p>Antenna Mode Depth</p> <p>Current (mA)</p> <p>Frequency in use (Hz)</p> <p>Sonde/Line</p> <p>Signal Strength (dBuV and %)</p> <p>Signal Strength (%)</p> <p>Gain Setting (dB)</p> <p>Compass (deg)</p> <p>Arrow readout</p> <p>CD Phase (deg)</p> <p>Accessory Type</p> <p>Battery level</p> <p>Volume</p> <p>Overload Flag</p> <p>Date and Time</p> <p>Marker Type</p> <p>Marker Depth</p> <p>Marker Gain (dB)</p> <p>Marker Signal Strength (%)</p>	<p>With External GNSS Fix:</p> <p>GPS Mode</p> <p>GPS Date and Time</p> <p>GPS Distance (m)</p> <p>Latitude Angle (deg)</p> <p>Latitude Direction</p> <p>Longitude Angle (deg)</p> <p>Longitude Direction</p> <p>GPS Fix</p> <p>Satellites in use</p> <p>Horizontal Dilution</p> <p>Altitude Value (m)</p> <p>Altitude Units</p> <p>Geoid Value (m) and Units</p> <p>DGPS Time</p> <p>Time Reference</p> <p>GPS Mode</p> <p>GPS Date and Time GPS</p> <p>Distance (m) Latitude</p> <p>Angle (deg)</p>
7.5 Survey measurement export options	<p>RD Manager Online via USB</p> <p>Bluetooth – 'live' per measurement</p> <p>Bluetooth – batch export</p>	
7.6 Bluetooth survey measurement data protocol options	<p>PPP</p> <p>ASCII (choice of 3 formats)</p>	

8. Power options

8.1 Rechargeable	Custom Lithium-Ion (Li-Ion) battery pack
8.2 Battery run-time	<p>Li-Ion pack: 15 hours (50% duty cycle)*</p> <p>*Based on highest power marker, all features on. Battery run time will vary based on use of power marker, Bluetooth, backlight strength and other features.</p>
8.3 Charging options (Li-Ion pack)	<p>Mains charger: 100-250 Volts AC, 50/60 Hz</p> <p>Automotive charger: 12-24V DC</p>
8.4 Charging time (Li-Ion pack)	3 hours to 80% from empty with maintenance trickle charging thereafter
8.5 Charging temperature	<p>Metric: 0°C to 45°C</p> <p>US Customary: 32°F to 113°F</p>

9. Physical Characteristics

9.1 Design	Ergonomic, balanced and lightweight design for comfortable use during extended surveys
9.2 Construction	Injection Molded ABS Plastic
9.3 Weight	<p>With Lithium-Ion battery pack fitted:</p> <p>Metric: 2.0kg</p> <p>US Customary: 4.41lb</p>
9.4 Ingress Protection rating	<p>IP65*</p> <p>Protected against dust ingress and jets of water⁴ applied from any direction</p> <p>*The antenna loop is IP55 rated. Minimal dust ingress can occur, this does not affect performance</p>
9.5 Display type	High contrast custom made monochrome LCD
9.6 Audio options	<p>Built-in waterproofed speaker</p> <p>3.5mm headphone socket</p>
9.7 Operating temperature ⁵	<p>Metric: -10°C to 50°C</p> <p>US Customary: 14°F to 122°F</p>
9.8 Storage temperature	<p>Metric: -20°C to 50°C</p> <p>US Customary: -4°F to 122°F</p>
9.9 Unit dimensions	<p>Metric: 648mm x 350mm x 177mm</p> <p>US Customary: 25.5" x 13.8" x 6.9"</p>
9.10 Shipping dimensions	<p>Metric: 700mm x 260mm x 330mm</p> <p>US Customary: 27.6" x 10.9" x 15.6"</p>
9.11 Shipping weight (kit)	<p>Includes:</p> <ul style="list-style-type: none"> • MRX with lithium-ion battery • Mains charger + lead • MRX Bag • User guide • MRX box <p>Metric: 2.6kg</p> <p>US Customary: 5.7lb</p>

10. RD Manager Online Supporting PC Software

10.1 Operating System Compatibility	Microsoft® Windows® 10 onwards – 64-bit versions
10.2 Locator system compatibility	Radiodetection RD7200, RD8200, RD8200SG, MRX, MRX G and MRX SG Precision Locators
10.3 Functions	<ul style="list-style-type: none">• Locator configuration• eCert® remote calibration certification• Factory calibration certificate retrieval• Usage-logging data collation and export• User account management• Locator software update• Survey Measurement retrieval• Product registration for extended warranty
10.4 Data export formats	.csv for database and spreadsheet applications .xls / .xlsx for Microsoft® Excel®

11. Warranty and Maintenance

11.1 Manufacturer's warranty duration	3 years standard, on registration
11.2 Recommended calibration and maintenance schedule	Annual, or at the beginning / end of a lease period if earlier
11.3 eCert remote calibration	<ul style="list-style-type: none">• Remote calibration certification using an internet connection to Radiodetection• Recommended schedule: annual, or at the beginning / end of a lease period
11.4 CALSafe®	<ul style="list-style-type: none">• Can be enabled to prevent the locator operating when beyond a defined calibration / maintenance schedule• Disabled by default• 30-day countdown to calibration due date
11.5 Enhanced Self-Test	On-unit Applies test signals to locate circuitry to confirm correct operation, as well as the typical tests for screen and DSP functions. Recommended schedule: weekly, or before each use.
11.6 Storage recommendation	Store in a clean and dry environment. Ensure all terminals and connection sockets are clean, free of debris and corrosion and are undamaged
11.7 Cleaning	Clean with a soft, moistened cloth. Do not use <ul style="list-style-type: none">• Abrasive materials or chemicals• High pressure jets of water If using this equipment in foul water systems or other areas where biological hazards may be present, use an appropriate disinfectant.

12. Certification and Compliance

12.1 Standards	<p>CE Safety: EN 61010-1:2010 / A1:2019</p> <p>CE EMC: EN 61326-1:2021</p> <p>CE Radio: EN 301 489-3 V2.3.2 EN 301 489-17 V3.2.4 EN 300 330 V2.1.1 EN 300 328 V2.2.2</p> <p>CE SAR: EN 50566 EN 62479 IEC 62209-1528:2020</p> <p>ENV (Environmental): EN 60529 1992 A2 2013 EN 60068-2-64:2008 Test Fh ESTI EN 300 019-2-2:1999 (per table 6) EN 60068-2-27:2009 (Test Ea) EN 300 019-2-2:1999 (per table 6)</p>
12.2 European directives	<p>Radio Equipment Directive – 2014/53/EU Low Voltage Directive – 2014/35/EU EMC Directive – 2014/30/EU RoHS Directive – 2011/65/EU Battery Regulation – (EU) 2023/1542 Declaration of conformity is available from www.radiodetection.com</p>
12.3 Radio FCC, IC	<p>FCC EMC: 47CFR 15.107 47CFR 15.109 ICES-003 Issue 7, January 2020</p> <p>FCC RF: 47CFR 15.207 47CFR 15.209 RFC 15.247</p> <p>FCC SAR: FCC 47 CFR part 2 (2.1093)</p> <p>ISED SAR: RSS-102 Issue 5, March 2015</p>
12.4 Environmental	<p>WEEE compliant ROHS compliant Altitude: up to 5000m Outdoor use Wet location</p>
12.5 Manufacturing	ISO 9001: 2015

All specification are measured in test conditions, at 21°C / 70°F.

¹ Based on volumetric testing at a known fixed depth. True depth accuracy depends on factors such as ground composition, utility characteristics and the locate frequency / signal strength employed. Always follow local safe digging guidelines.

² The MRX will locate to greater depths in the right conditions, but depth accuracy will be compromised. Depth measurement will not be displayed beyond these depths.

³ Tested with clear line-of-sight. Range is dependent on electrical environment and weather conditions. For optimum range, face the locator toward the transmitter and raise the transmitter 2' / 60cm from the ground.

⁴ Water projected by a nozzle at a pressure of 30kPa / 0.3 bar / 4.4 psi in accordance with BS EN 60529 1992 A2 2013.

⁵ At very low temperatures, battery life will be degraded and measurement precision may reduce.

Our Mission

Provide best in class equipment and solutions, to prevent damage to critical infrastructure, manage assets and protect lives.

Our Vision

To be the world's leader in the management of critical infrastructure and utilities.

Our Locations



USA

Raymond, ME
Kearneysville, WV

Canada

Mississauga, ON



Europe

United Kingdom HQ
France
Germany
The Netherlands



Asia Pacific

India
Hong Kong
Australia

Visit: www.radiodetection.com Follow us on:    

Scan to see a full list of our office locations



Copyright © 2025 Radiodetection Ltd. All rights reserved. Radiodetection is a subsidiary of SPX Technologies. Radiodetection, eCert, TruDepth, SideStepauto, RD Manager Online, Peak+, Power Filters, StrikeAlert, CALSafe are either trademarks or registered trademarks of Radiodetection in the United States and / or other countries. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Radiodetection is under license. Microsoft Excel and Microsoft Windows are trademarks of the Microsoft group of companies. Google Earth and Android are trademarks of Google LLC. iOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license. Due to a policy of continued development, we reserve the right to alter or amend any published specification without notice. This document may not be copied, reproduced, transmitted, modified or used, in whole or in part, without the prior written consent of Radiodetection Ltd.