

**EN**Original Instructions  
Version 2 – January 2026

# DUST MASKS

**82480 - FFP1****82482/82483/82486 - FFP2  
82565/82566/82488 - FFP2****82489/82567, 82569 - FFP3  
21244 - FFP3**

## 1. Applications

**Important:** EN149:2001+A1:2009 single-use respirators against solid and liquid aerosols are classified according to one of three categories - FFP1, FFP2 and FFP3.

Check the category to which the respirator belongs to ensure suitable for your intended use - this is indicated on the packaging and on the respirator.

- **FFP1:** Protection against non-toxic solid and liquid aerosols (e.g. oil-mists) in concentrations up to 4 x MAC/OEL/TLV, [i.e. NPF = 4] or 4 x WEL, [i.e. APF = 4].
- **FFP2:** Protection against non-toxic and low-to-average toxicity solid and liquid aerosols (e.g. oil-mists) in concentrations up to 12 x MAC/OEL/TLV, [i.e. NPF = 12] or 10 x WEL, [i.e. APF = 10].
- **FFP3:** Protection against non-toxic, low-to-average toxicity and high toxicity solid and liquid aerosols (e.g. oil-mists) in concentrations up to 50 x MAC/OEL/TLV, [i.e. NPF = 50] or 20 x WEL, [i.e. APF = 20].

**\*NOTE:**

MAC = Maximum Admissible Concentration  
TLV = Threshold Limit Value  
WEL = Workplace Exposure Limit

OEL = Occupational Exposure Limit.  
NPF = Nominal Protection Factor.  
APF = Assigned Protection Factor.

## 2. Health & Safety Information



**WARNING! Failure to follow all instructions and limitations on the use of this product could reduce the effectiveness of the mask and result in sickness or death.**

- Never alter or modify this mask in any way.
- Only designed for single use and up to 8 hours. Do not use if damaged, clogged or removed in a contaminated area.
- Inspect the mask for damage before use and if damaged do not use.
- Keep the mask in the packaging until required for use.
- Use only in adequately ventilated areas.
- Do not use in explosive atmospheres.
- Store in a dry, warm and frost-free area.
- Keep out of direct sunlight and away from solvents.

### 3. Using the Mask

---

1. Remove the mask from the packaging.

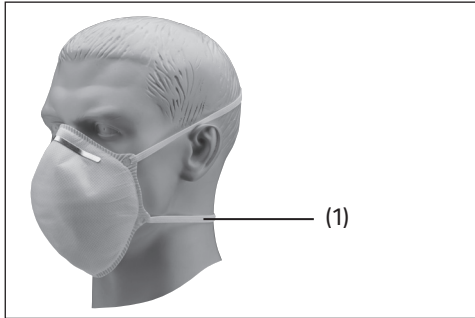


Fig. 1

2. Open the folded mask and place the lower strap over your head (1).

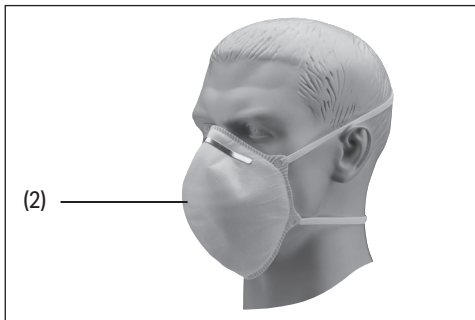


Fig. 2

3. Place the mask over your mouth and nose (2).

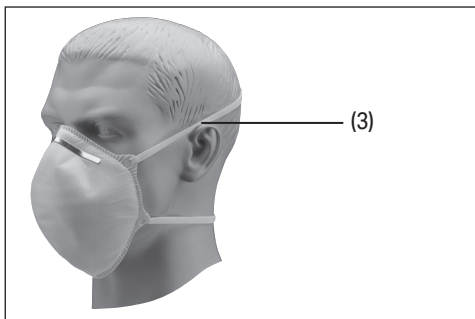


Fig. 3

4. Position the upper strap over and to the back of the head (3).

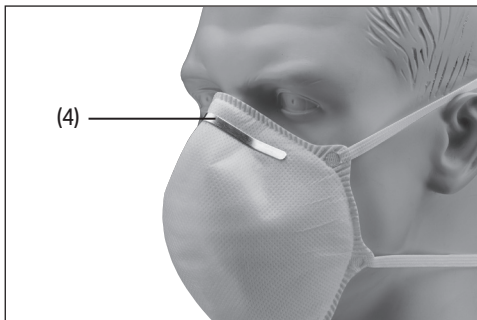


Fig. 4

5. Squeeze the nose bar around your nose (4).

- Ensure a good seal is created around the mask.

## 4. Explanation Of Symbols

---



Read the instruction manual

**D**

This respirator passes the optional Dolomite clogging test for more comfortable breathing



**Warning!**

**NR**

This respirator is limited to single shift use only (with a maximum of 8 hours) and shall not be re-used

## 5. Notified Body

---

BSI GROUP THE NETHERLANDS  
John. M. Keynesplein 9  
1066 EP Amsterdam  
Netherlands

**Notified Body Number: 2797**

BS EN 149:2001+A01:2009

## Contact Details

### **Draper Tools Limited**

Hursley Road  
Chandler's Ford  
Eastleigh  
Hampshire  
SO53 1YF  
UK

**Website:** [drapertools.com](http://drapertools.com)

**Email:** [sales@drapertools.com](mailto:sales@drapertools.com)

**Product Helpline:** +44 (0) 23 8049 4344

**Telephone Sales Desk:** +44 (0) 23 8049 4333

**General Enquiries:** +44 (0) 23 8026 6355

### **Draper Tools Europe B.V.**

Oude Graaf 8  
6002 NL  
Weert  
Netherlands

Please contact the Draper Tools Product Helpline for repair and servicing enquiries.