



Megger 

WWW.MEGGER.COM

Application Note

OTS vessel preparation and elimination of the effects of moisture and contamination

Megger is a registered trademark

OTS Vessel Preparation and elimination of the effects of moisture and contamination

Author Paul Swinerd

Date June 2013

Email tsg@megger.com

When unexpected results are experienced in testing the dielectric breakdown of oil samples the cause can often be traced to insufficient attention to one or more of the following key elements of vessel preparation:

1. Storing and subsequent cleaning
2. Setting the Electrode Gap
3. Ensuring thorough rinsing of the test vessel and then immediately filling the vessel with the oil sample to be tested.
4. Exclusion of all air from contact with the oil sample and prevention of air/moisture contamination; (particularly relevant when using an impeller to stir the insulating oil sample).
5. Selecting the optimum stirring option for the insulating oil sample and test standard required.

Any of these elements have the potential to cause an un-expected drop in breakdown voltage level. Therefore it should be verified that each aspect has been properly considered and implemented.

Taking each of these elements in turn:-

1. Storing and subsequent cleaning



Figure 1

IEC 60156 recommends that a separate test vessel assembly is used for each type of insulating fluid that it is to be tested. The standard requires that the test vessels are filled with dry insulating fluid of the appropriate type, then covered and stored in a dry place.

ASTM offers an alternative option of storing the vessels empty in dust-free cabinet. Immediately prior to testing, vessels stored full of oil must be drained and all internal surfaces, including the

electrodes, rinsed with fluid taken from the sample to be tested.

The vessel should then be drained again, and carefully filled with the test sample, taking particular care to avoid the formation of bubbles. If the vessel was stored empty, or if it is to be used for a different type of fluid from that with which it was filled during storage, it should be cleaned with an appropriate solvent before rinsing and filling.

ASTM D1816 specifies the use of a dry hydrocarbon solvent such as kerosene, which meets the requirements of D235.

Solvents with a low boiling point should not be used as these evaporate rapidly, cooling the vessel and giving rise to the risk of condensation. Solvents commonly used include acetone and, in the USA, toluene. Toluene is banned in Europe.

Use lint-free clean-room wipes to clean the vessel. Do not use paper towels as they may introduce particles that hold moisture, causing breakdown values to be dramatically reduced.

Touching the electrodes or the inside of the vessel should be avoided and during cleaning, the electrodes should be checked for pitting or scratches that may cause breakdown voltage values to be decreased. Remember that the rules of cleaning apply to all parts that will come in contact with the oil sample during testing.

2. Setting the electrode gap



Figure 2

Setting the electrode gap accurately is very important; the results obtained are only valid if the gap is correct. A big problem is movement of the electrodes after the gap has been set and for this reason, many users of oil test sets check the electrode gap frequently – sometimes before every test. A better solution is to use test sets where the electrodes can be locked in position, such as the instruments in Megger's latest OTS range.

Megger recommends the use of flat, smooth gap gauges. The latest Megger gauges have a black anodized coating, which not only provides a smooth surface but also shows when the gauge is worn, as the shiny aluminium starts to show through the coating.

3. Rinsing and then immediately filling the test vessel with the insulating fluid sample

Prior to filling the test vessel it is important to rinse the vessel with clean oil or with some of the sample oil about to be tested. Rinsing should always be performed before each test, even if performing repetitive testing in an oil test laboratory.

Remember that when rinsing the vessel, equal attention should be given to any magnetic bead, impeller, baffle plate, lid and to the electrodes, not just the vessel walls. Rinsing should be applied to any surfaces that will come in contact with the oil sample during testing.

After rinsing the test vessel with the sample oil it is most important to ensure it is immediately filled with the oil sample to be tested. Any significant delay, (even a few minutes), may result in the oil film on the vessel's walls absorbing water from the air; since the walls have a large surface area, this is likely to contaminate the oil sample and reduce the breakdown voltage once it has been mixed with the sample.

Just 30 parts per million, (ppm), of water is sufficient to halve the breakdown values.

In fact, ASTM D1816 specifies that the test vessel must be filled with the oil sample within just 30 seconds of the rinsing taking place.

When filling, pour the oil sample into the vessel swiftly but with minimum turbulence so as not to entrap air.

Allow the sample to stand for a few minutes before testing to allow air bubbles to clear.

However is important not to leave the sample to stand for longer than absolutely necessary as it may absorb water from the air in the headspace above it, again reducing the breakdown voltage. As soon as the bubbles have cleared the baffle/lid should then be fitted to exclude air contact as below.

- Excluding air from circulating oil when using an impeller to stir the insulating fluid sample



Baffle plate must come in contact with the oil


Figure 3

If you are using an impeller stirrer that utilises a baffle plate to exclude air from the oil sample, ensure that oil does not pass over the upper surface of the baffle plate.

It is also important that the oil sample is in full contact with the underside of the baffle plate.

This will prevent moisture being absorbed from the contact of circulating oil with air as intended by the test standard.

- Fill the test vessel slowly and down the side wall as not to cause splashing that will introduce unwanted air bubbles into the test sample
- Fill the test vessel to the 400ml fill line, DO NOT OVERFILL (see figure 4)
- Gently place the stirrer lid onto the test vessel so that the baffle plate contacts the oil slowly, again so not to cause splashing that will introduce unwanted air bubbles into the test sample
- Periodically remove baffle plate from the stirrer lid and clean thoroughly.

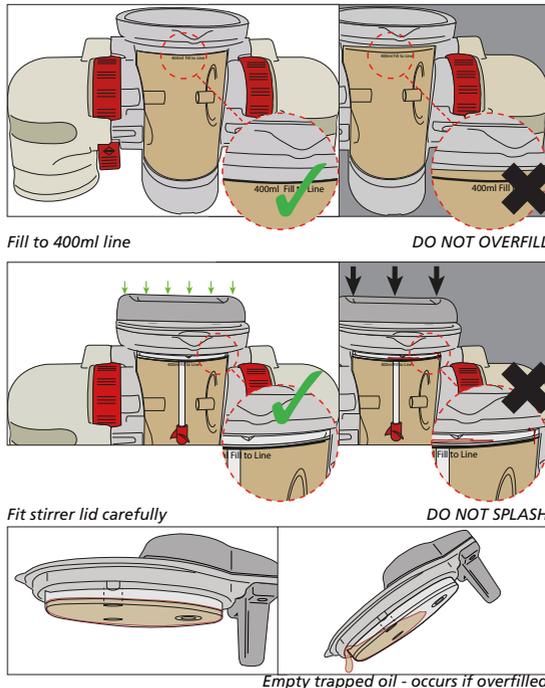

Fill to 400ml line

DO NOT OVERFILL

Fit stirrer lid carefully

DO NOT SPLASH

Empty trapped oil - occurs if overfilled

Figure 4 Filling the test vessel

4. Selecting the optimum stirring option for the insulating oil sample to minimise air/moisture contamination

When testing to IEC 60156:

IEC 60156 allows the optional use of a stirring impeller, the use of a magnetic bead stirrer or even no stirring at all. The standard states that differences between tests with or without stirring have not been found to be statistically significant. The use of a magnetic stirrer is only permitted when there is no risk of removing magnetic particles from the oil sample under test. When oil is used as a coolant as well as an insulator it may be useful to stir the sample during testing. For example oil from a transformer is normally circulated in use to help cool the transformer, but in doing so might also pick up contaminants and debris with it; so to achieve the most realistic breakdown results an oil sample taken from such a device would normally be stirred during test to ensure the best chance of detecting any detrimental effects of particle contamination. Oil from a circuit breaker is normally static in use, so particles would naturally fall to the bottom where they are unlikely to cause a problem. So in static use applications, an oil sample would not usually be stirred during testing.

The use of a magnetic bead for IEC60156 is recommended where possible as oil will circulate in the lower portion of the test vessel, whereas the impeller will circulate all of the oil in the test vessel. The magnetic bead therefore has the advantage that any moisture absorbed by oil in contact with air is not stirred into the sample, avoiding unwanted contamination. If the impeller is used it is vital that air is prevented from coming into contact with the surface of the oil by fitting the baffle plate and ensuring that the oil level is sufficient to make contact with the bottom surface of the plate without flowing over its top surface.

When testing to ASTM D1816:

ASTM D1816 specifies that the oil is stirred throughout the test sequence, and a two bladed motor-driven impeller is specified. The standard prescribes the impeller dimensions and pitch as well as the operating speed, which must be between 200 rpm and 300 rpm. But remember, with this stirring requirement it is vital that air is prevented from coming into contact with the oil as described above.

When testing to ASTM D877:

ASTM D877 does not specify oil sample stirring.

IMPELLER OPTIONS

Most impellers supplied to stir oil samples are a compromise to comply as close as possible with the requirements of both the IEC and ASTM test standards.

Megger, however, supplies a range of impellers to optimise the stirring set-up.



Figure 5 Impellers

Megger supplies as standard with the stirrer lid assembly three impellers. Firstly there's the large red impeller which is useful for very dirty oil. This has larger blades to help ensure the effective circulation of any particulates between the electrodes during the test so that the full potential of their effect on breakdown voltage may be assessed.

The other two impellers are alternative impellers. The Impeller on the left is optimised for IEC 60156, whilst the one on the right is ideal for ASTM D1816.

Vigorous circulation can exacerbate the inclusion of any moisture captured on the surface film of oil left behind after rinsing at the vessel preparation stage, making the need for rapid filling even more critical, so as not to detrimentally affect breakdown results.

ORDERING INFORMATION:

The alternative impellers are supplied with the OTS super-user kit 1007-467

Included accessories

- Vessel 400 ml assembly
- Vessel 150 ml assembly
- Stirrer lid assembly with red impeller
- ASTM alternative propeller shaft assembly
- IEC alternative propeller shaft assembly
- The Megger guide to insulating oil dielectric breakdown testing booklet
- Carry case

ASTM alternative propeller shaft assembly	1007-153
IEC alternative propeller shaft assembly	1007-154
Electrodes - Spherical (pair)	6220-484
Electrodes - Mushroom (pair)	6220-580
Electrodes - Cylindrical (pair)	6220-483
Electrodes - Non-standard cylindrical with 0,5 mm edge radius (pair)	6220-538
Electrode gauge set 1, 2, 2.5, 2.54 mm	1002-144
Stirrer lid update kit	1009-768

Includes

- New improved baffle plate
- Screws x2
- ATSM and IEC alternative impellers

Oil dielectric breakdown voltage testing can provide a quick, first line evaluation of the condition of insulating oils. However, cleanliness, and good preparation is key to obtaining accurate and meaningful test results. Information on the Megger range of test instruments can be found on the Megger website www.megger.com

Further information can be found on the Megger booklet “**The Megger guide to insulating oil dielectric breakdown testing**”, part number 2003-149.

SALES OFFICE

Megger Limited
Archcliffe Road Dover
CT17 9EN England
T +44 (0) 1304 502101
E UKsales@megger.com

OTS Vessel Prep-2007-993_AN_en_V04

www.megger.com
ISO 9001:2008
The word 'Megger' is a registered trademark

Megger[®]