
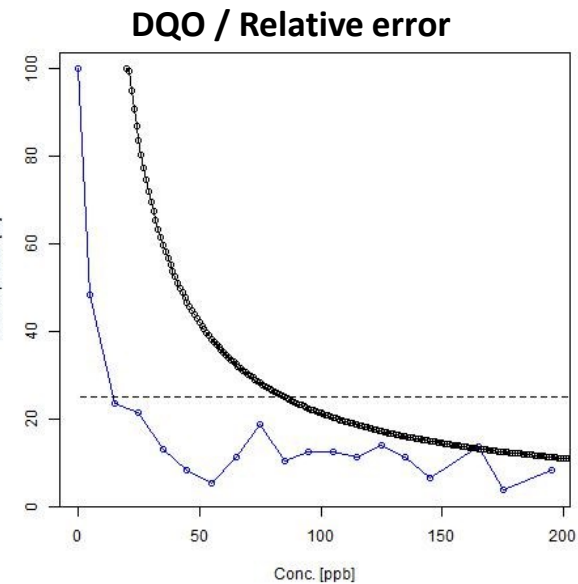


Comments: Excellent correlation between KUNAKAIR and reference instrument with similar daily trends and same average concentration detected over the whole test period.


In yellow color are some moments over the test period where data from reference instrument is missing.

Version: KUNAKAIR V2.



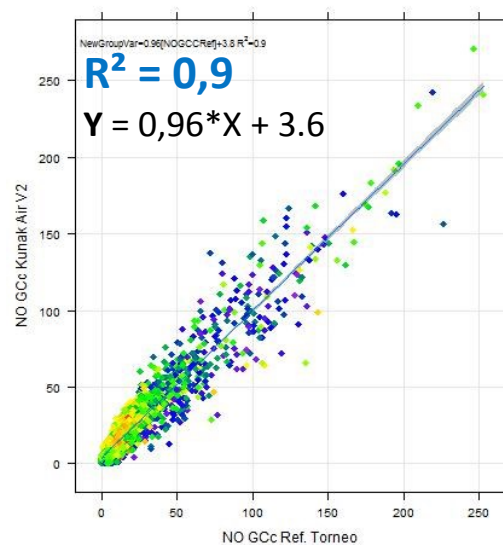


NITROGEN MONOXIDE (NO), SEVILLA (Spain), JAN-MAR'18

Time variation of Kunak Air V2 and Ref. Torneo : NO GCc

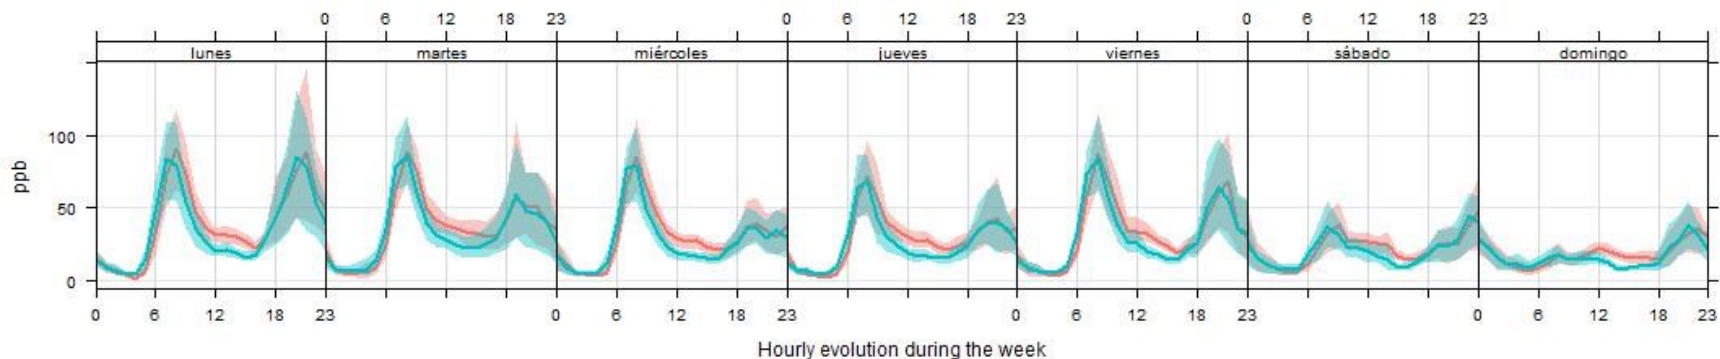

NO GCc Kunak Air V2 NO GCc Ref. Torneo

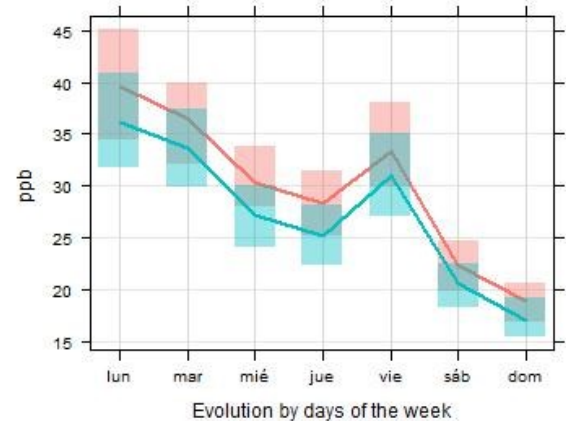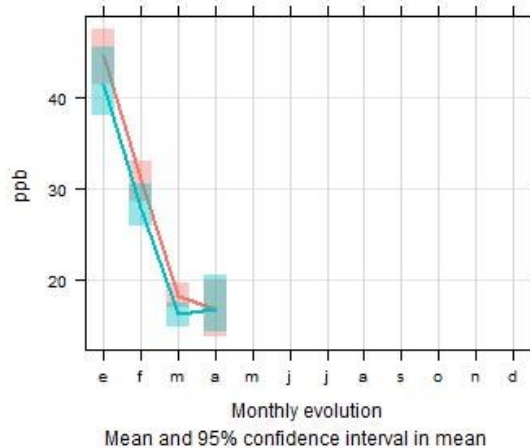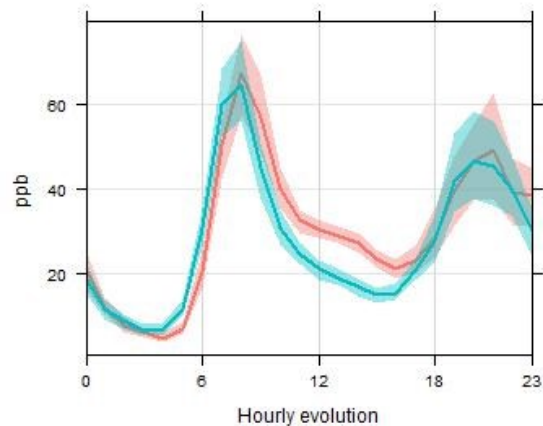

R ²	ACCY (PPB)	90% CONF. (PPB)	DOQ (PPB)	AVG. GC. REF (PPB)	AVG. GC. DUT (PPB)	AV REF/DUT
0,9	7,32	15,8	82	27,32	29,99	87% / 100%