


PRODUCT SPECIFICATION

SUMMARIZE

Welcome to use PX series DMX512 decoder & driver. PX series adopt the advanced micro-computer control technology and converted the DMX512/1990 digital signal widely used in international to the analog control signal. 1~4 channels output for option and each channel able to achieve 256 gradations of controlling. It is mainly used for the controlling of buildings & lights applied LED.

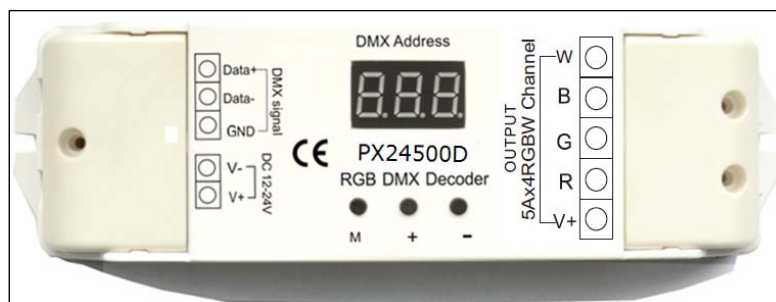


FEATHERS

- ◆ Meets DMX512/1990
- ◆ With 4 channels output and Max.5A/CH output
- ◆ Decoder can Diagnose & Indicate DMX512 signal status(Not Connected, Pause, Normal), easy for using
- ◆ Can set the DMX address more easily by Keys
- ◆ With the light color selected mechanism, and be able to control the light with 1~4 colors
- ◆ 256-level brightness,full-color control,with control system,can express perfect effect
- ◆ Use Logarithmic dimming curve, smooth dimming effect
- ◆ For customer setup and use easily, the default address code is 1

TECH. CHARACTERISTICS

Decode CH.:	4CH
Input Signal:	DMX-512/1990 digital signal
Output Signal:	can drive 5A max(Each CH.)
Power Supply:	DC 12~24V
Power Dis.:	<1W
Power Output:	<480W(24V);<240W(12V)
Operating Temp.:	-20~50℃
Size:	168(mm)*51(mm)*22(mm)
Weight:	160g

Appearance

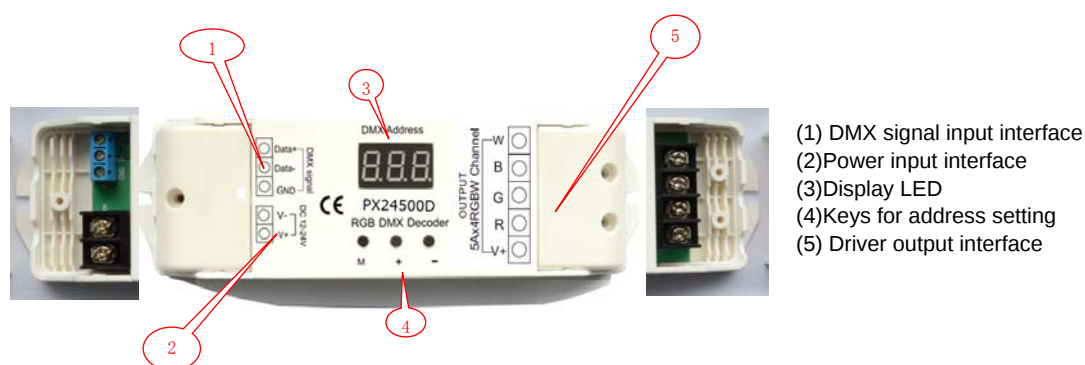

Interface Introduction

- ◆ DMX signal interface
Please put attention on the polarity of DMX Signal. if DMX signal isn't connected correct, follows error will display
1, The DMX signal is not properly connected, current address and --- will be displayed on LED by loop and interval 2S;
2, The DMX signal is paused, current address and P will be displayed on LED by loop and interval is 2S;
3, The DMX signal is normal, current address be displayed only;
 - ◆ Power input interface
DC 12-24V input, supply power for decoder and the lamps it takes.
 - ◆ Address setting keys
Address can be saved automatically, address can be recovered when next power on
1, Key "M", used to lock or unlock address setting function, normally address can't be setting. When long press this key for 3 seconds, the dot in the bottom right of LED will be on, used to indicate unlocked, you can change the address after setting address, long press the M key 2S or do not press any button 5S, the dot will be off, indicating that the address code is locked and can not be modified
2, Key "+", used for add address number, short press address add 1 each time, long press address will be changed very fast, reduce setting time, the maximum address is 511
3, Key "-", used for minus address number, short press address minus 1 each time, long press address will be changed very fast, reduce setting time, the minimum address is 0
Remark: The default address code is 1
 - ◆ Driver output interface
Common anode, V+ and R, G, B, W interface, can drive kinds of RGBW module or single-color module, Can regulate output current according to the actual load.
- Remark:
- Connect the anode and RGBW wire of common anode RGBW module to the output interface of decoder directly;
Connect the anode wire of single-color module to V+ on decoder, and connect the cathode wire to one of RGBW pin according to the LED's color; Connect several colors single-color module to one decoder, please connect their anode wires to V+ pin on decoder.