

IMPORTANT

Clean this product using hot soapy water. If a disinfectant is required, a plain, unscented bleach may be added to the water. Use only the recommended dilution rate. Any other cleaning medium could result in chemical attack which would adversely affect this product.

W.C. Seat Installation Instructions

CUSTOMER CARE HELPLINE


0870 1296085

FAX LINE 01482 499611

email : ukcustcare@IdealStandard.com


We pursue a policy of continuing improvement in design and performance of our products. The right is, therefore, reserved to vary specifications without notice

Concealed Hole Fixing Plastic Hinge

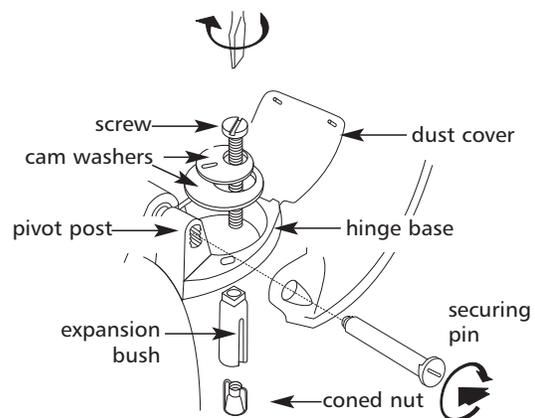

1. Position hinge base with pivot post between seat and cover pivot bases and align holes.
2. Insert securing pin using a screwdriver, easing slowly and clockwise.
3. Repeat 1 & 2 at other side.
4. Assemble hinge bases with screws and cam washers. Locate top of expansion bushes into underside of smaller cam washers and retain by inserting screws and loosely tightening the coned nuts to engage the "wings" in the expansion bush slots. These allow a multiple variation of seat fixing positions. Insert into hinge bases and rotate to desired position.
5. Tighten securing screws with a screwdriver.
6. With the cover up and seat down press firmly to give positive contact of all seat buffers with the WC's rim.
7. Snap over hinge dust covers.


Concealed Hole Fixing Quick Release Hinge

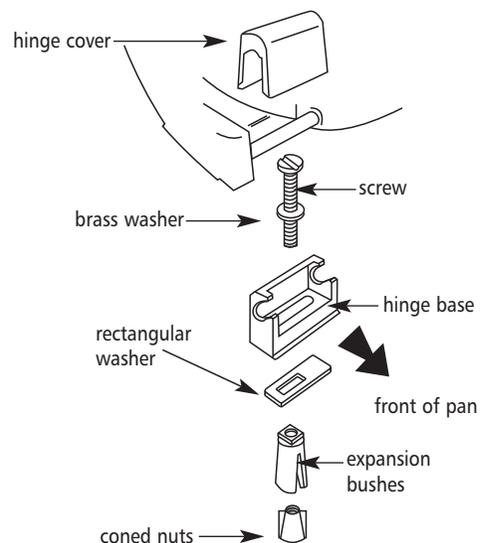

1. Locate top of expansion bushes into underside of hinge base and retain by inserting screws through washers, hinge bases and rectangular washers, then loosely tightening the coned nuts to engage the "wings" in the expansion bush slots.
2. Push the assembled components into the fixing holes in the WC, with the slots in the hinge base facing the front of the pan and loosely tighten the fixing screws.
3. Holding the seat cover, check the position of the hinge bases in relation to the seat rod before securely tightening the fixing screws.
4. Holding the seat cover upright, locate the seat rod into the hinge base.
5. Locate ribs in hinge covers into slots inside of hinge bases and push into position.


The seat and cover can be removed for Cleaning. Gently lever off the covers with a screwdriver before pulling the seat and cover from the hinge base.

Exposed Fixing Plastic Hinge

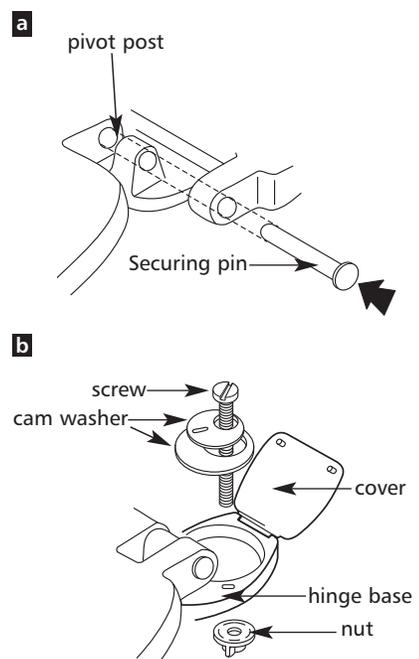

1. Where buffers are supplied loose, push buffers firmly into seat and cover before assembly, (these are a tight fit and it may be necessary to ease in the sides with a screwdriver blade or similar).
2. Position hinge base with pivot post between seat and cover pivot bases and align holes.
3. Insert securing pin.
4. Repeat 1 & 2 at otherside. See, (a)
5. Assemble hinge bases with screws and cam washers. These allow a multiple variation of seat fixing positions. Insert into hinge bases and rotate to desired position.
6. Tighten nuts whilst retaining securing screw with screwdriver. See, (b)
7. With the cover up and seat down press firmly to give positive contact of all seat buffers with the WC's rim.
8. Snap over hinge dust covers

Concealed Hole Fixing Metal Pillar Hinge

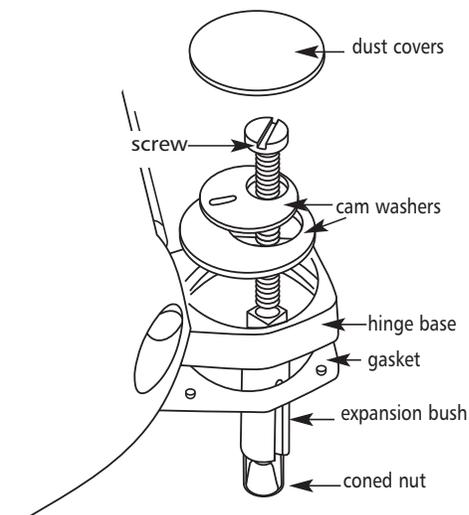

1. Place the seat onto the WC with the pillar hinge bases and gaskets over the seat fixing holes.
2. Assemble hinge bases with screws and cam washers. Locate top of expansion bushes into underside of smaller cam washers and retain by inserting screws and loosely tightening the coned nuts to engage the "wings" in the expansion bush slots. These allow a multiple variation of seat fixing positions.
3. Tighten securing screws with a screwdriver
4. Push chrome dust covers into position