

(B) (C) (D) (E) (F) (G) (H)


- PART A: SEAT UNIT (QUANTITY 1)  
(PART A IS NOT SHOWN)
- PART B: PSU (QTY 1)
- PART C: SCREW PACK (QTY 1)  
(PART C CONTENTS: 4x SMALL SCREWS, 2x LARGE SCREWS, 1x LARGE ALLEN KEY AND 1x SMALL ALLEN KEY)
- PART D: SEAT LEG (QTY 5)
- PART E: FOOTSTOOL POST (QTY 1)
- PART F: SEAT POST (QTY 1)
- PART G: FOOTSTOOL CUSHION (QTY 1)
- PART H: FOOTSTOOL LEG (QTY 4)

**STEP 1:**

Remove all packaging from the parts


**STEP 2:**

Loosen the screws on SEAT POST (PART F) using the allen keys provided. Put the screws through the holes on the SEAT LEGS (PART D) and attach to the SEAT POST using the allen key provided (see photograph below). Do this for all 5 legs.

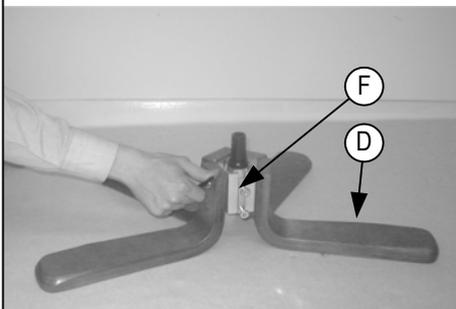

**STEP 3:**

Using the hole in the bracket underneath the seat, place the SEAT (PART A) so it is sat on the SEAT POST (PART F).

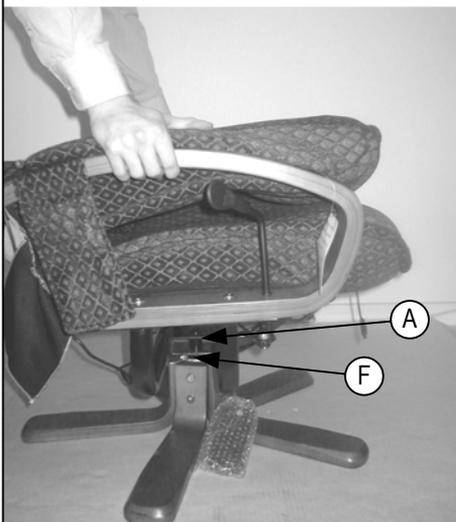


**STEP 4:**

Tilt the seat back by pulling upwards on the seat back until it is approximately upright.




**STEP 5:**

Tilt the seat back until the hole on the seat back is lined up with the hole on the bracket (bracket is shown by white arrow on photograph). Take one of the two large screws from the SCEW KIT (PART C) and insert in to the hole. Secure with the allen key provided and repeat the process for the other side of the chair. Connect up the two white connectors (shown by black arrow) then zip up the fabric at the back of the chair.

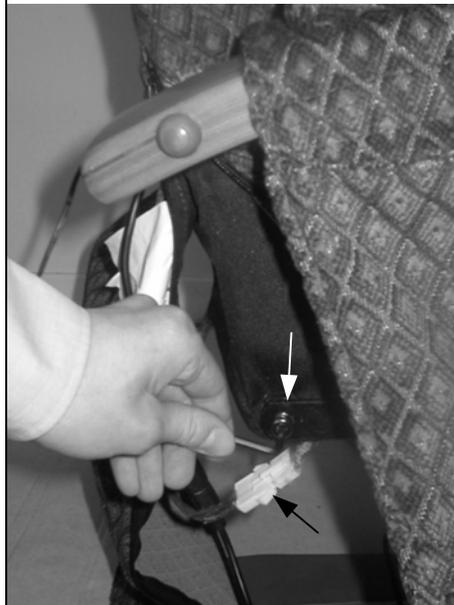


**STEP 6:**

Get a FOOTSTOOL LEG (PART H) and slide in to the slot in the FOOTSTOOL POST. Slide the leg in to the slot using the space between the metal bracket and wooden leg on PART H (see photograph). Tighten the two screws on PART H to secure. Repeat this process for all 4 legs.

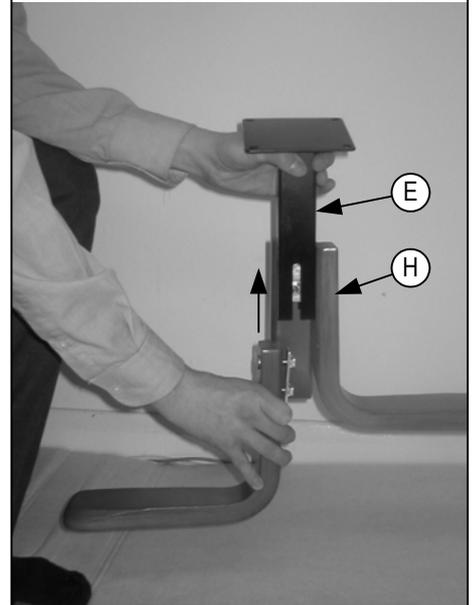

**STEP 7:**

Attach the FOOTSTOOL POST (PART E) to the FOOTSTOOL CUSHION (PART G) as shown in the photograph below, using the 4 small screws from PART C and the allen key provided.

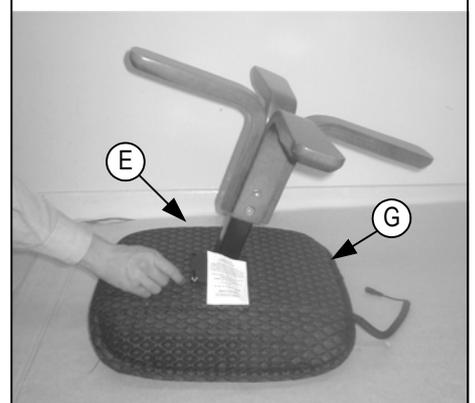

**STEP 8:**

The seat and footstool are now assembled. Connect the black coiled cable from the footstool to the black cable at the front of the seat.

**STEP 9:**

Connect the cable from the PSU (PART B) to the cable coming from the back of the seat. Plug in the PSU and switch on at the mains.

**STEP 10:**

Refer to the user manual for operating instructions before using the massage chair.

# MC001 INSTALLATION INSTRUCTIONS