

SAMUEL HEATH

Product Data Sheet

T2002 & T2005 Trim To Suit V135-IS & V135-AIS



T2002-TCTR

A vertical rectangular trim plate with three circular knobs arranged vertically. Each knob has a small arrow pointing to the right.	A vertical rectangular trim plate with three circular knobs arranged vertically. Each knob has a small arrow pointing to the right.	A vertical rectangular trim plate with three circular knobs arranged vertically. Each knob has a small arrow pointing to the right.	A vertical rectangular trim plate with three circular knobs arranged vertically. Each knob has a small arrow pointing to the right.
T2002-TCBA	T2002-TCGR	T2002-TCOL	T2002-TCOR

A vertical rectangular trim plate with three circular knobs arranged vertically. Each knob has a small arrow pointing to the right.	A vertical rectangular trim plate with three circular knobs arranged vertically. Each knob has a small arrow pointing to the right.	A vertical rectangular trim plate with three circular knobs arranged vertically. Each knob has a small arrow pointing to the right.
T2002-TCOX	T2002-TCPR	T2002-TCTL





T2005-TCTR



A horizontal rectangular trim plate with three circular knobs arranged horizontally. Each knob has a small arrow pointing to the right.	A horizontal rectangular trim plate with three circular knobs arranged horizontally. Each knob has a small arrow pointing to the right.	A horizontal rectangular trim plate with three circular knobs arranged horizontally. Each knob has a small arrow pointing to the right.	A horizontal rectangular trim plate with three circular knobs arranged horizontally. Each knob has a small arrow pointing to the right.
T2005-TCBA	T2005-TCGR	T2005-TCOL	T2005-TCOR

A horizontal rectangular trim plate with three circular knobs arranged horizontally. Each knob has a small arrow pointing to the right.	A horizontal rectangular trim plate with three circular knobs arranged horizontally. Each knob has a small arrow pointing to the right.	A horizontal rectangular trim plate with three circular knobs arranged horizontally. Each knob has a small arrow pointing to the right.
T2005-TCOX	T2005-TCPR	T2005-TCTL



Dimension Key
T2002-TCBA

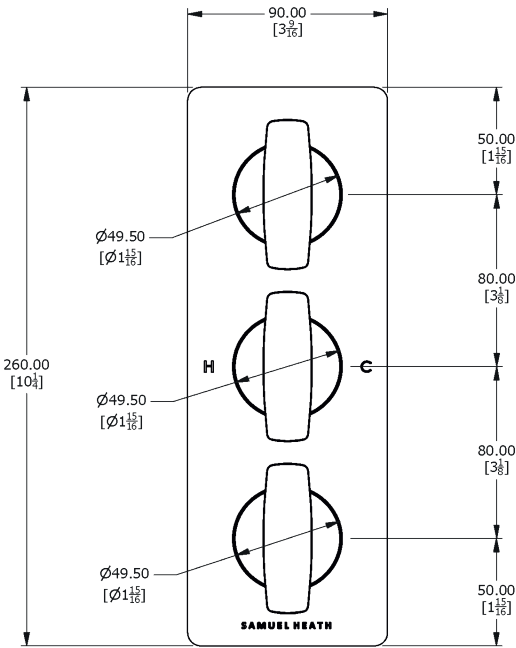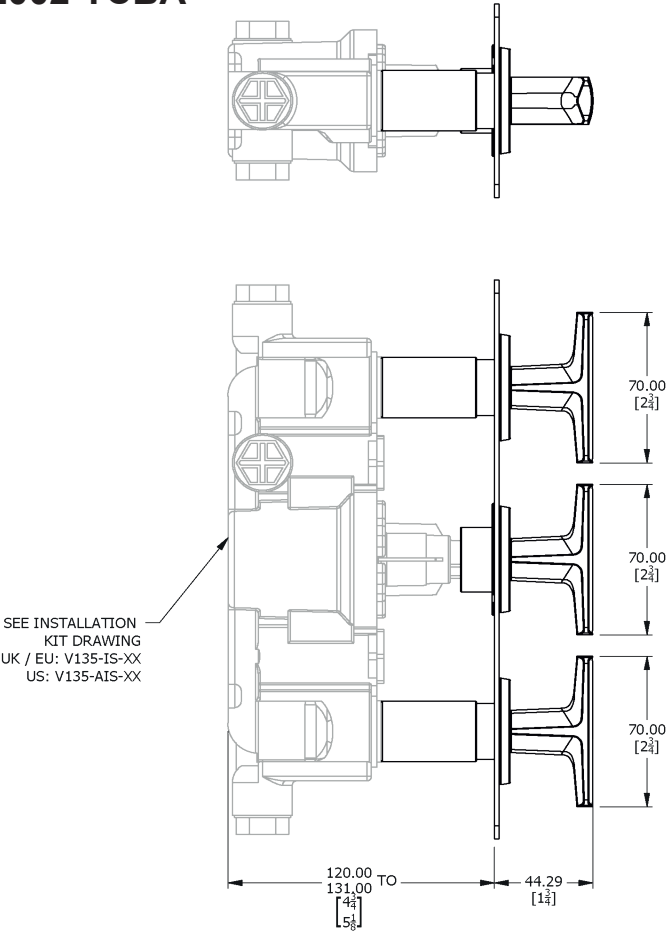



T2002-TCGR

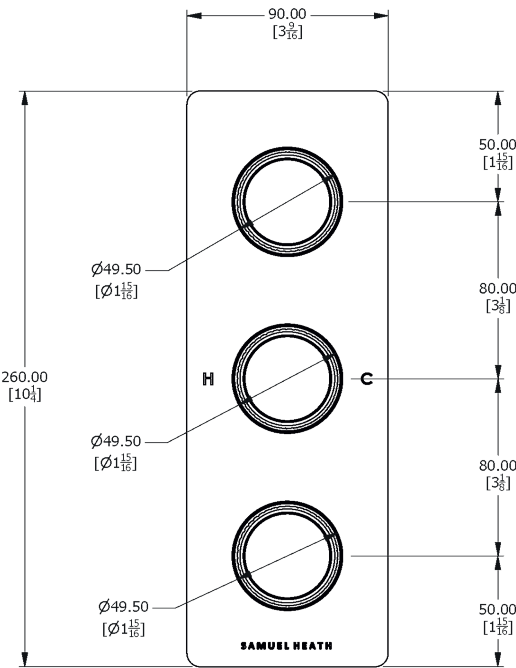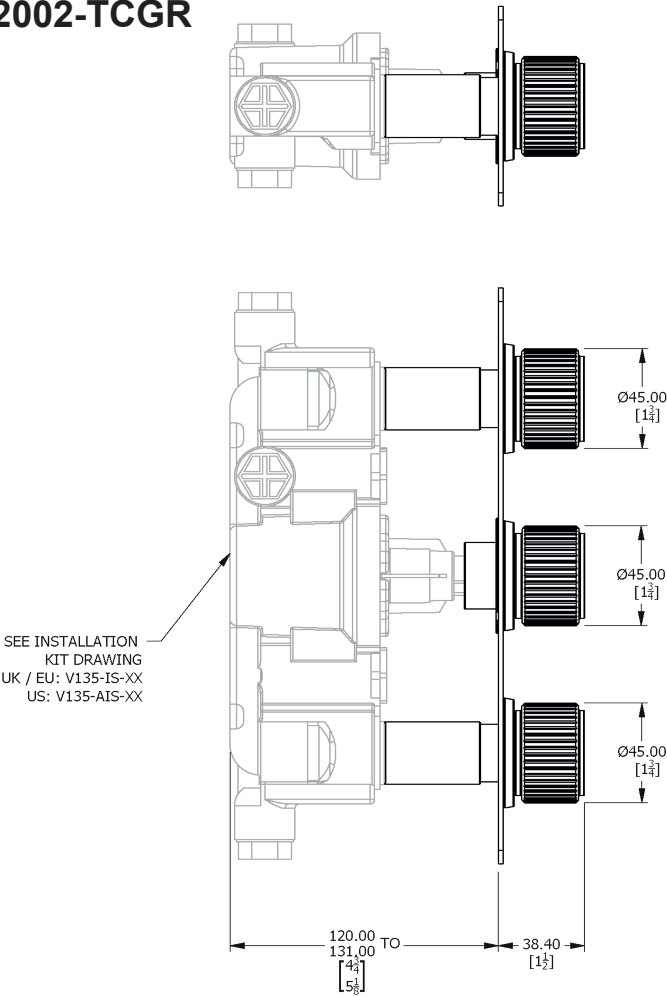

T2002-TCOL

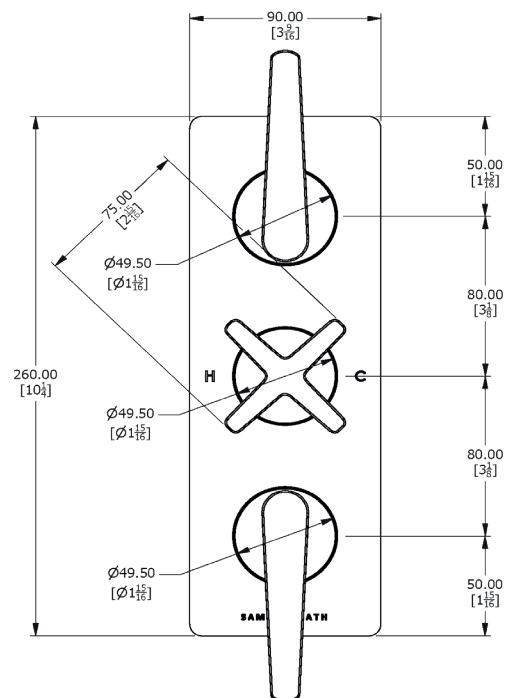
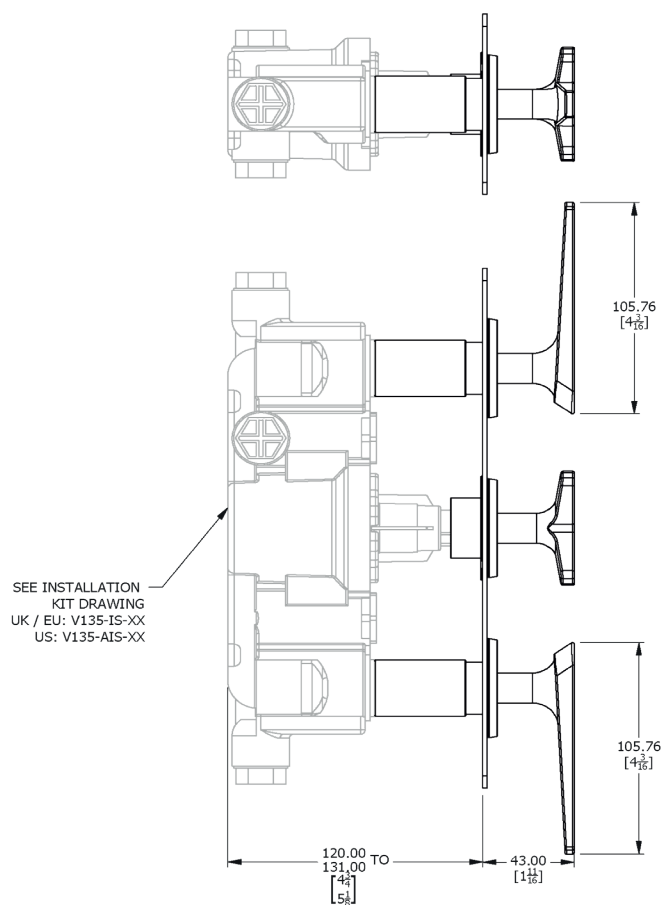


T2002-TCOR

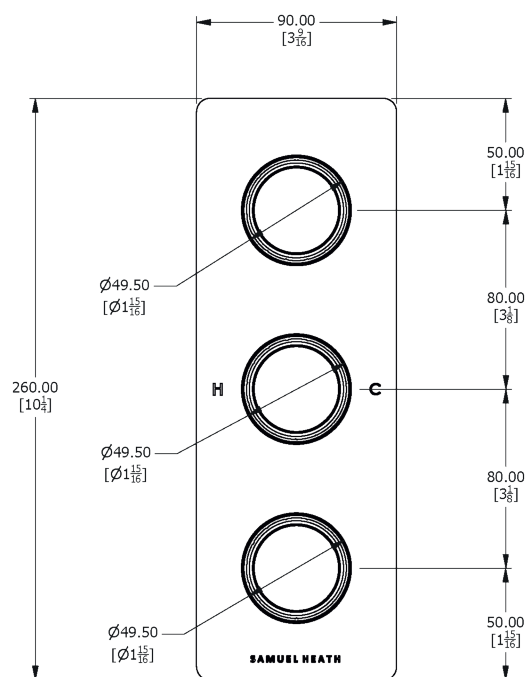
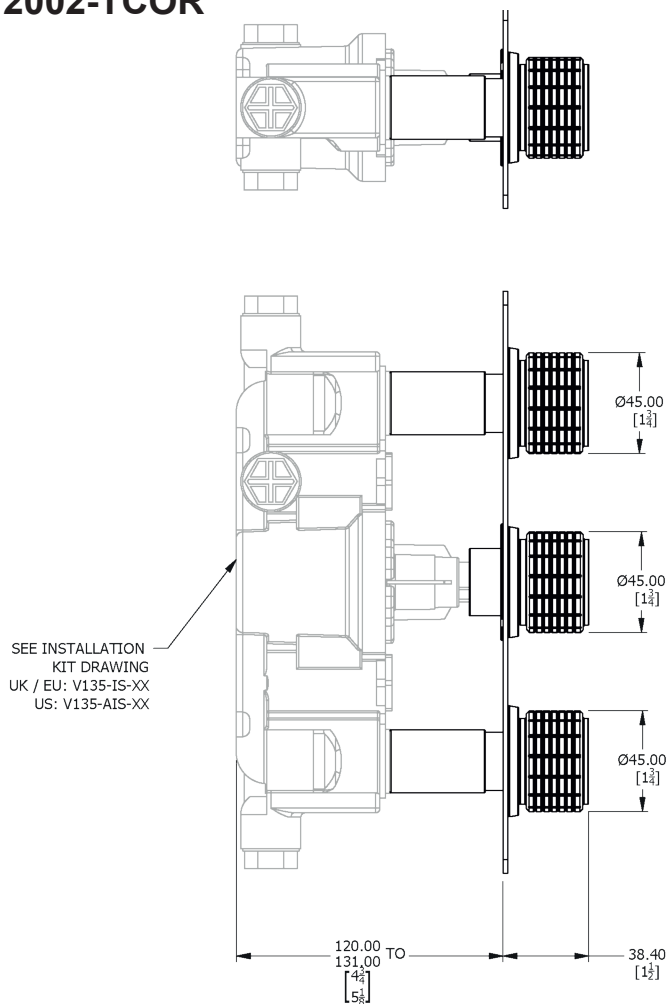


Dimension Key

T2002-TCOX

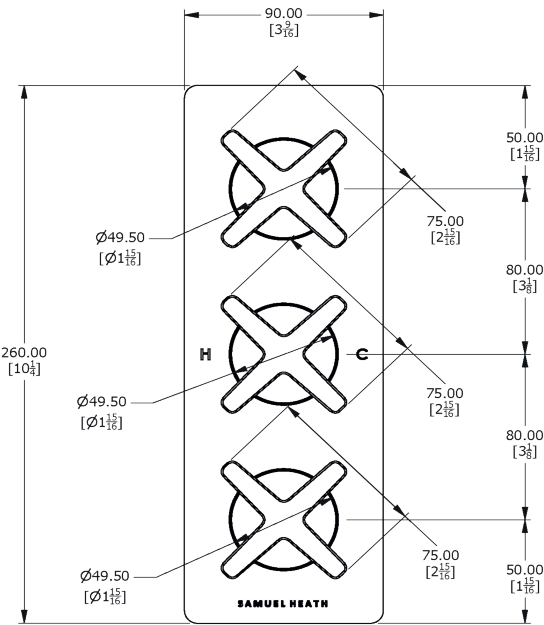
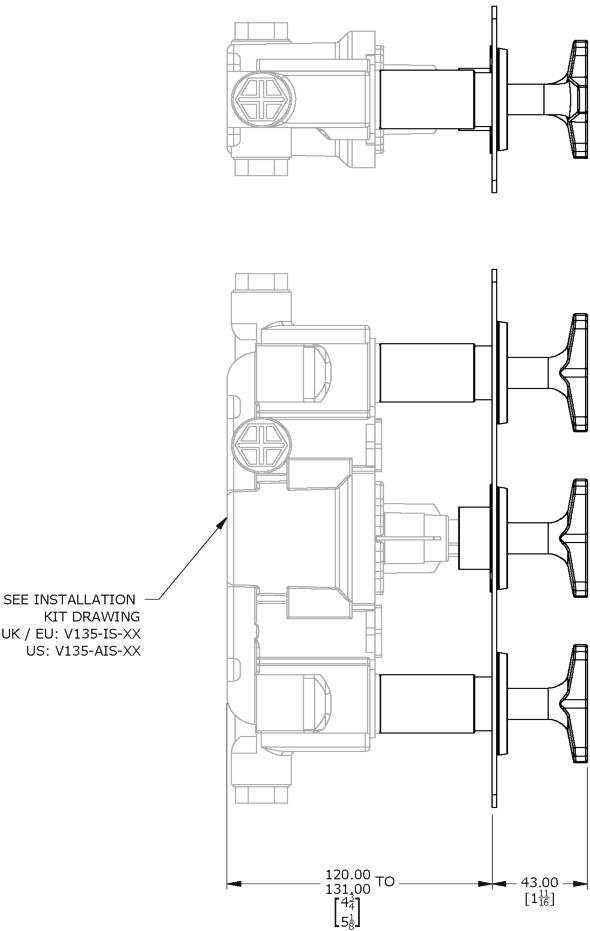


T2002-TCPR

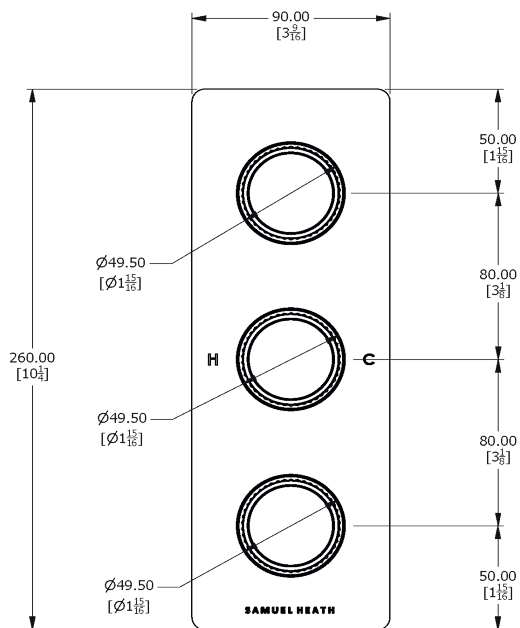
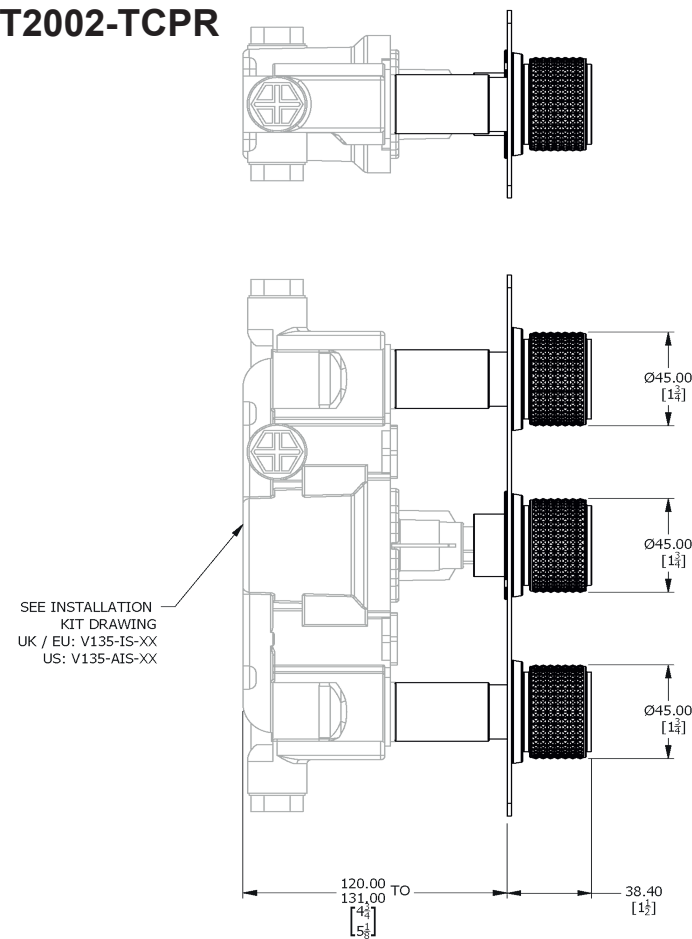


Dimension Key

T2002-TCTL

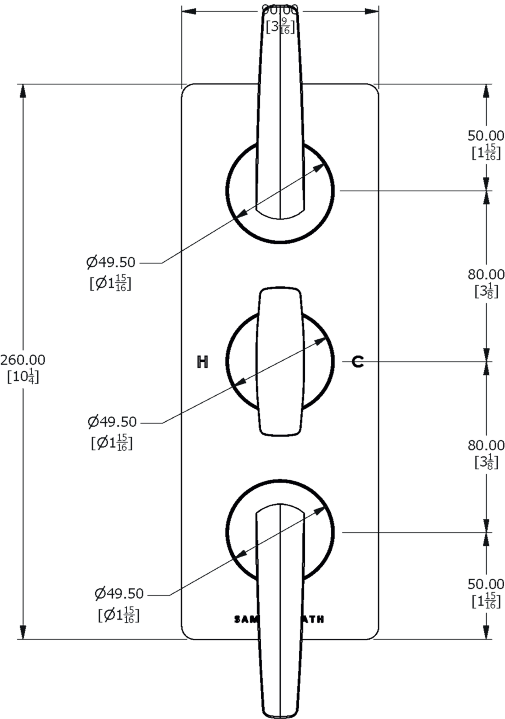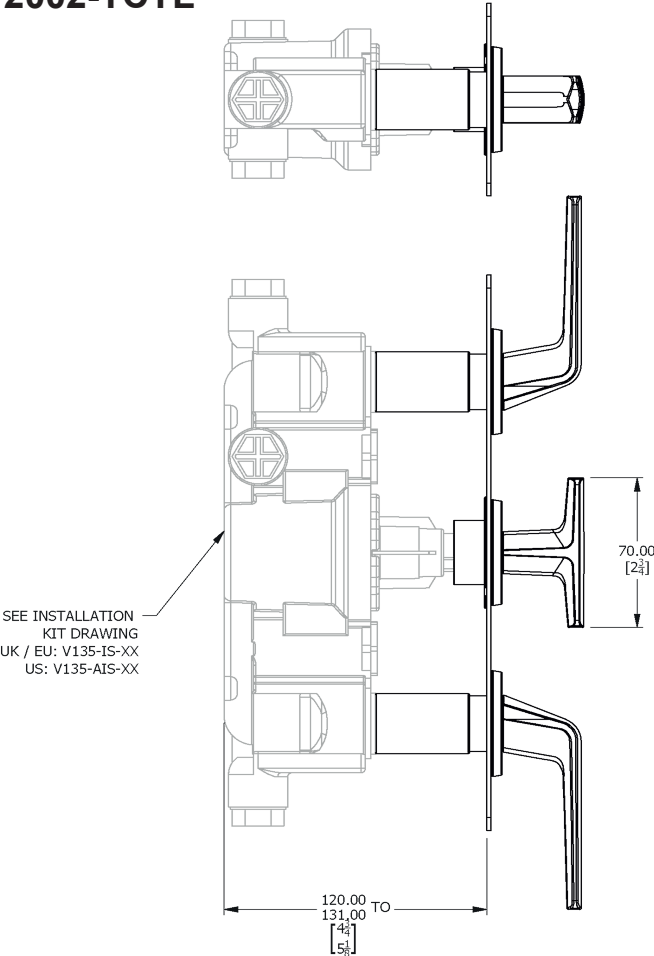


T2002-TCTR

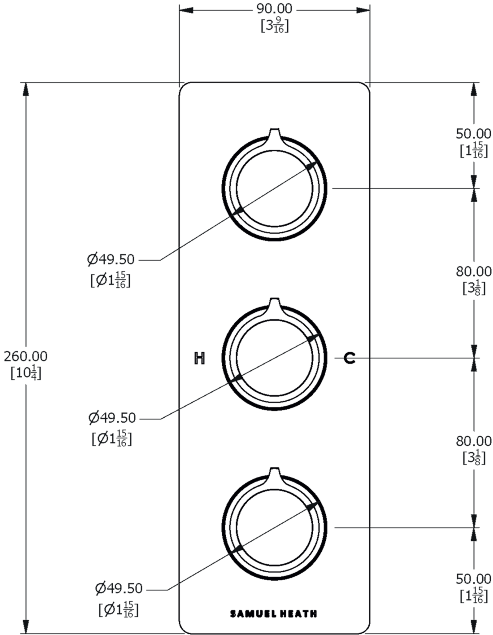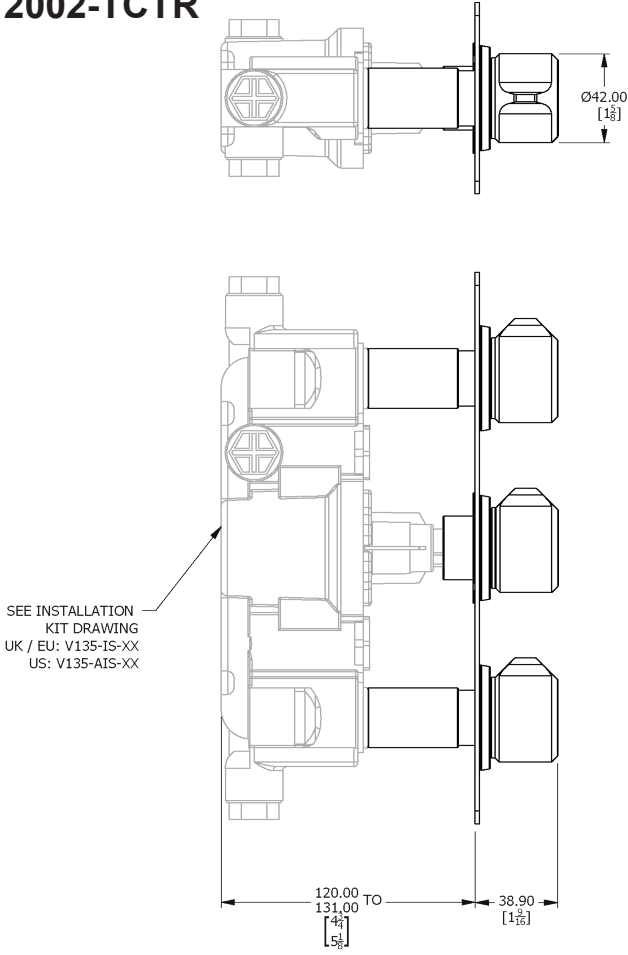


Dimension Key

T2005-TCBA

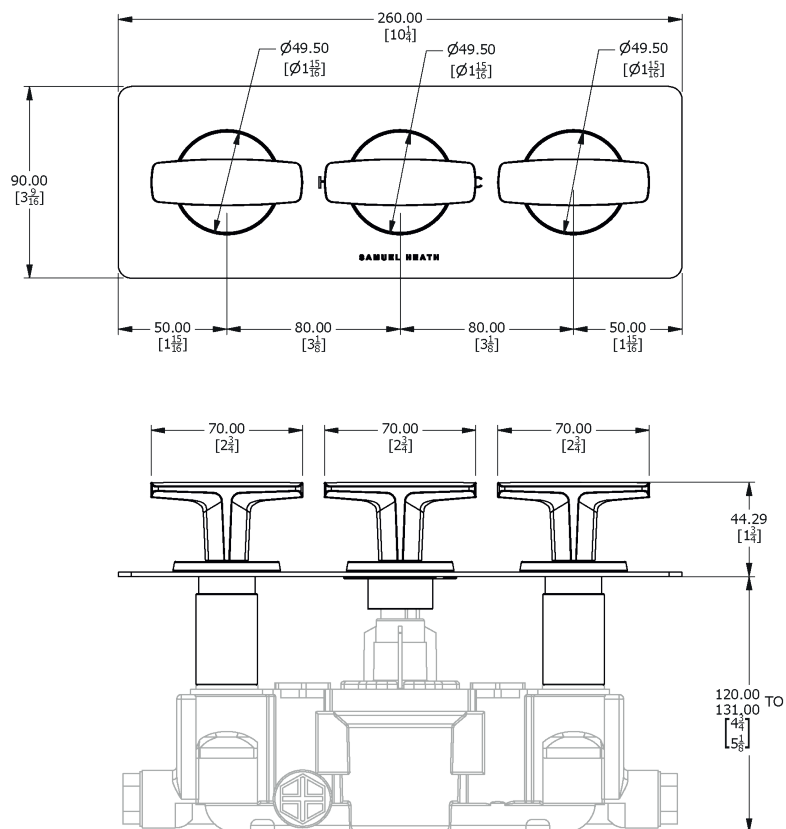

SEE INSTALLATION KIT DRAWING
UK / EU: V135-IS-XX
US: V135-AIS-XX


T2005-TCGR

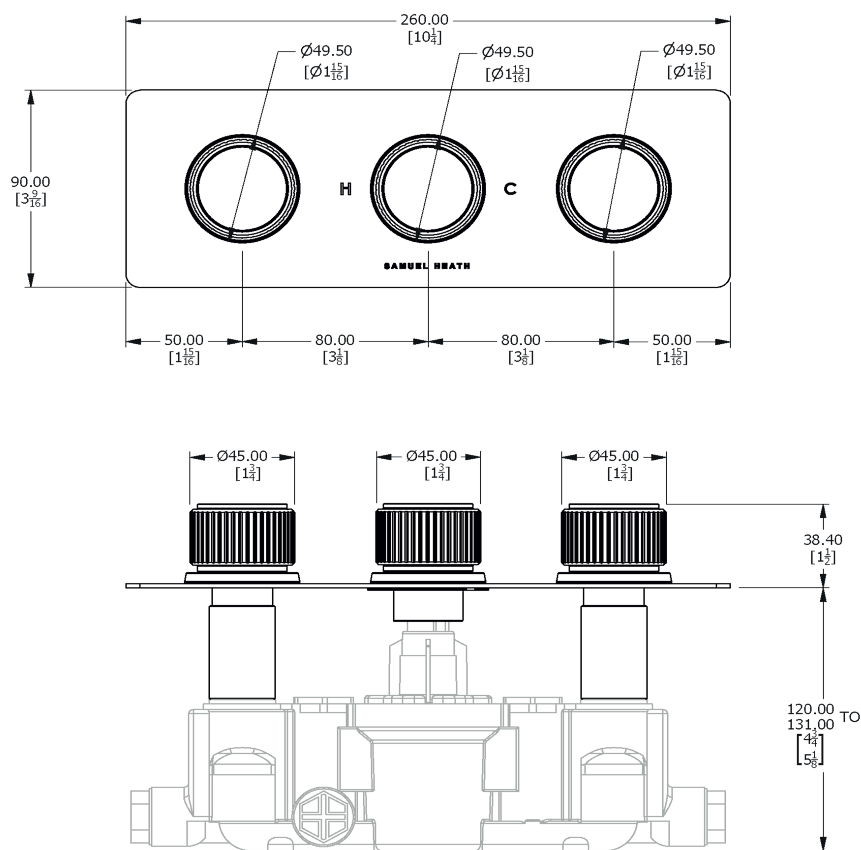

SEE INSTALLATION KIT DRAWING
UK / EU: V135-IS-XX
US: V135-AIS-XX


Dimension Key

T2005-TCOL

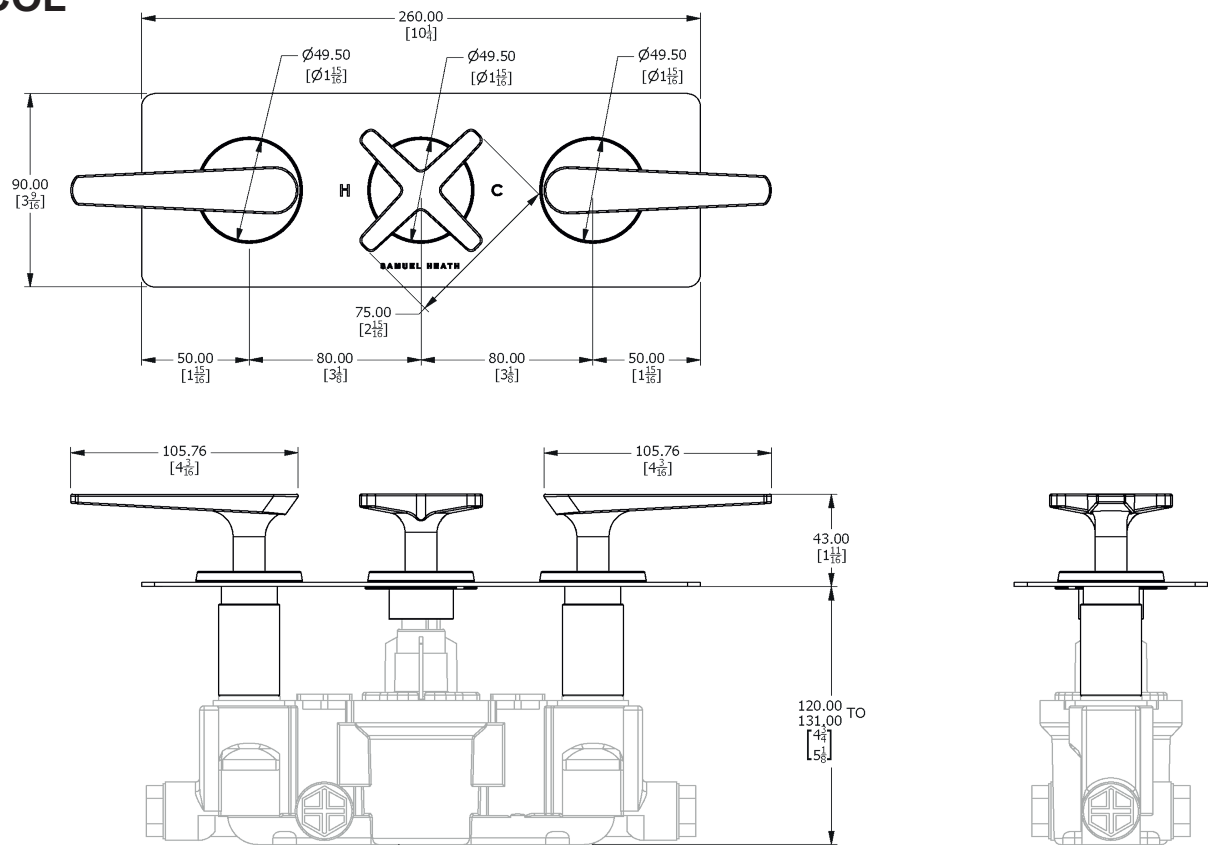

SEE INSTALLATION KIT DRAWING
UK / EU: V135-IS-XX
US: V135-AIS-XX


T2005-TCOR

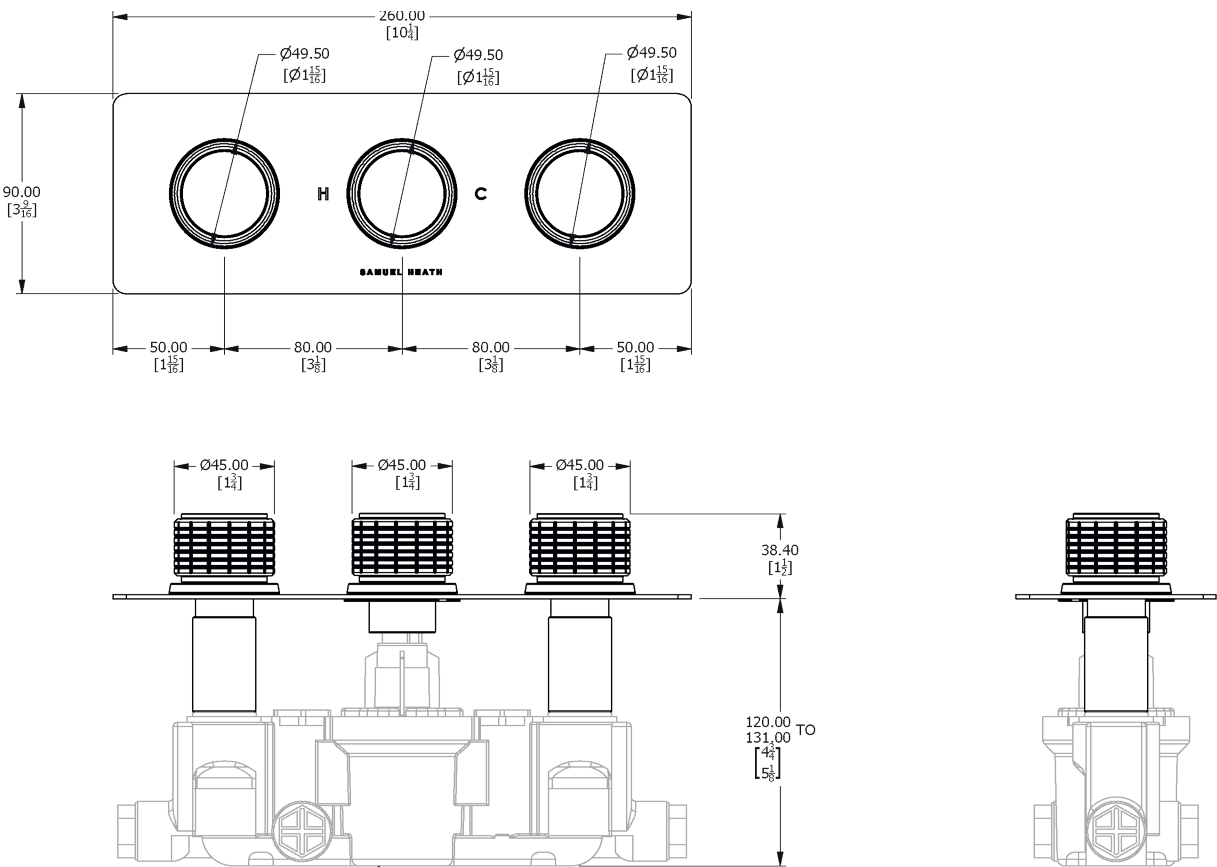


SEE INSTALLATION KIT DRAWING
UK / EU: V135-IS-XX
US: V135-AIS-XX

Dimension Key

T2005-TCOX

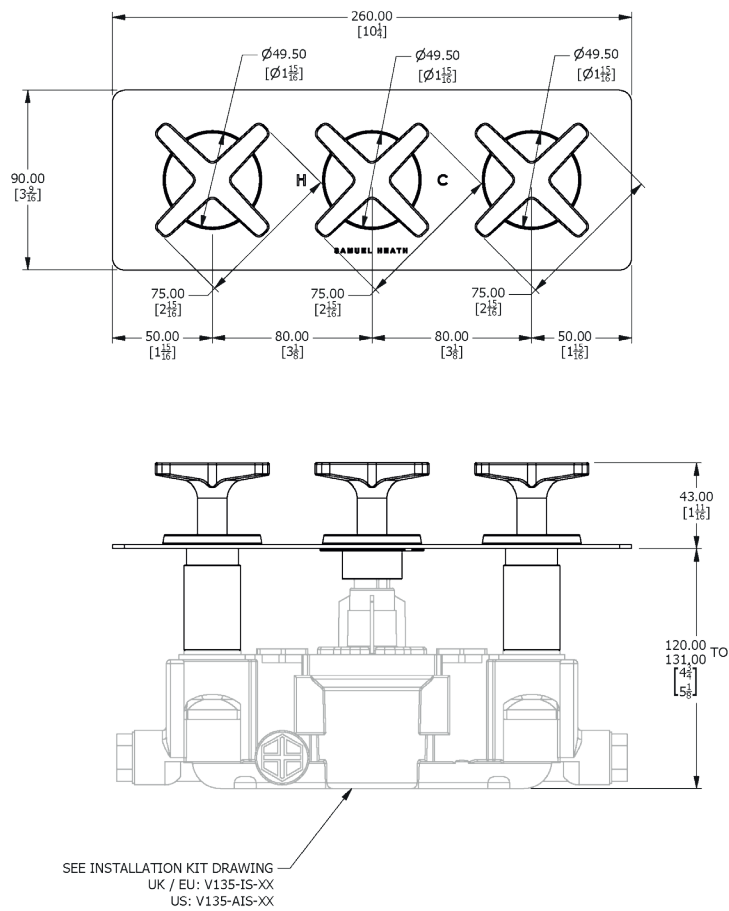


T2005-TCPR

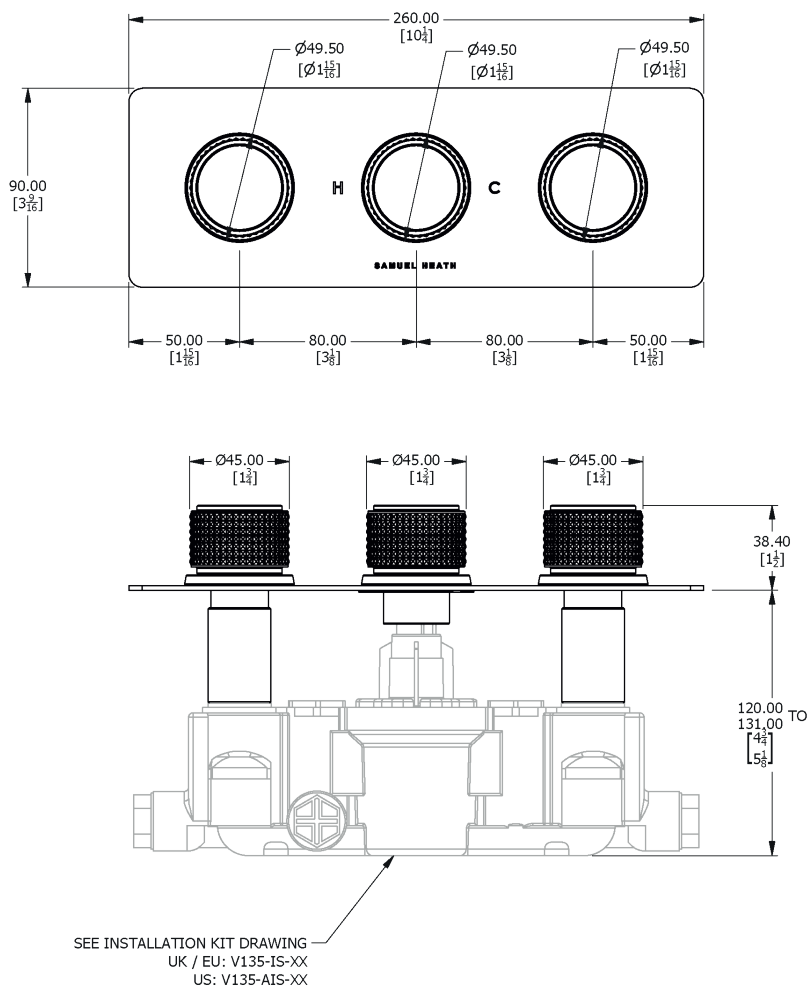


Dimension Key

T2005-TCTL

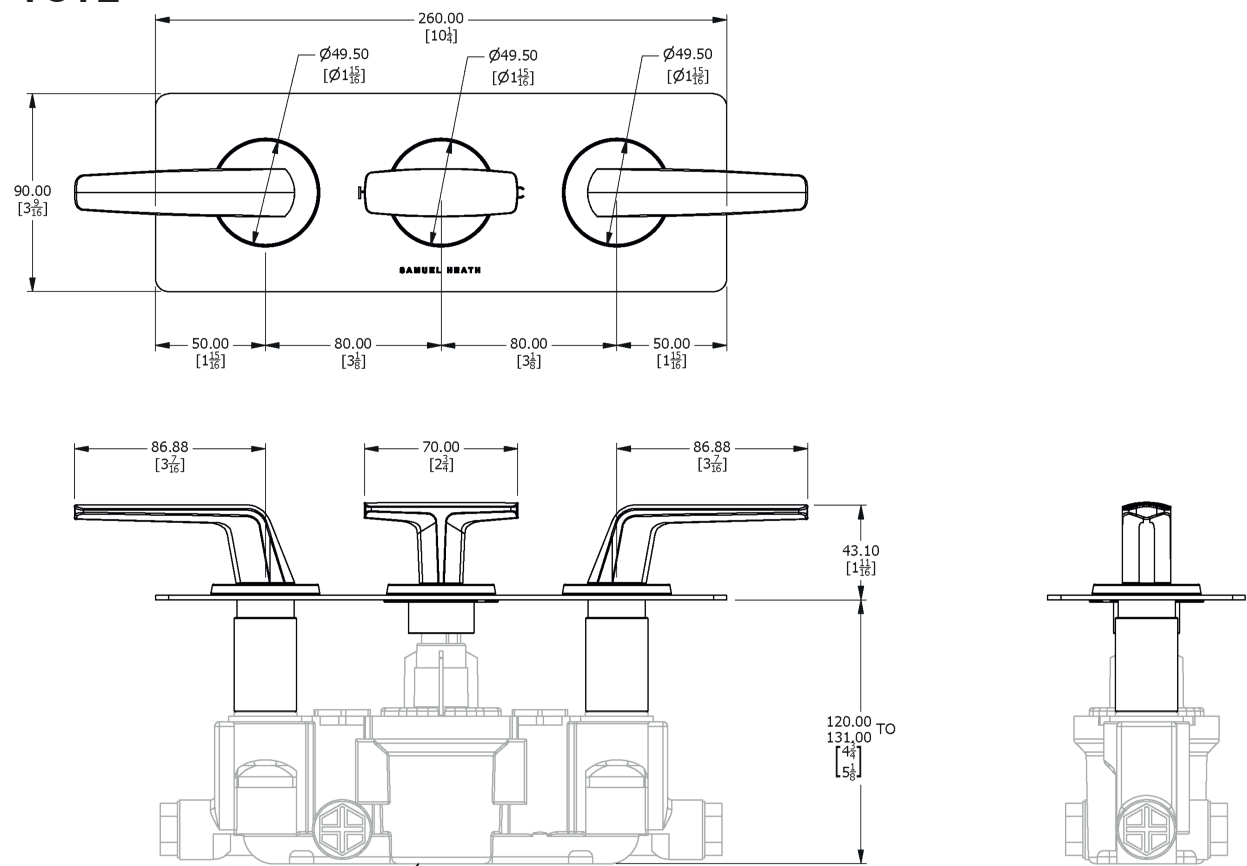

SEE INSTALLATION KIT DRAWING
UK / EU: V135-IS-XX
US: V135-AIS-XX


T2005-TCTR

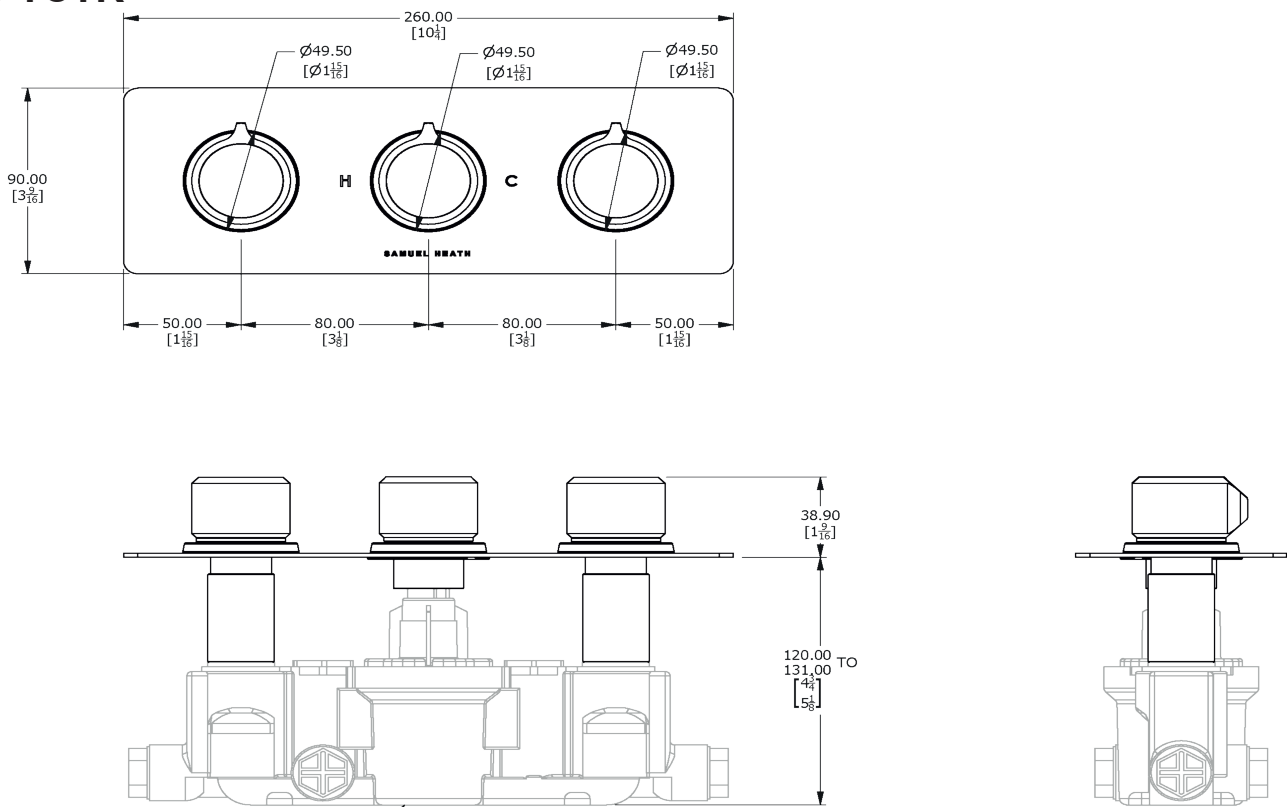

SEE INSTALLATION KIT DRAWING
UK / EU: V135-IS-XX
US: V135-AIS-XX

Spares Information


T2002-TCBA

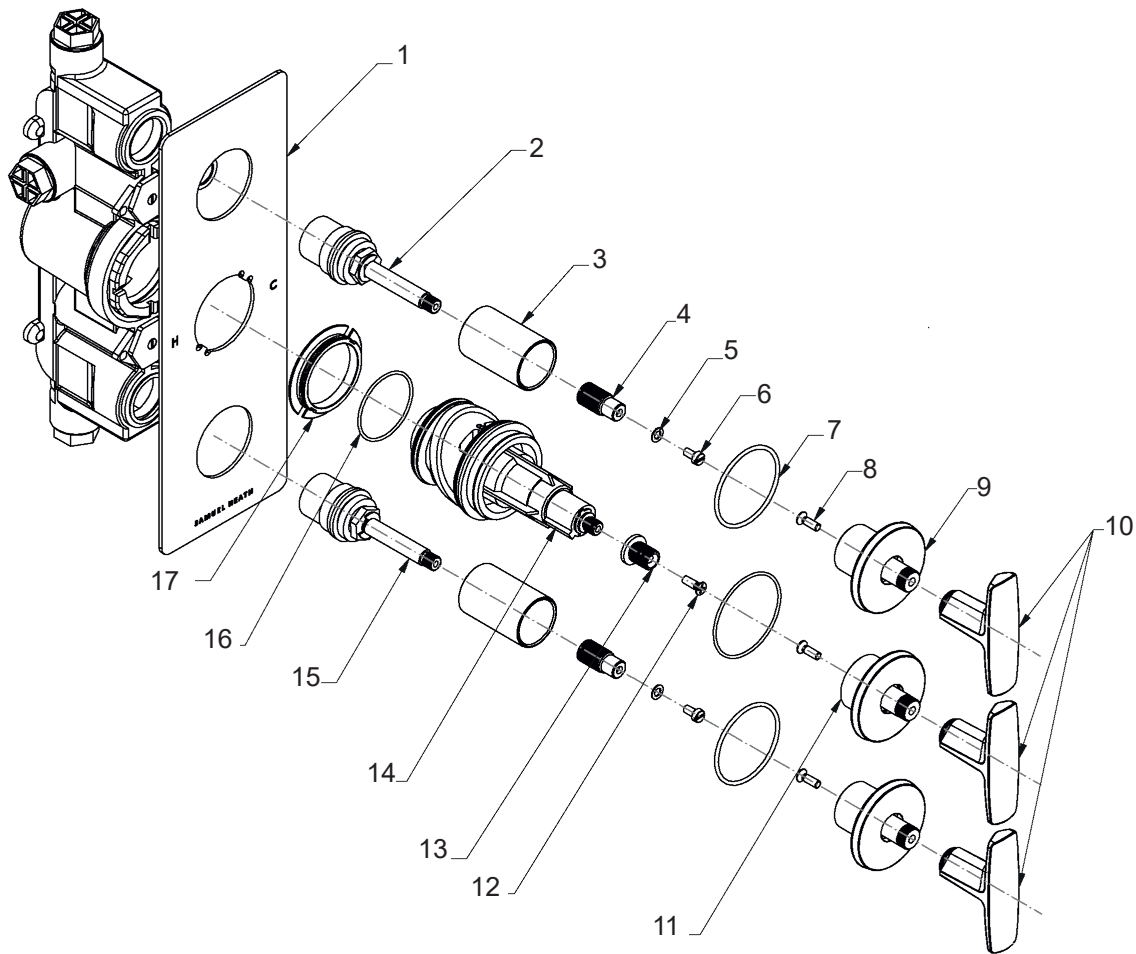

Item	Part No.	Description	Item	Part No.	Description
1	-	Shower Plate	11	-	Thermo Body
2	VS56046	CD Valve (ACW Closing)	12	-	Screw
3	-	Threaded Shank	13	-	Thermo Spline Adaptor
4	-	Volume Spline Adaptor	14	VS56065	Thermo Valve
5	-	Anti-Rotational Washer	15	VS56047	CD Valve (CW Closing)
6	-	Screw	16	-	O-Ring
7	-	O-Ring	17	-	Thermo Locking Ring
8	-	Screw			
9	-	Volume Body			
10	-	T-Bar			

Spares Information


T2002-TCGR

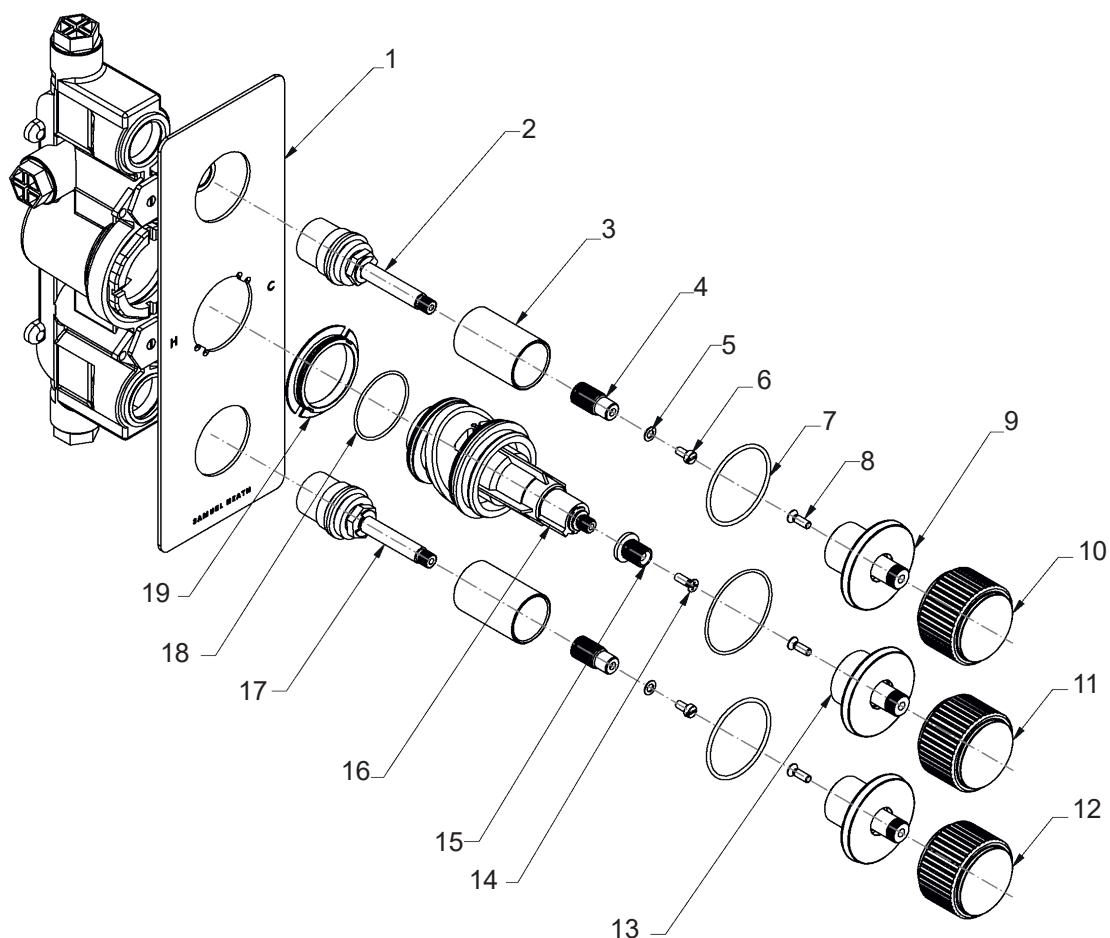

Item	Part No.	Description	Item	Part No.	Description
1	-	Shower Plate	14	-	Screw
2	VS56046	CD Valve (ACW Closing)	15	-	Thermo Spline Adaptor
3	-	Threaded Shank	16	VS56065	Thermo Valve
4	-	Volume Spline Adaptor	17	VS56047	CD Valve (CW Closing)
5	-	Anti-Rotational Washer	18	-	O-Ring
6	-	Screw	19	-	Thermo Locking Ring
7	-	O-Ring			
8	-	Screw			
9	-	Volume Body			
10	-	Knob			
11	-	Knob			
12	-	Knob			
13	-	Thermo Body			

Spares Information


T2002-TCOL

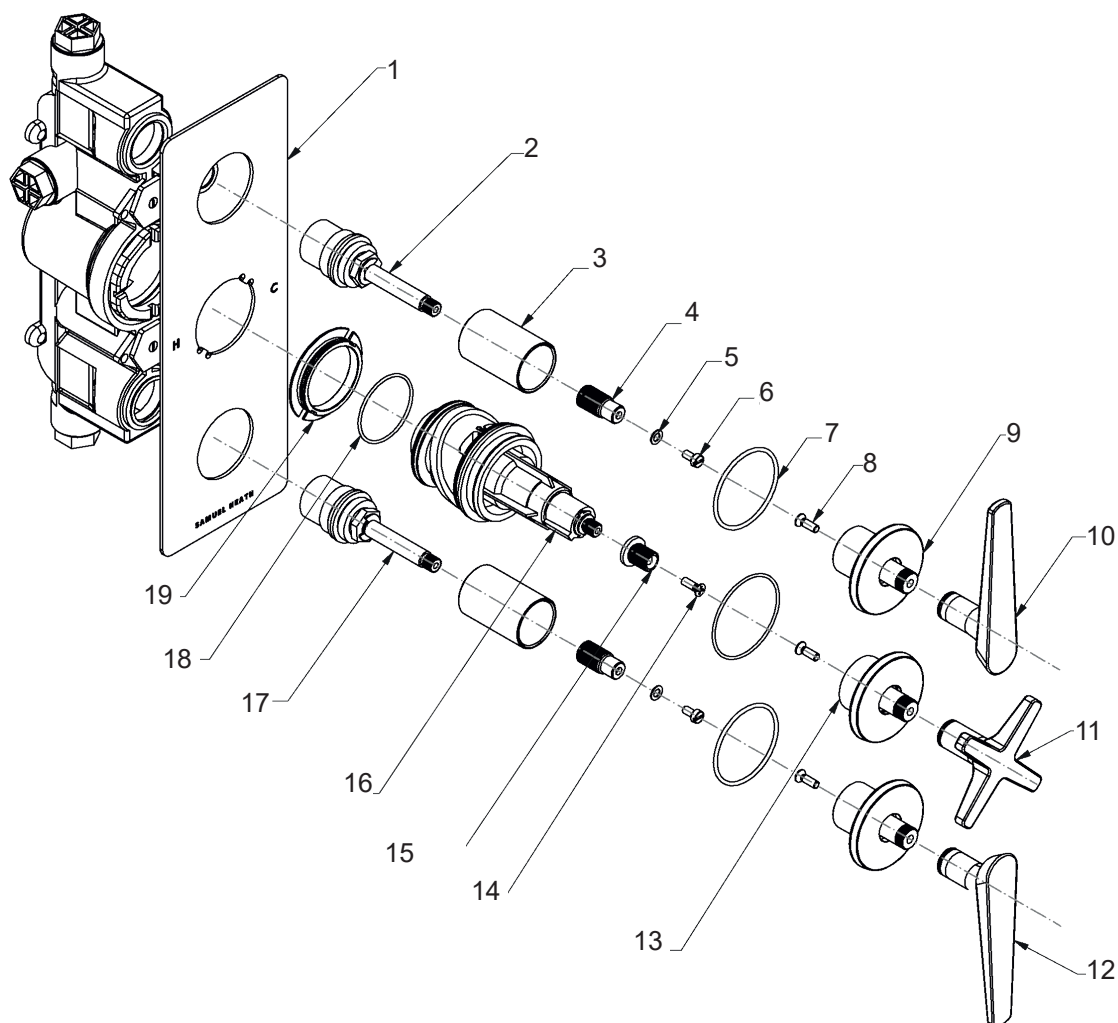

Item	Part No.	Description	Item	Part No.	Description
1	-	Shower Plate	12	-	Lever
2	VS56046	CD Valve (ACW Closing)	13	-	Thermo Body
3	-	Threaded Shank	14	-	Screw
4	-	Volume Spline Adaptor	15	-	Thermo Spline Adaptor
5	-	Anti-Rotational Washer	16	VS56065	Thermo Valve
6	-	Screw	17	VS56047	CD Valve (CW Closing)
7	-	O-Ring	18	-	O-Ring
8	-	Screw	19	-	Thermo Locking Ring
9	-	Volume Body			
10	-	Lever			
11	-	Cross Top			

Spares Information


T2002-TCOR

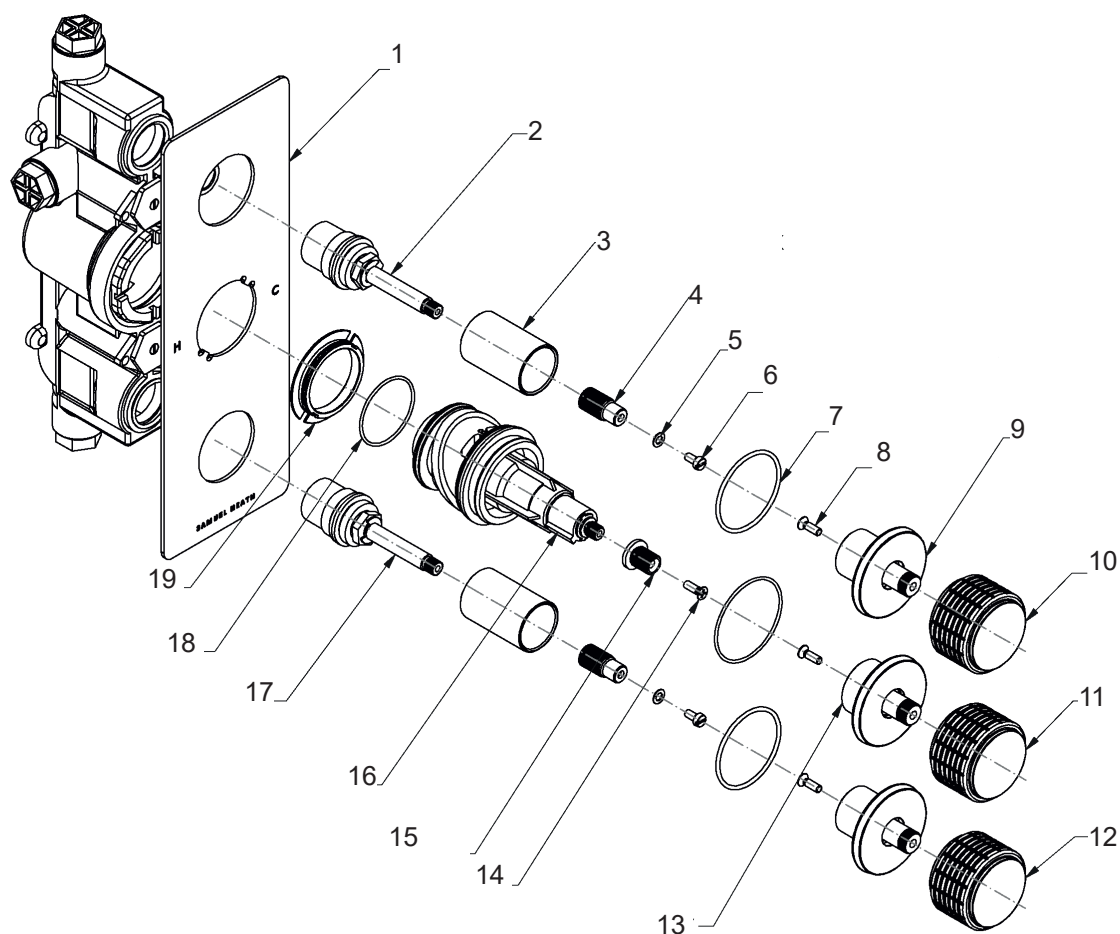

Item	Part No.	Description	Item	Part No.	Description
1	-	Shower Plate	12	-	Knob
2	VS56046	CD Valve (ACW Closing)	13	-	Thermo Body
3	-	Threaded Shank	14	-	Screw
4	-	Volume Spline Adaptor	15	-	Thermo Spline Adaptor
5	-	Anti-Rotational Washer	16	VS56065	Thermo Valve
6	-	Screw	17	VS56047	CD Valve (CW Closing)
7	-	O-Ring	18	-	O-Ring
8	-	Screw	19	-	Thermo Locking Ring
9	-	Volume Body			
10	-	Knob			
11	-	Knob			

Spares Information


T2002-TCOX

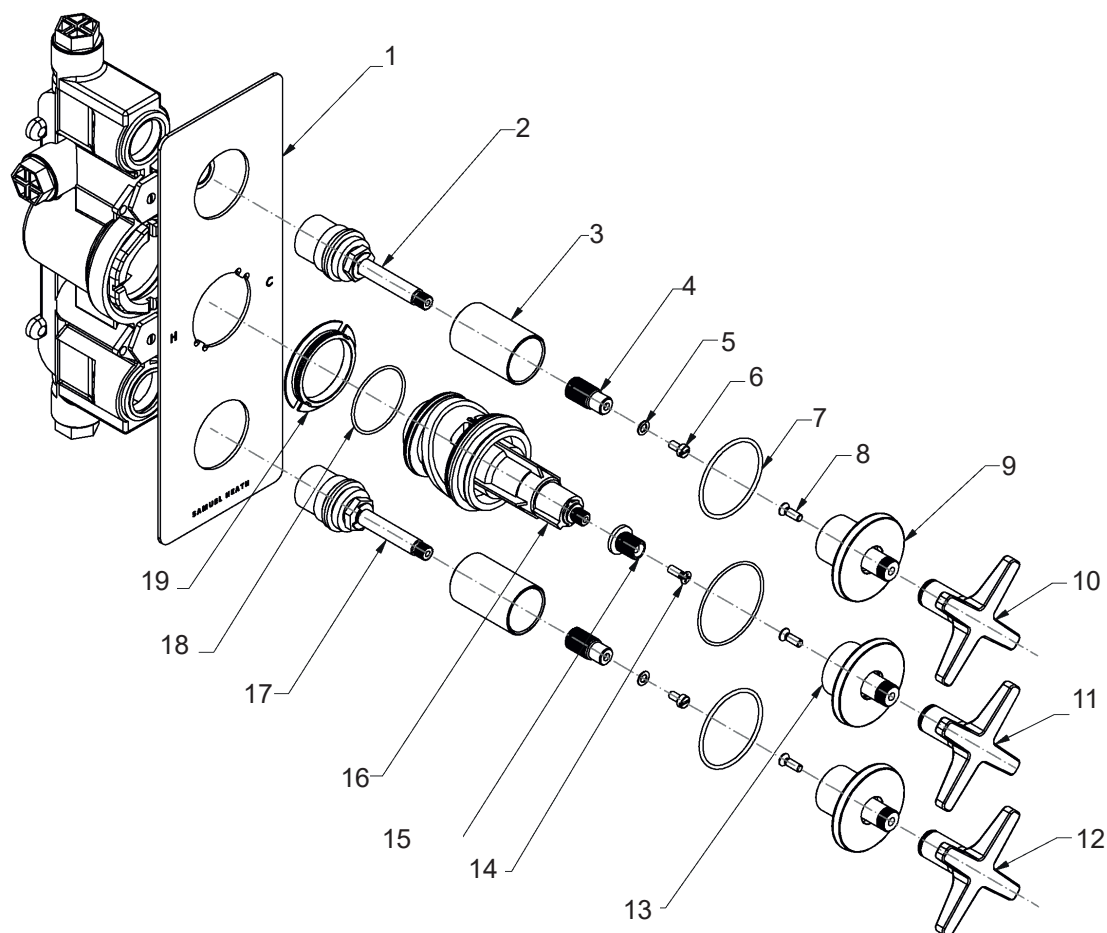

Item	Part No.	Description	Item	Part No.	Description
1	-	Shower Plate	12	-	Cross Top
2	VS56046	CD Valve (ACW Closing)	13	-	Thermo Body
3	-	Threaded Shank	14	-	Screw
4	-	Volume Spline Adaptor	15	-	Thermo Spline Adaptor
5	-	Anti-Rotational Washer	16	VS56065	Thermo Valve
6	-	Screw	17	VS56047	CD Valve (CW Closing)
7	-	O-Ring	18	-	O-Ring
8	-	Screw	19	-	Thermo Locking Ring
9	-	Volume Body			
10	-	Cross Top			
11	-	Cross Top			

Spares Information


T2002-TCPR

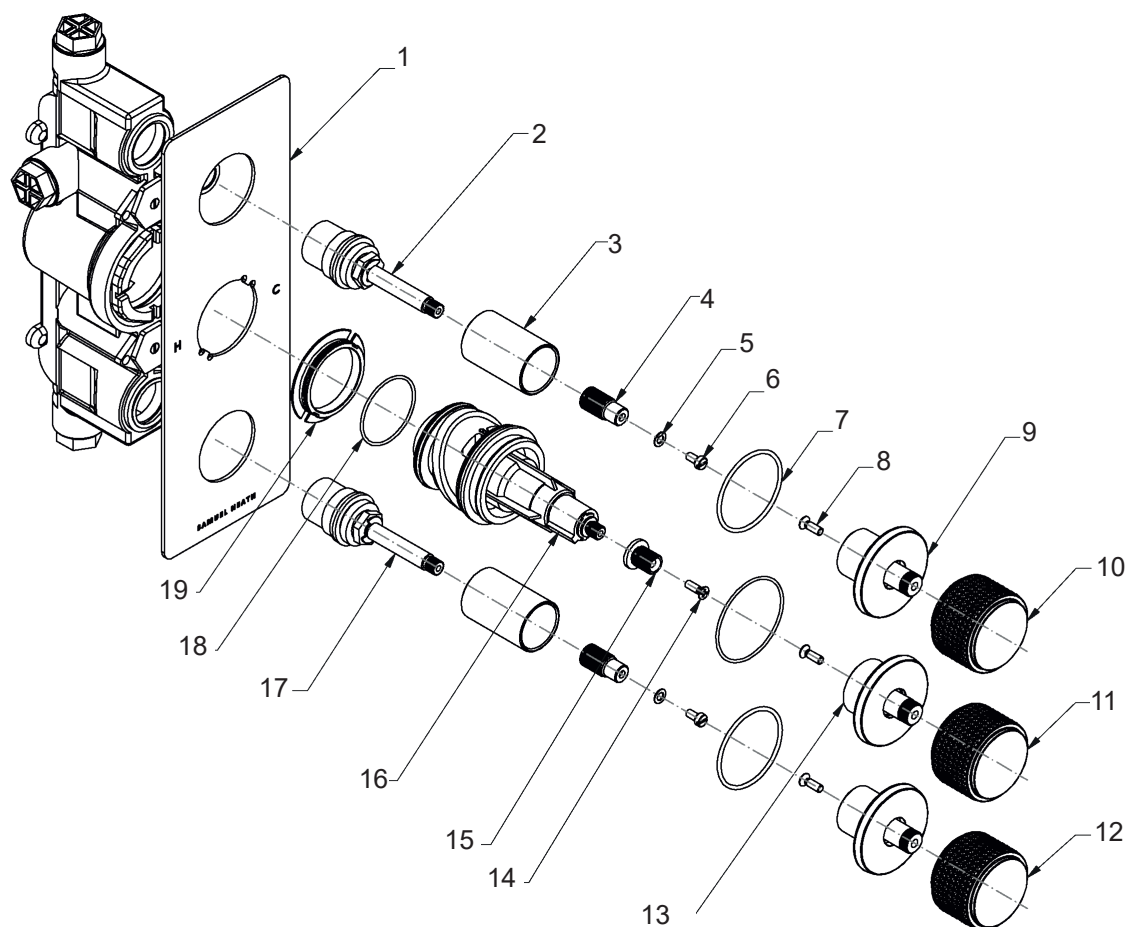

Item	Part No.	Description	Item	Part No.	Description
1	-	Shower Plate	14	-	Screw
2	VS56046	CD Valve (ACW Closing)	15	-	Thermo Spline Adaptor
3	-	Threaded Shank	16	VS56065	Thermo Valve
4	-	Volume Spline Adaptor	17	VS56047	CD Valve (CW Closing)
5	-	Anti-Rotational Washer	18	-	O-Ring
6	-	Screw	19	-	Thermo Locking Ring
7	-	O-Ring			
8	-	Screw			
9	-	Volume Body			
10	-	Knob			
11	-	Knob			
12	-	Knob			
13	-	Thermo Body			

Spares Information


T2002-TCTL

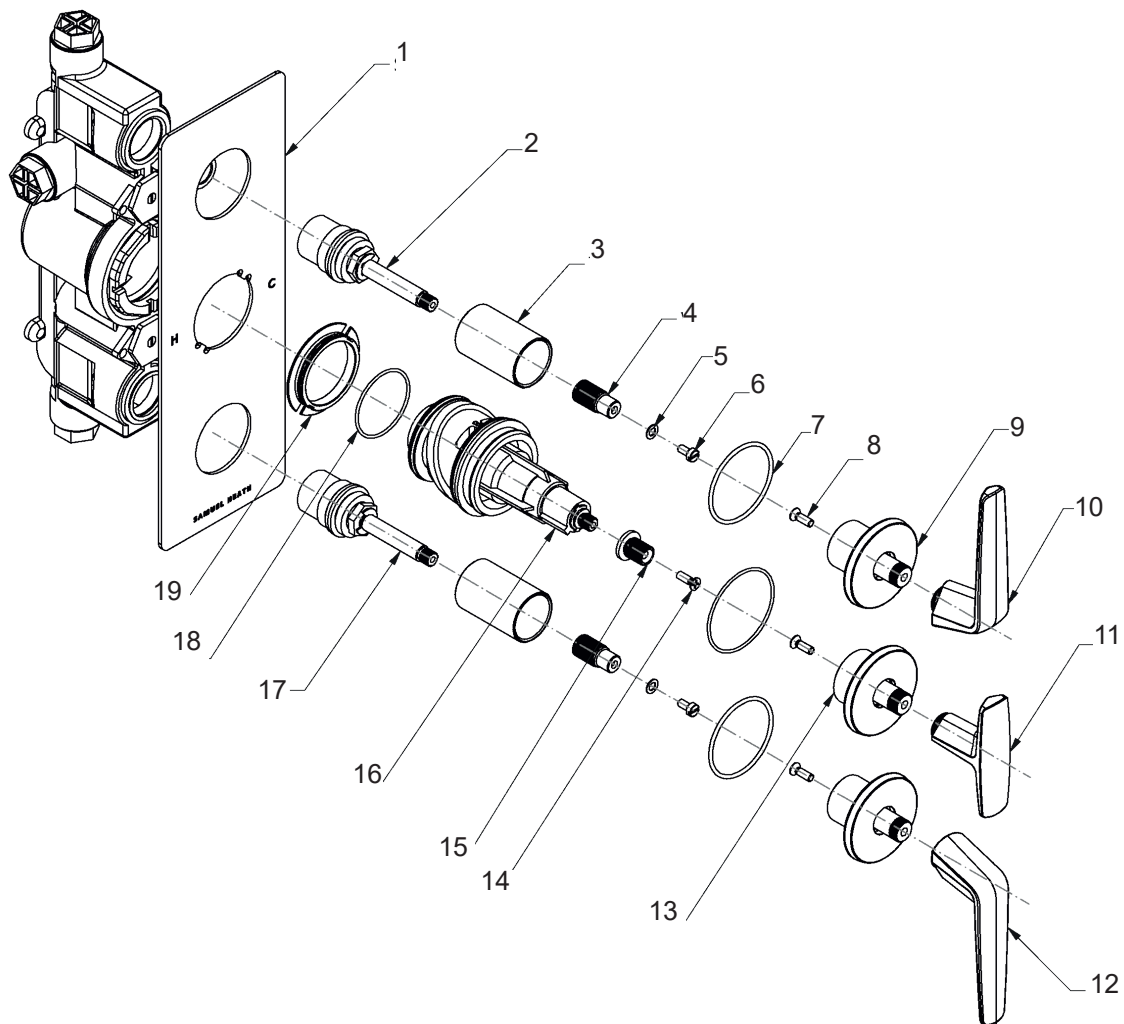

Item	Part No.	Description	Item	Part No.	Description
1	-	Shower Plate	12	-	Lever
2	VS56046	CD Valve (ACW Closing)	13	-	Thermo Body
3	-	Threaded Shank	14	-	Screw
4	-	Volume Spline Adaptor	15	-	Thermo Spline Adaptor
5	-	Anti-Rotational Washer	16	VS56065	Thermo Valve
6	-	Screw	17	VS56047	CD Valve (CW Closing)
7	-	O-Ring	18	-	O-Ring
8	-	Screw	19	-	Thermo Locking Ring
9	-	Volume Body			
10	-	Lever			
11	-	T-Bar			

Spares Information


T2002-TCTR

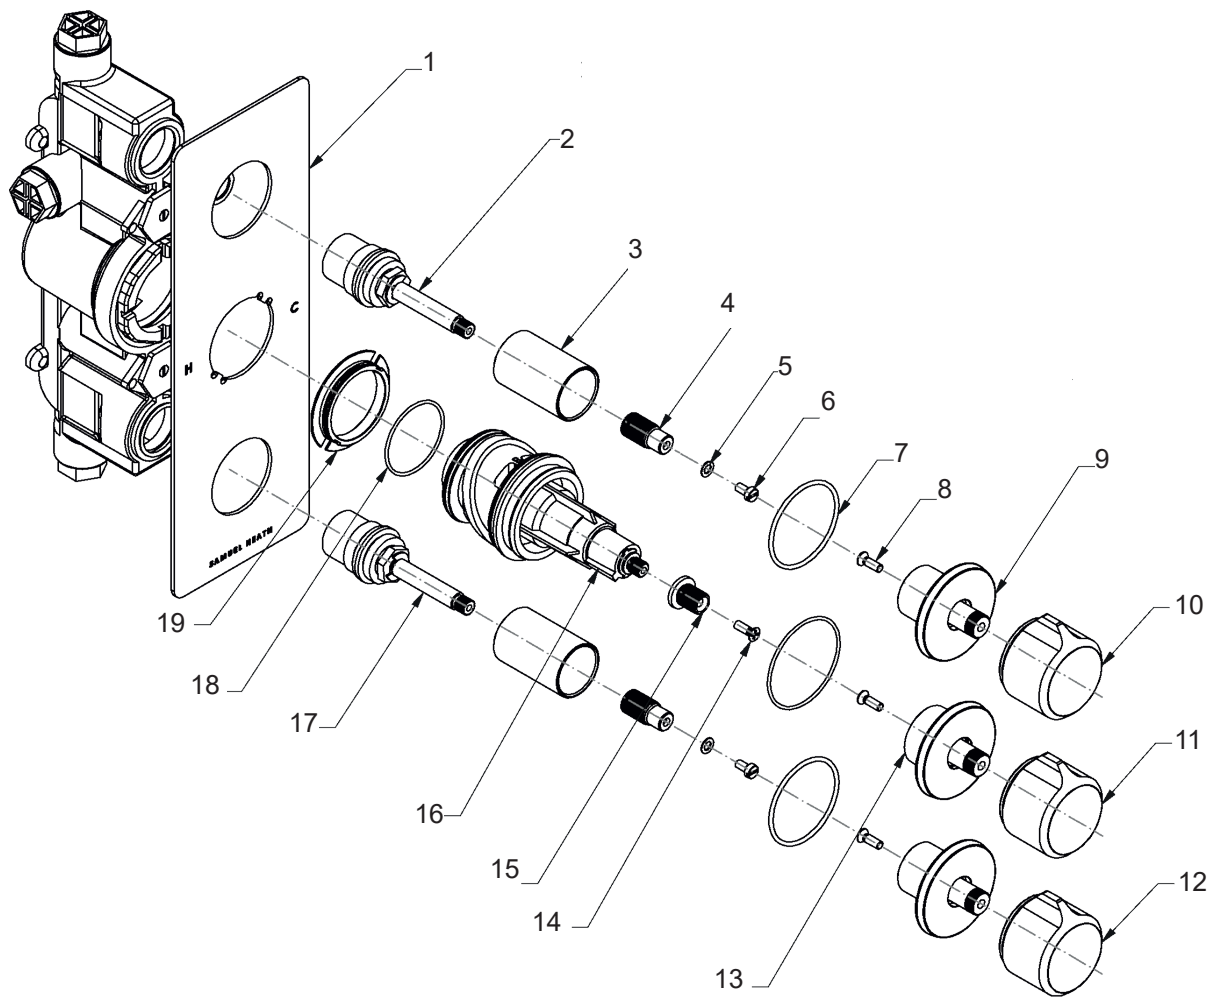

Item	Part No.	Description	Item	Part No.	Description
1	-	Shower Plate	12	-	Knob
2	VS56046	CD Valve (ACW Closing)	13	-	Thermo Body
3	-	Threaded Shank	14	-	Screw
4	-	Volume Spline Adaptor	15	-	Thermo Spline Adaptor
5	-	Anti-Rotational Washer	16	VS56065	Thermo Valve
6	-	Screw	17	VS56047	CD Valve (CW Closing)
7	-	O-Ring	18	-	O-Ring
8	-	Screw	19	-	Thermo Locking Ring
9	-	Volume Body			
10	-	Knob			
11	-	Knob			

Spares Information


T2005-TCBA

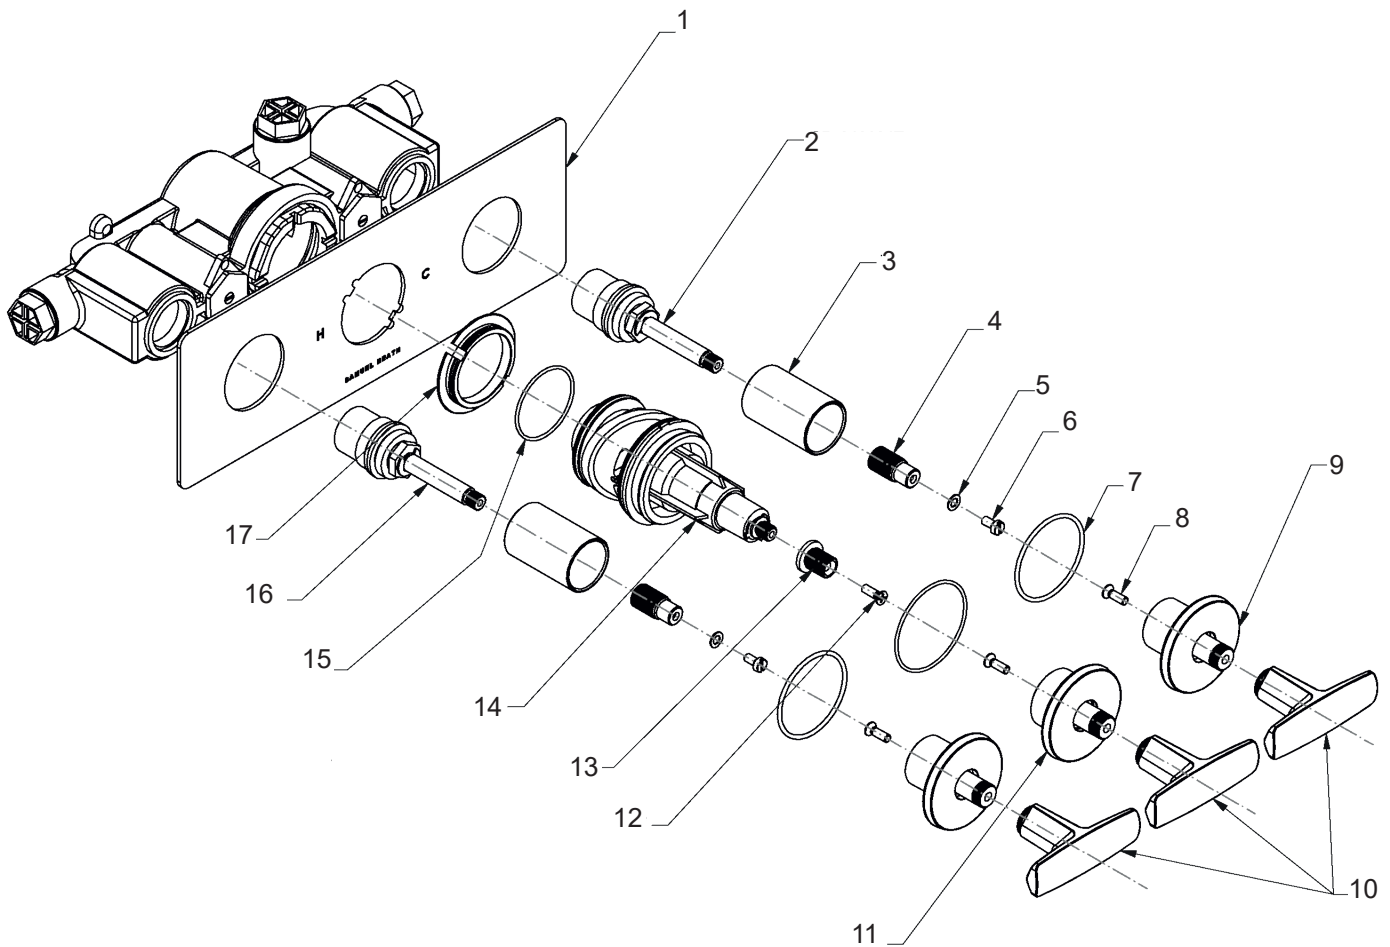

Item	Part No.	Description	Item	Part No.	Description
1	-	Shower Plate	11	-	Thermo Body
2	VS56046	CD Valve (ACW Closing)	12	-	Screw
3	-	Threaded Shank	13	-	Thermo Spline Adaptor
4	-	Volume Spline Adaptor	14	VS56065	Thermo Valve
5	-	Washer	15	-	O-Ring
6	-	Screw	16	VS56047	CD Valve (CW Closing)
7	-	O-Ring	17	-	Thermo Locking Ring
8	-	Screw			
9	-	Volume Body			
10	-	T-Bar			

Spares Information


T2005-TCGR

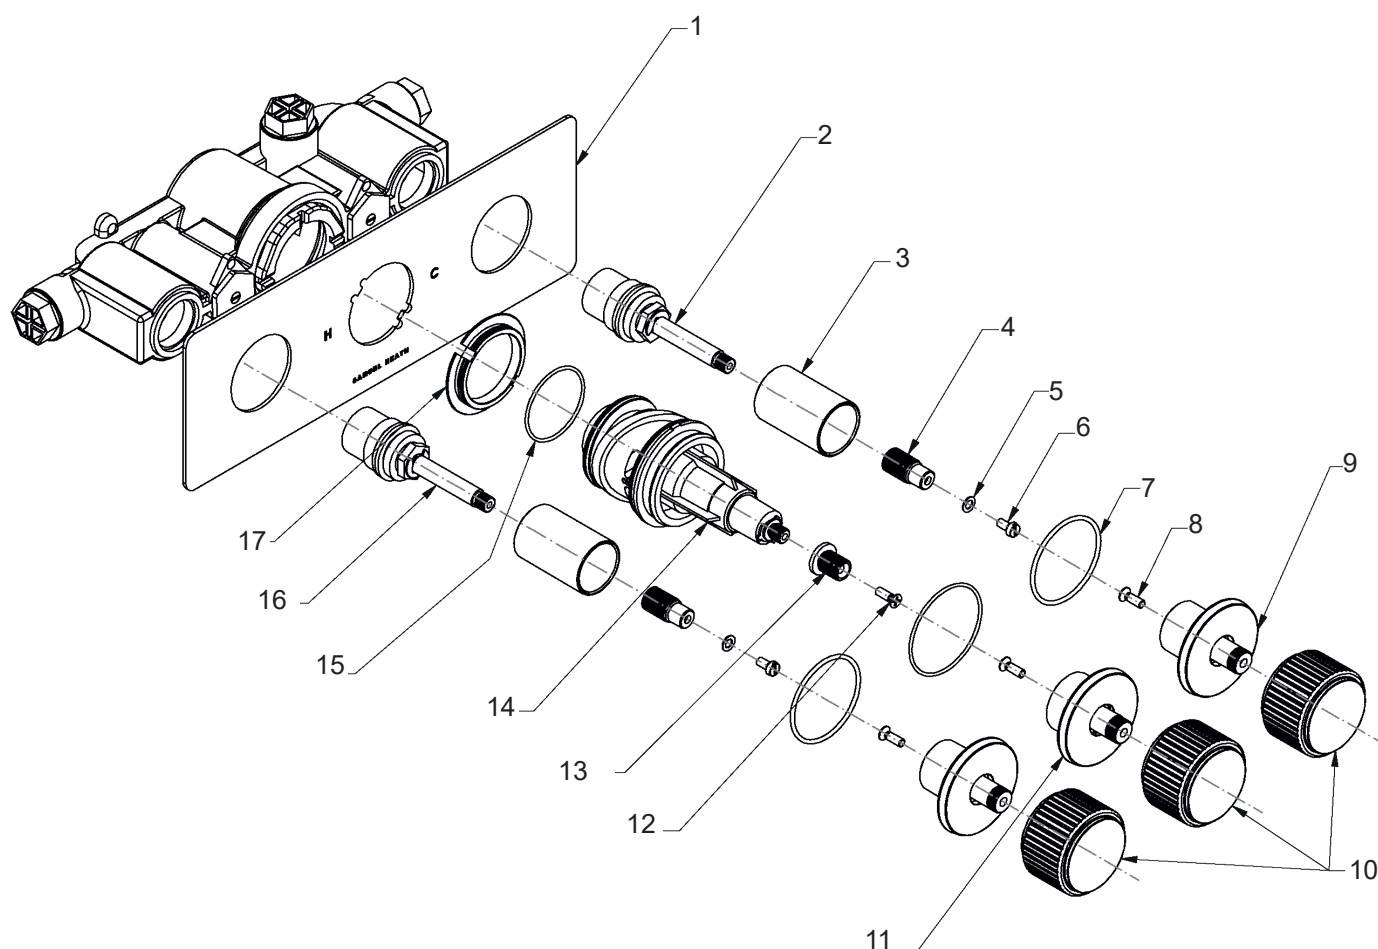

Item	Part No.	Description	Item	Part No.	Description
1	-	Shower Plate	11	-	Thermo Body
2	VS56046	CD Valve (ACW Closing)	12	-	Screw
3	-	Threaded Shank	13	-	Thermo Spline Adaptor
4	-	Volume Spline Adaptor	14	VS56065	Thermo Valve
5	-	Washer	15	-	O-Ring
6	-	Screw	16	VS56047	CD Valve (CW Closing)
7	-	O-Ring	17	-	Thermo Locking Ring
8	-	Screw			
9	-	Volume Body			
10	-	Knob			

Spares Information


T2005-TCOL

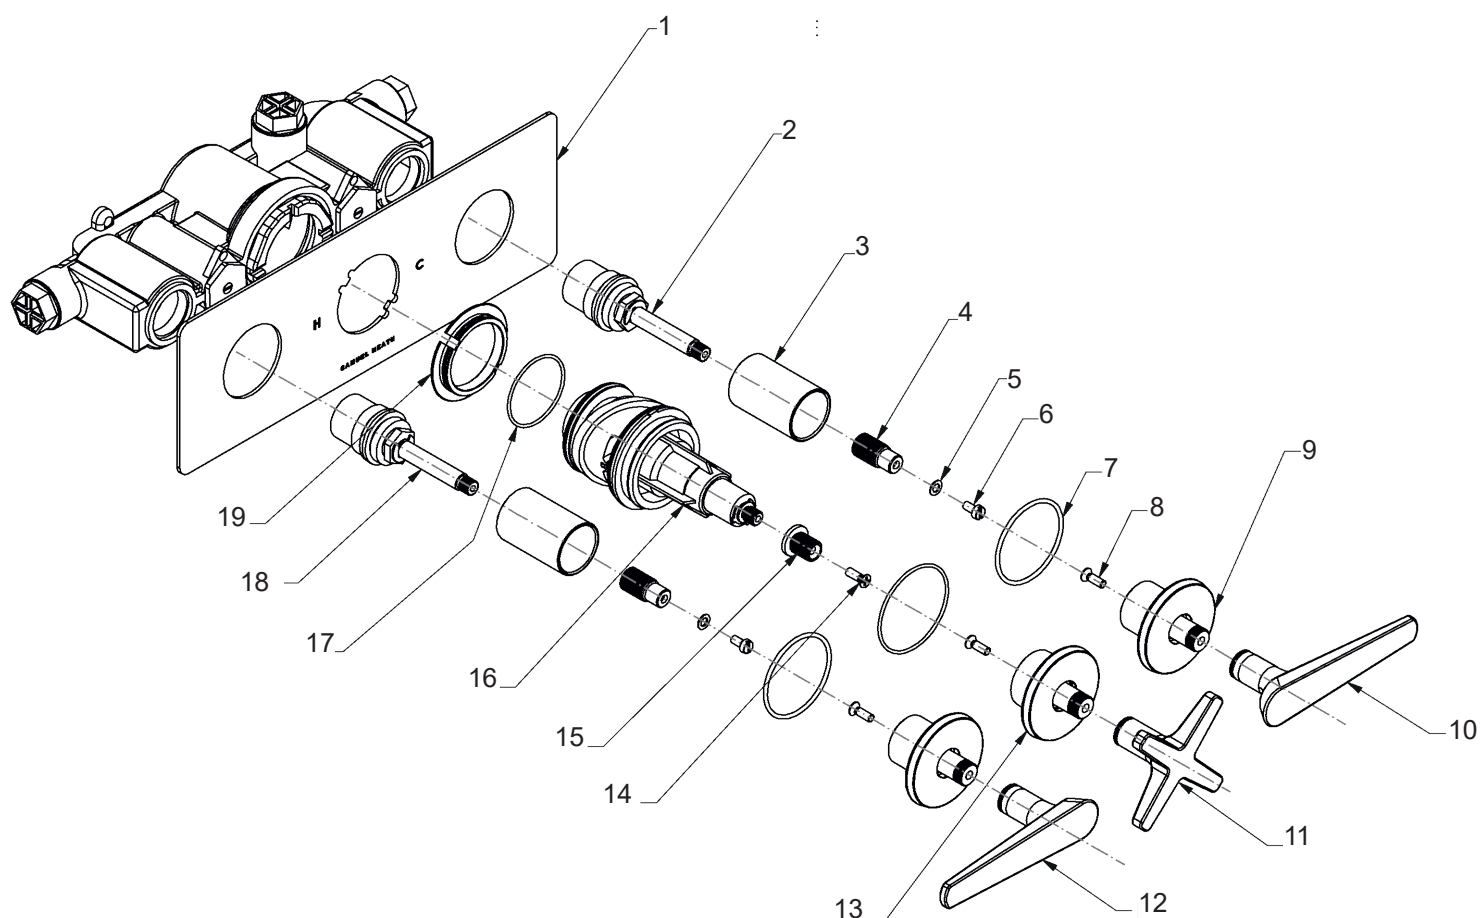

Item	Part No.	Description	Item	Part No.	Description
1	-	Shower Plate	12	-	Lever
2	VS56046	CD Valve (ACW Closing)	13	-	Thermo Body
3	-	Threaded Shank	14	-	Screw
4	-	Volume Spline Adaptor	15	-	Thermo Spline Adaptor
5	-	Washer	16	VS56065	Thermo Valve
6	-	Screw	17	-	O-Ring
7	-	O-Ring	18	VS56047	CD Valve (CW Closing)
8	-	Screw	19	-	Thermo Locking Ring
9	-	Volume Body			
10	-	Lever			
11	-	Cross Top			

Spares Information


T2005-TCOR

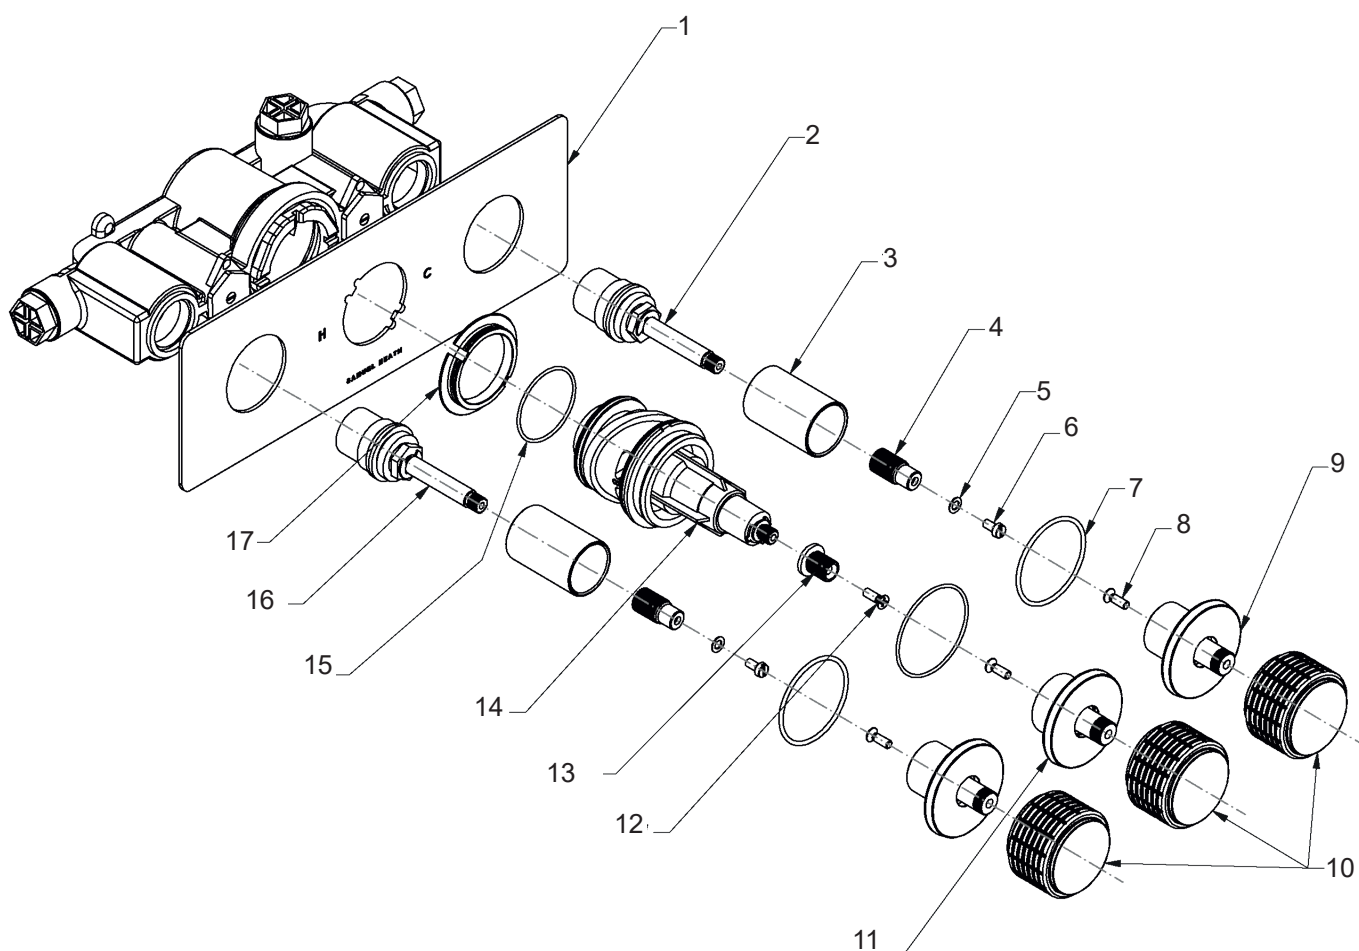

Item	Part No.	Description	Item	Part No.	Description
1	-	Shower Plate	11	-	Thermo Body
2	VS56046	CD Valve (ACW Closing)	12	-	Screw
3	-	Threaded Shank	13	-	Thermo Spline Adaptor
4	-	Volume Spline Adaptor	14	VS56065	Thermo Valve
5	-	Washer	15	-	O-Ring
6	-	Screw	16	VS56047	CD Valve (CW Closing)
7	-	O-Ring	17	-	Thermo Locking Ring
8	-	Screw			
9	-	Volume Body			
10	-	Knob			

Spares Information


T2005-TCOX

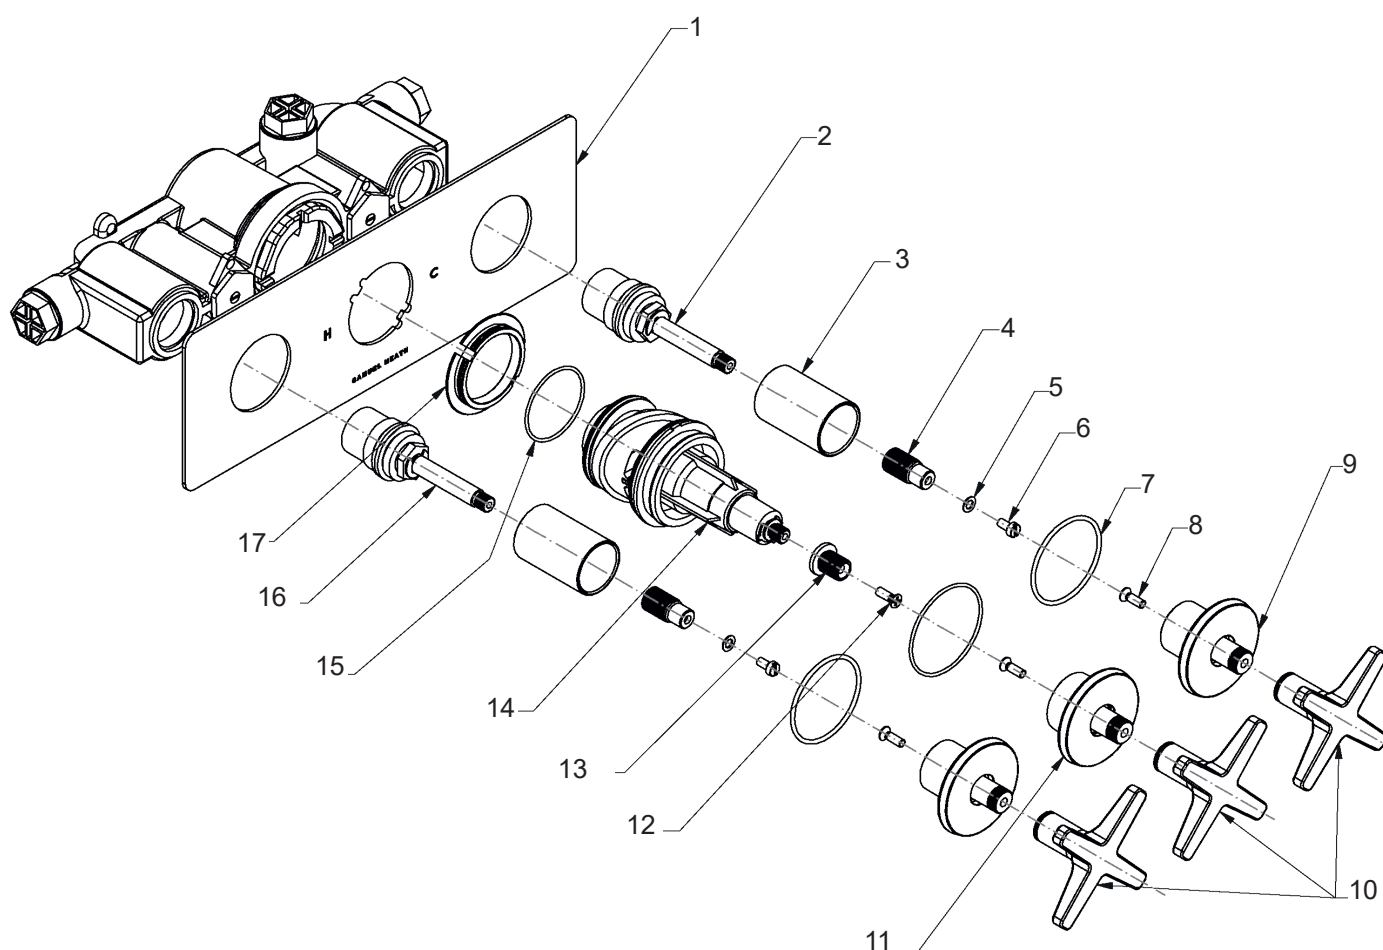

Item	Part No.	Description	Item	Part No.	Description
1	-	Shower Plate	11	-	Thermo Body
2	VS56046	CD Valve (ACW Closing)	12	-	Screw
3	-	Threaded Shank	13	-	Thermo Spline Adaptor
4	-	Volume Spline Adaptor	14	VS56065	Thermo Valve
5	-	Washer	15	-	O-Ring
6	-	Screw	16	VS56047	CD Valve (CW Closing)
7	-	O-Ring	17	-	Thermo Locking Ring
8	-	Screw			
9	-	Volume Body			
10	-	Cross Top			

Spares Information


T2005-TCPR

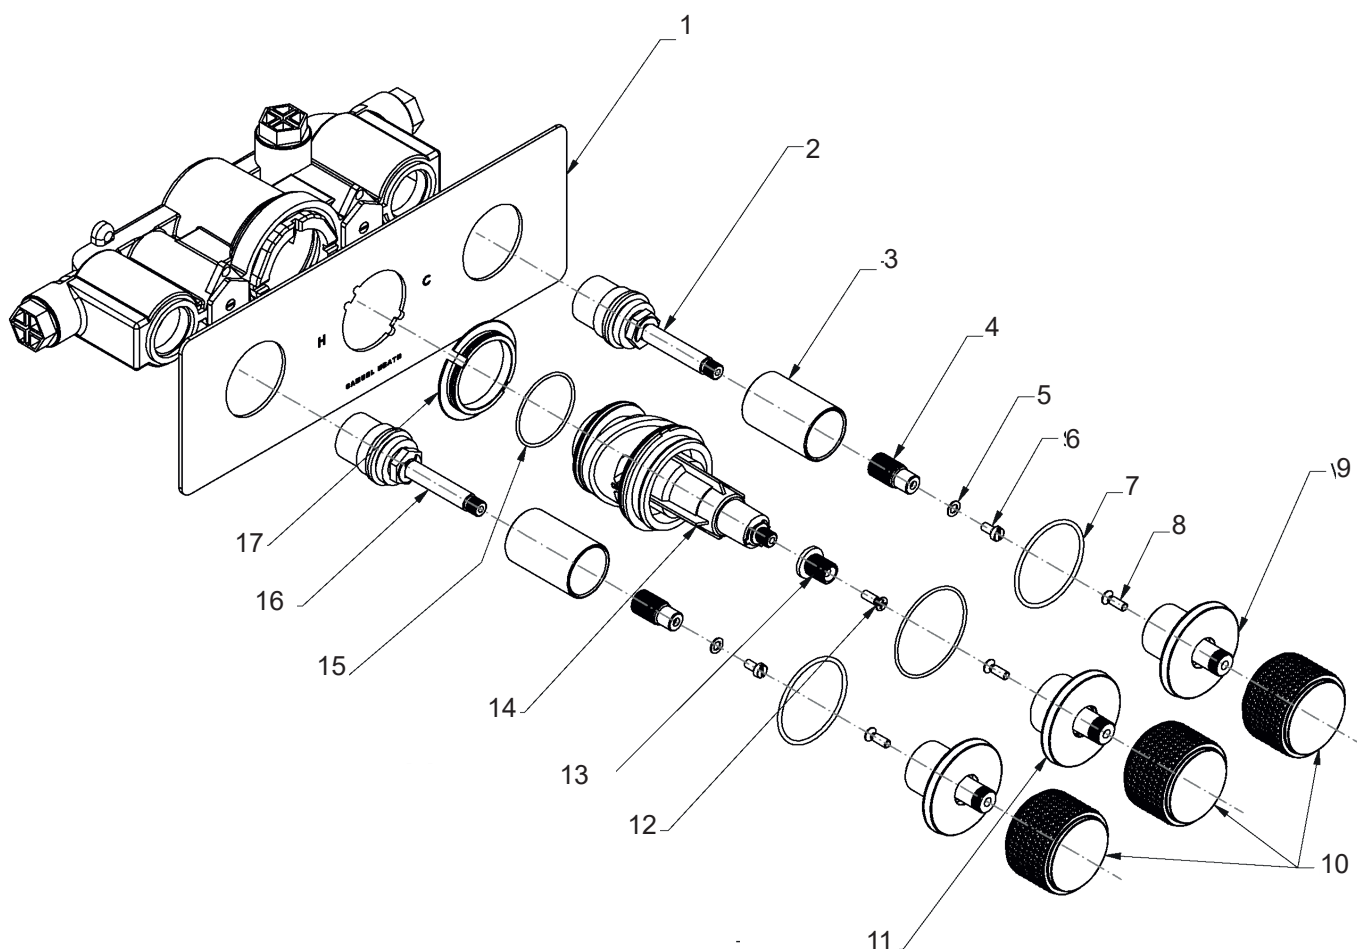

Item	Part No.	Description	Item	Part No.	Description
1	-	Shower Plate	11	-	Thermo Body
2	VS56046	CD Valve (ACW Closing)	12	-	Screw
3	-	Threaded Shank	13	-	Thermo Spline Adaptor
4	-	Volume Spline Adaptor	14	VS56065	Thermo Valve
5	-	Washer	15	-	O-Ring
6	-	Screw	16	VS56047	CD Valve (CW Closing)
7	-	O-Ring	17	-	Thermo Locking Ring
8	-	Screw			
9	-	Volume Body			
10	-	Knob			

Spares Information


T2005-TCTL

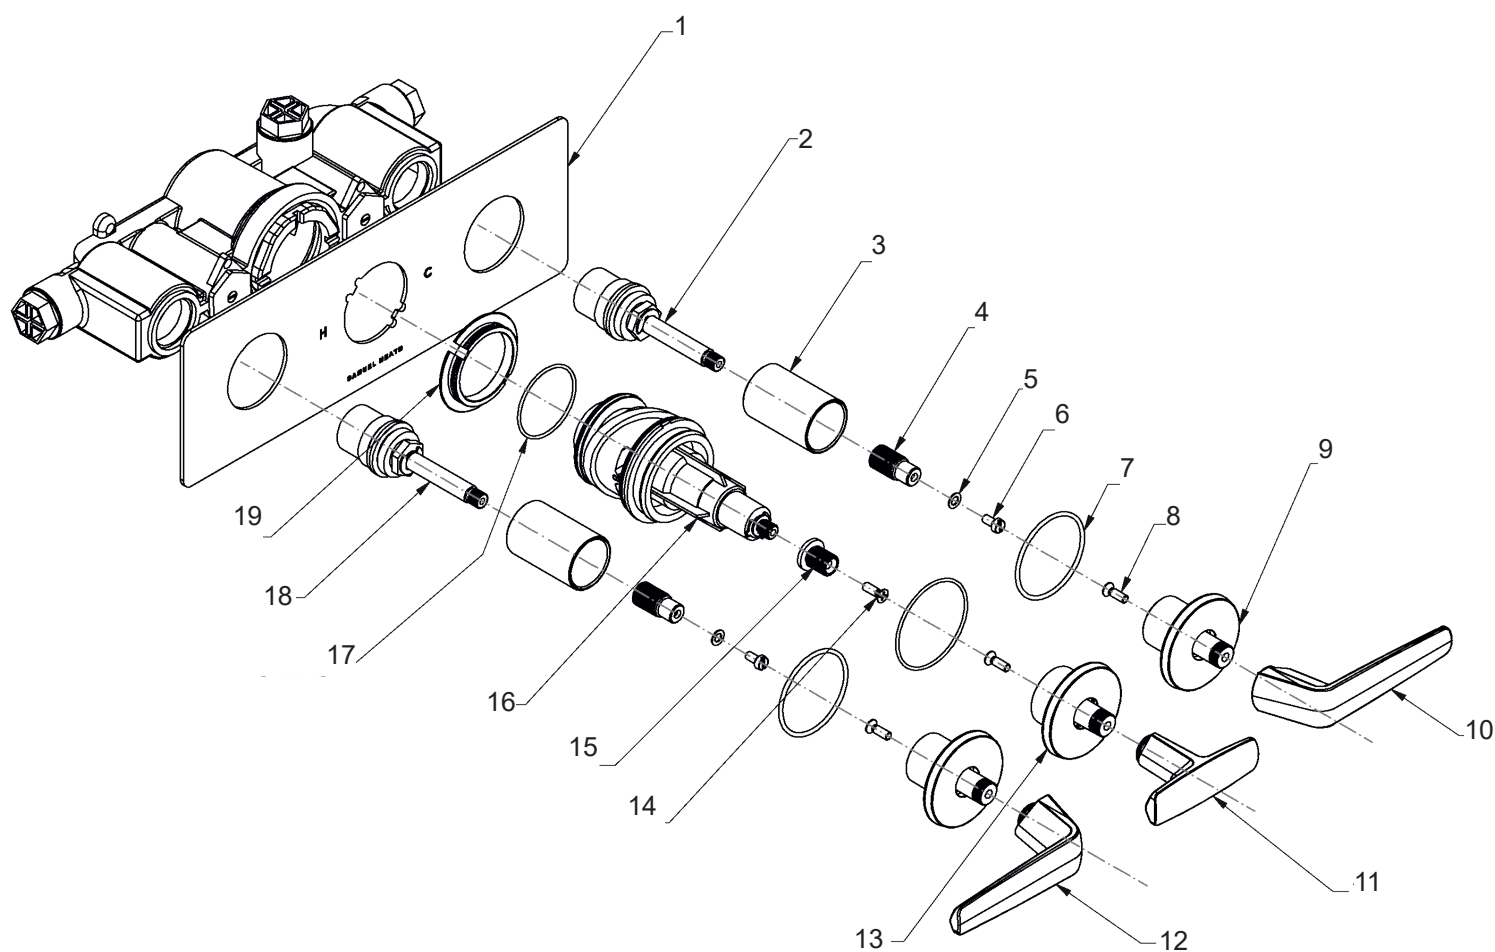

Item	Part No.	Description	Item	Part No.	Description
1	-	Shower Plate	12	-	Lever
2	VS56046	CD Valve (ACW Closing)	13	-	Thermo Body
3	-	Threaded Shank	14	-	Screw
4	-	Volume Spline Adaptor	15	-	Thermo Spline Adaptor
5	-	Washer	16	VS56065	Thermo Valve
6	-	Screw	17	-	O-Ring
7	-	O-Ring	18	VS56047	CD Valve (CW Closing)
8	-	Screw	19	-	Thermo Locking Ring
9	-	Volume Body			
10	-	Lever			
11	-	T-Bar			


Spares Information

T2005-TCTR

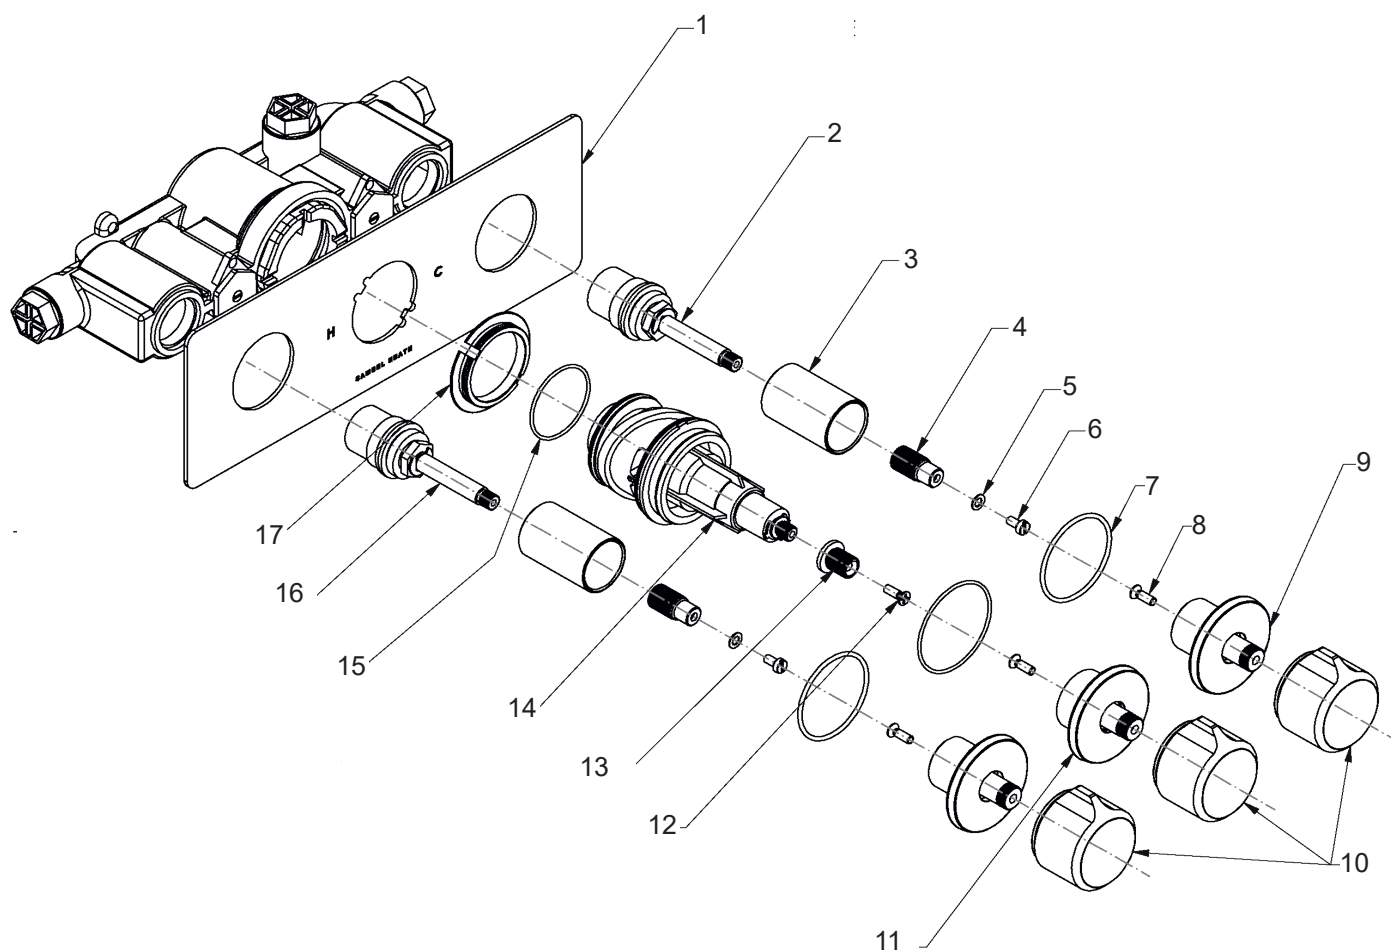


Item	Part No.	Description	Item	Part No.	Description
1	-	Shower Plate	11	-	Thermo Body
2	VS56046	CD Valve (ACW Closing)	12	-	Screw
3	-	Threaded Shank	13	-	Thermo Spline Adaptor
4	-	Volume Spline Adaptor	14	VS56065	Thermo Valve
5	-	Washer	15	-	O-Ring
6	-	Screw	16	VS56047	CD Valve (CW Closing)
7	-	O-Ring	17	-	Thermo Locking Ring
8	-	Screw			
9	-	Volume Body			
10	-	Knob			

Installation

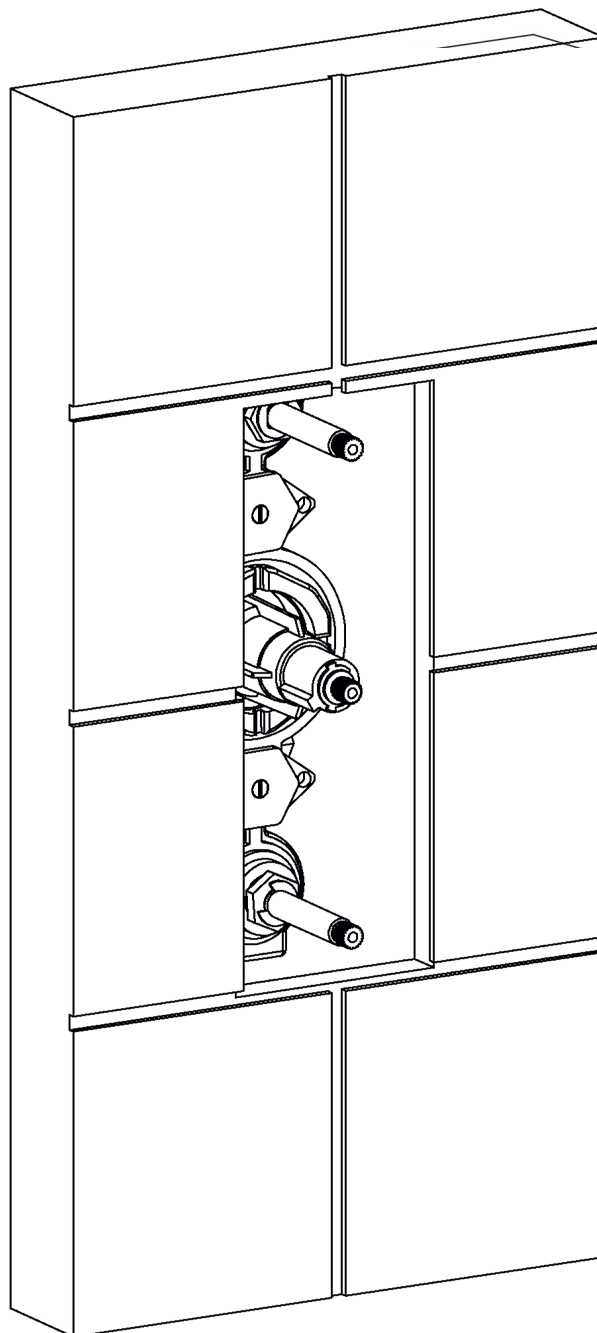


1. Install the finished surface, ensuring the finished surface is in accordance with the minimum and maximum installation depths shown in the front of this booklet.

Installation

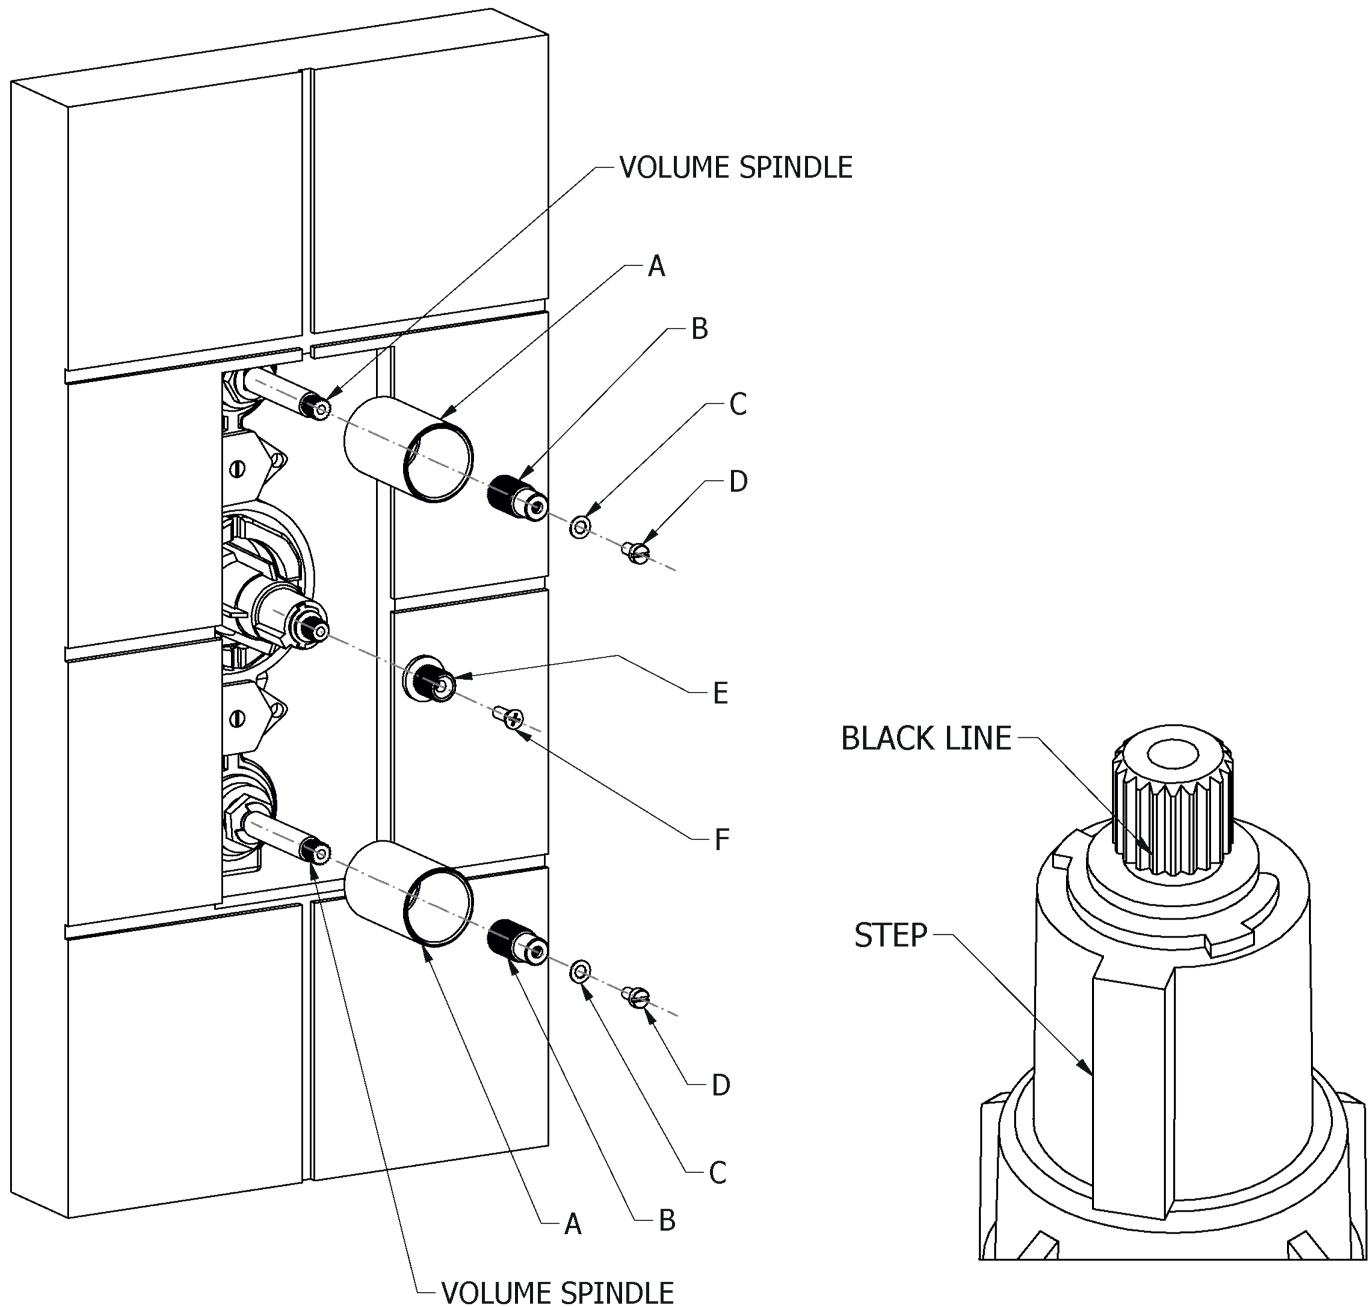


2. Ensure that the black line on the temperature spindle is in line with the step on the cartridge.
3. Screw volume threaded shanks (A) on to installation kit, over volume spindle.
4. Push volume spline adaptors (B) on to volume spindles and attach using screws (D) and anti- rotational washers (C).
5. Push thermo spline adaptor (E) on to temperature spindle and secure using screw (F). Ensure that the temperature spindle does not rotate when tightening.

Installation

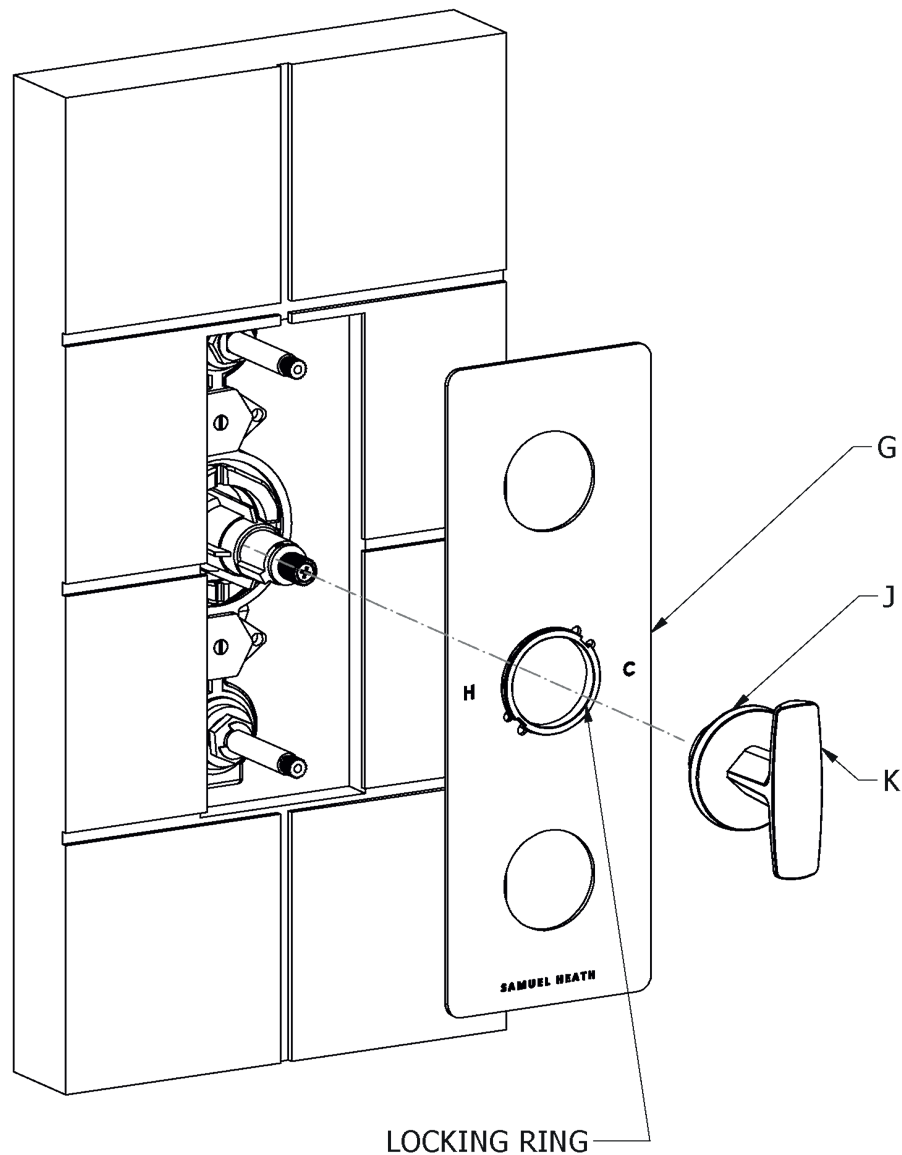

6. To install thermo escutcheon (J) & thermo control (K) on to shower plate (G), push thermo escutcheon (J) on to the locking ring to engage threads.
7. Once threads on the locking ring and thermo escutcheon (J) are engaged with one another, secure thermo escutcheon (J) in place by rotating it clockwise until it sits flush on shower plate (G).
8. Apply a bead of silicone sealant to the wall where the shower plate (G) will sit.
9. Push shower plate (G) and thermo control (J & K) on to the installed shower.

Installation

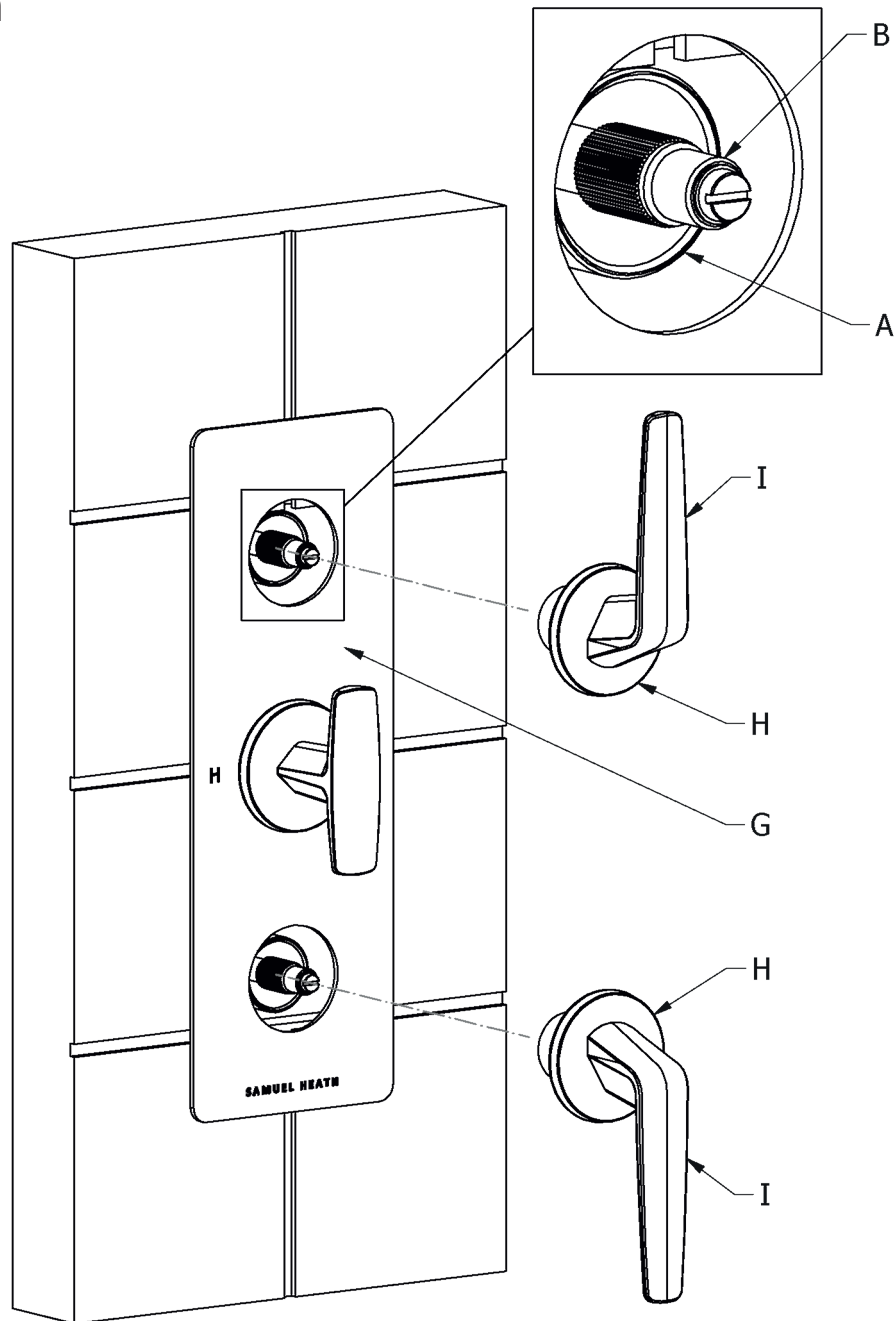


10. Screw volume escutcheons (H) on to volume threaded shanks (A) to engage with spline adaptors (B), while at the same time holding lever / roundel volume controls (I) stationary in the desired position.

11. Once volume escutcheons (H) and spline adaptors (B) are engaged with one another, rotate volume escutcheons (H) clockwise until they both sit flush on shower plate (G).

12. Ensure sealant has set and plate is secured.

Adjusting the temperature

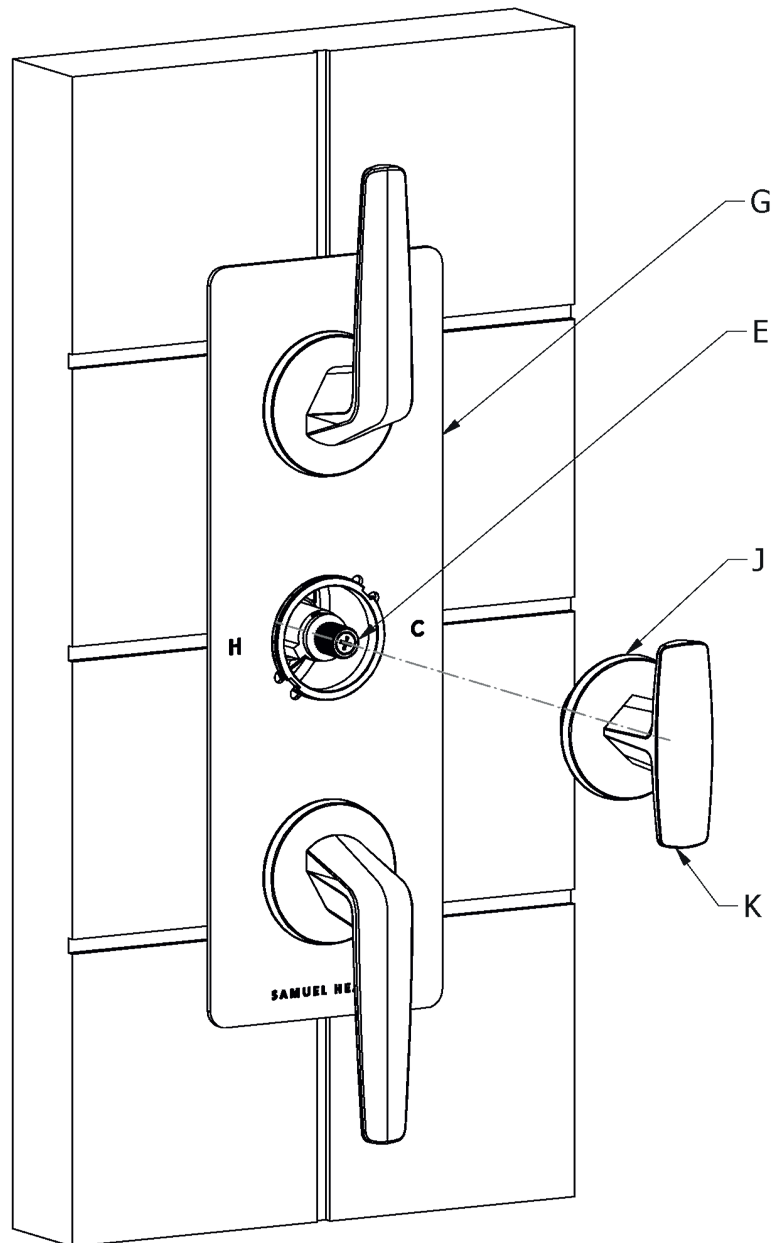

1. Unscrew thermo escutcheon (J) while at the same time holding thermo control (K) stationary.
2. Pull thermo escutcheon (J) and thermo control (K) away from trim plate assembly (G).
3. Rotate spline adaptor (E) anti-clockwise to make the water hotter, or clockwise to make the water colder.
4. Re-assemble thermo escutcheon (J) and thermo control (K).

IMPORTANT NOTES

1. Installation should be carried out by a competent engineer, in accordance with water regulations.
2. Before installation, ensure supply pipes are flushed clean. Debris or loose particles will affect the efficiency of the ceramic disc cartridge.
3. For mixer taps, it is recommended that hot & cold pressures are equally balanced.
4. To help maintain the high quality finish, please clean with a soft damp cloth. Do not use abrasive polish or cleaners. Stains may be removed using undiluted washing up liquid.
5. Ceramic cartridges in hard water areas. To prolong the lifespan and reduce servicing periods of your Samuel Heath tap we recommend that a suitable water softener be fitted. Consult your installer/designer for details.
6. Please note that as with all tap and shower ware it will be necessary from time to time for the products to be serviced, this should be carried out by a qualified Plumbing Engineer.

NOTES IMPORTANTES

1. L'installation doit être faite par un ingénieur qualifié, selon les règlements du Service Eau.
2. Avant l'installation, il faut s'assurer que les tuyaux d'approvisionnement sont complètement purgés. Les déchets flottants auront un effet détrimentaire sur l'efficacité de la cartouche céramique.
3. Il est recommandé que les pressions de l'eau chaude et eau froide des mitigeurs et mélangeurs soient maintenues à un niveau égal.
4. Pour conserver la finition de haute qualité, nettoyer avec un chiffon doux et humide. N'employer jamais de la cire et des produits abrasifs. Les tâches peuvent être enlevées à l'aide de liquide vaisselle pur.
5. Cartouches en céramique dans les régions à eau calcaire. Pour prolonger la durée et réduire l'entretien de votre robinetterie Samuel Heath, nous recommandons d'utiliser un adoucisseur d'eau convenable. Veuillez consulter votre installateur/fournisseur pour plus de renseignements.
6. Veuillez noter qu'un entretien sera nécessaire de temps en temps et doit être effectué par un installateur qualifié.

WICHTIGE HINWEISE

1. Installation sollte durch einen kompetenten Fachmann und nach den üblichen Vorschriften ausgeführt werden.
2. Vor Installation Wasserleitung gründlich durchspülen. Verschmutzung wird die Funktion der Kartusche erheblich einschränken.
3. Für Mischbatterien ist es wichtig, daß Wasser mit gleichem Druck eingeführt wird.
4. Um den optimalen Zustand dieses Produktes zu erhalten, wischen Sie es bitte nur mit einem feuchten, weichen Lappen ab. Auf keinen Fall Scheuermittel verwenden. Flecken lassen sich mit unverdünntem Geschirrspülmittel entfernen.
5. Keramikkartuschen in Hartwasserbereichen. Um die Lebensdauer zu verlängern und Wartungszeiten zu reduzieren empfiehlt Samuel Heath den Einsatz eines geeigneten Wasserenthärter. Fragen Sie Ihren Installateur/Designer um Rat.
6. Bitte merken Sie, dass alle Armaturen ab und zu eine Wartung brauchen. Diese soll durch einen kompetenten Installateur ausgeführt werden.

ATENCION

1. La instalación se debe realizar por un fontanero.
2. Antes de la instalación, deben pulgar las tuberías dejando correr el agua por las tuberías para que arrastren los residuos de montaje/obra, con el motivo de que no afecte la eficacia del cartucho de cerámica.
3. Para grupo baño/ducha se recomienda que las presiones del agua caliente y frío sean equilibradas.
4. Para ayudar a mantener el acabado de este producto, limpiar con un paño húmedo suave. No se debe emplear productos abrasivos de baño. Las manchas se pueden quitar empleando líquido lava-vajillas puro.
5. Cartuchos cerámicos en áreas de aguas duras. Para prolongar su vida útil y reducir los periodos de reparación de su grifo Samuel Heath recomendamos la instalación de un descalcificador de agua. Consulte a su instalador para más detalles.
6. Igual que con todo tipo de grifería y duchas, de vez en cuando será necesario llevar a cabo una revisión al producto; esto debería ser realizado por un fontanero calificado.

ATTENZIONE

1. L'impianto deve essere montato da personale tecnico in conformità alle vigenti leggi.
2. Prima dell'installazione assicurarsi che le tubature dell'acqua siano pulite. Detriti o residui di lavorazione compromettono l'efficienza del cartuccio.
3. Per i gruppi, si raccomanda che le pressioni acqua calda e acqua fredda siano ugualmente bilanciate.
4. Per mantenere la finizione di ottima qualità, pulire con un panno soffice e inumidito. Non usare creme lucidanti e materiali abrasivi. Le macchie potranno essere tolte usando del detersivo per piatti puro.
5. Come con tutti i tipi di rubinetti e docce, di volta in volta è necessario effettuare una revisione al prodotto; questo dovrebbe essere fatto da un idraulico qualificato.

SAMUEL HEATH

Head Office and Customer Service

Leopold Street
Birmingham
England
B12 0UJ

T: +44 (0)121 766 4200
F: +44 (0)121 772 3334

Info@samuel-heath.com
www.samuel-heath.co.uk

US Customer Service

usa@samuel-heath.com
Federal I.D. No. 58-1504682
www.samuel-heath.com

8-40692
Issue: B