

SAMUEL HEATH

Product Data Sheet

T2003 Trim To Suit V132-IS & V132-AIS



T2003-TCTR

- Available Control Options -



T2003-TCBA



T2003-TCGR



T2003-TCOL



T2003-TCOR



T2003-TCOX





T2003-TCPR





T2003-TCTL

Dimension Key

T2003-TCBA

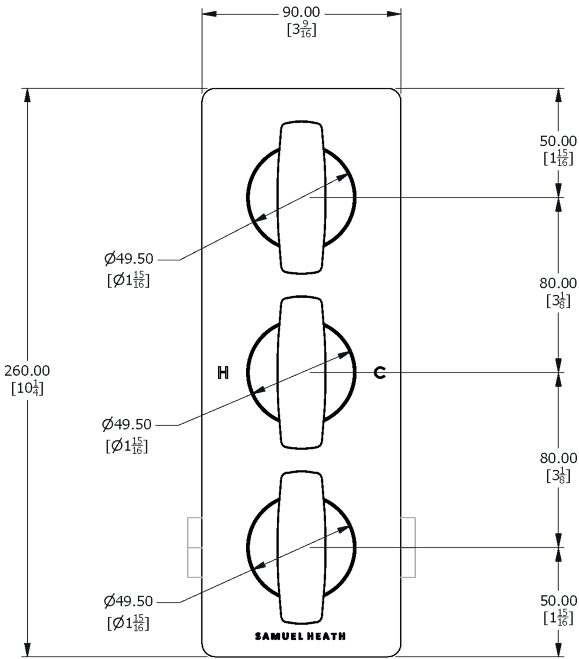
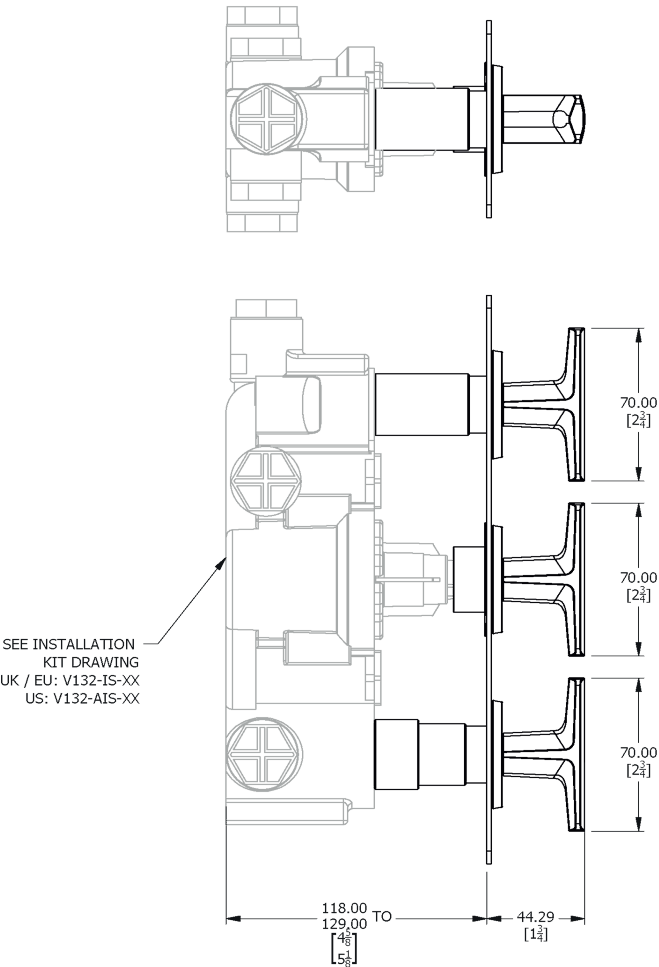


T2003-TCGR

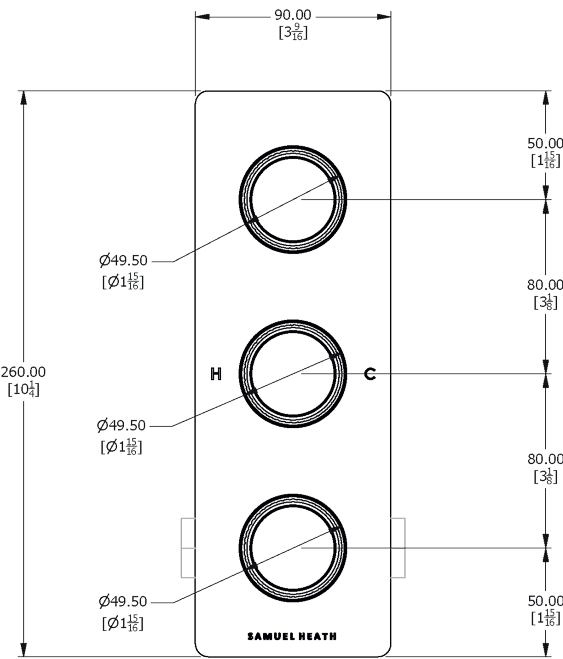
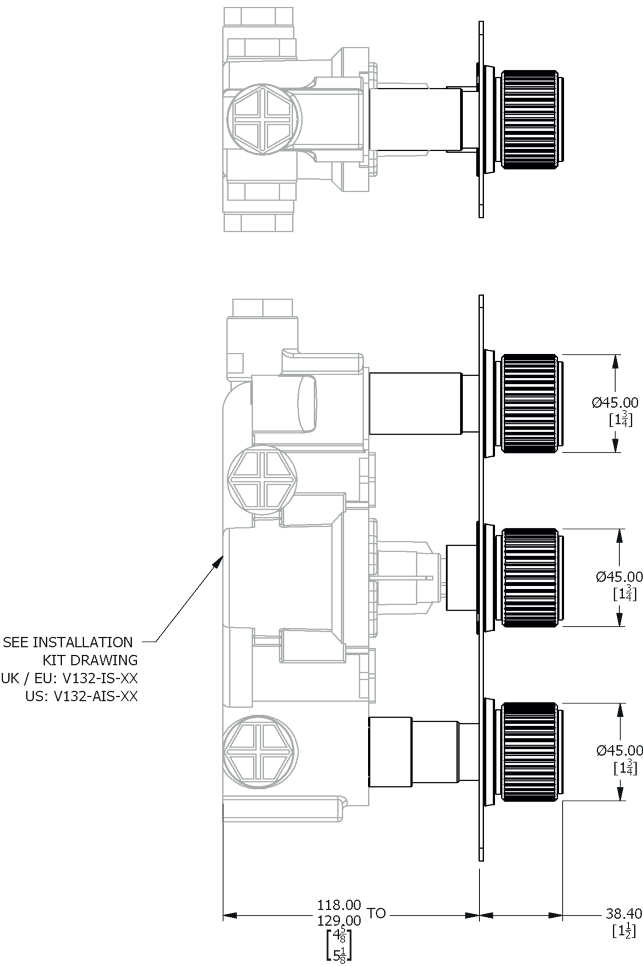


Dimension Key

T2003-TCOL

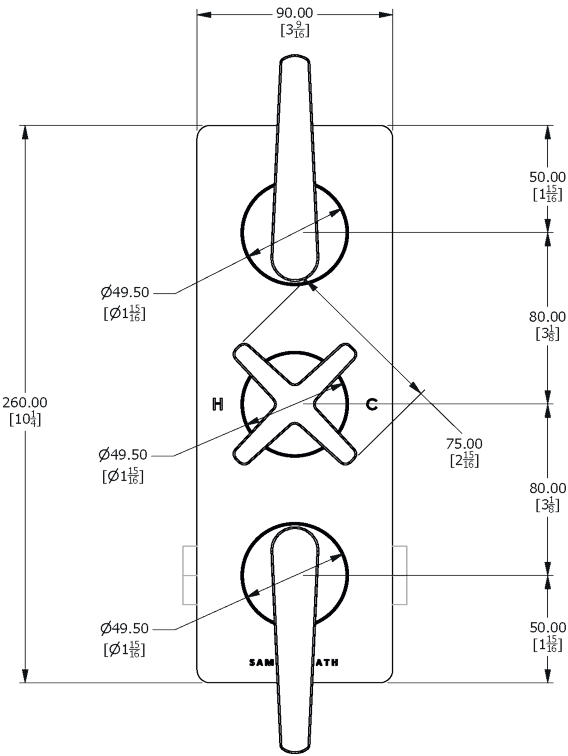
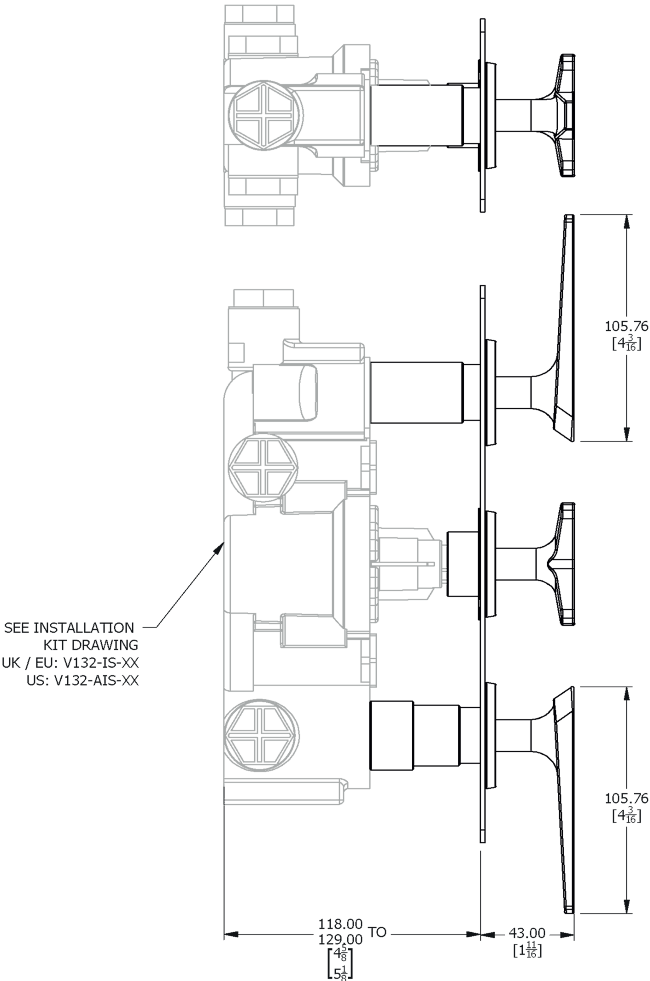


T2003-TCOR

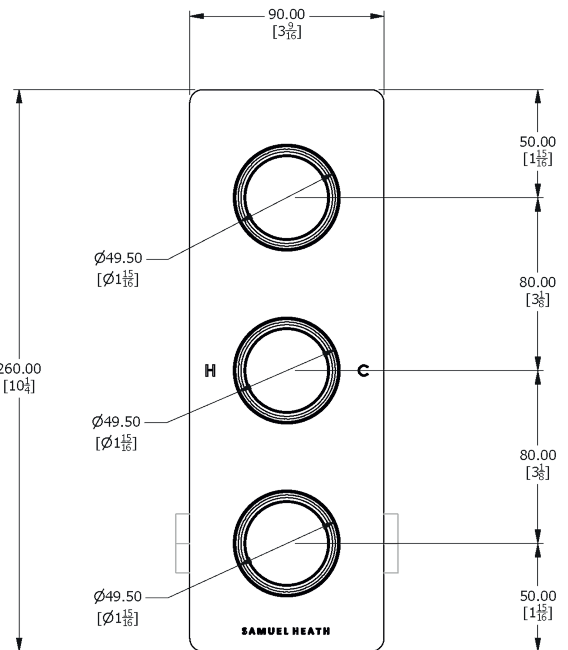
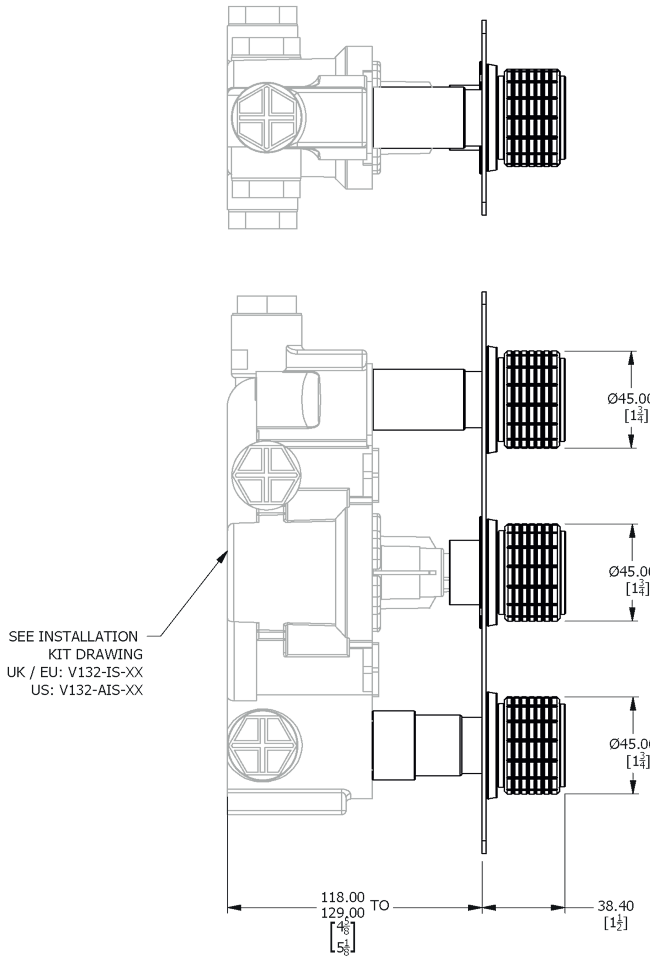


Dimension Key

T2003-TCOX

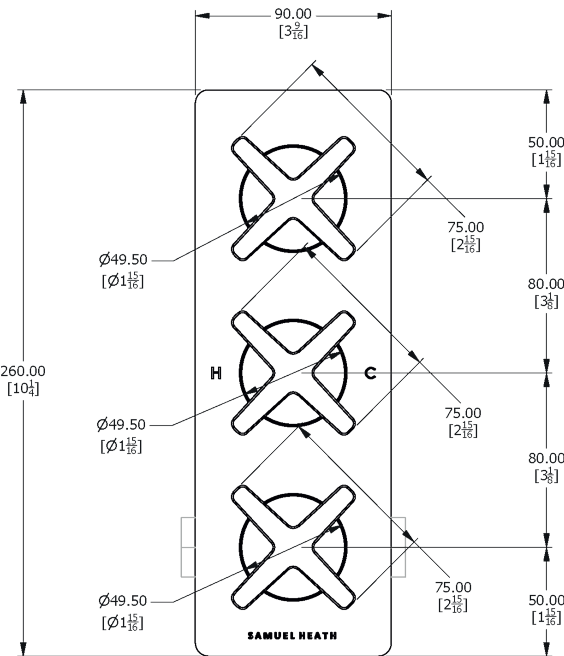
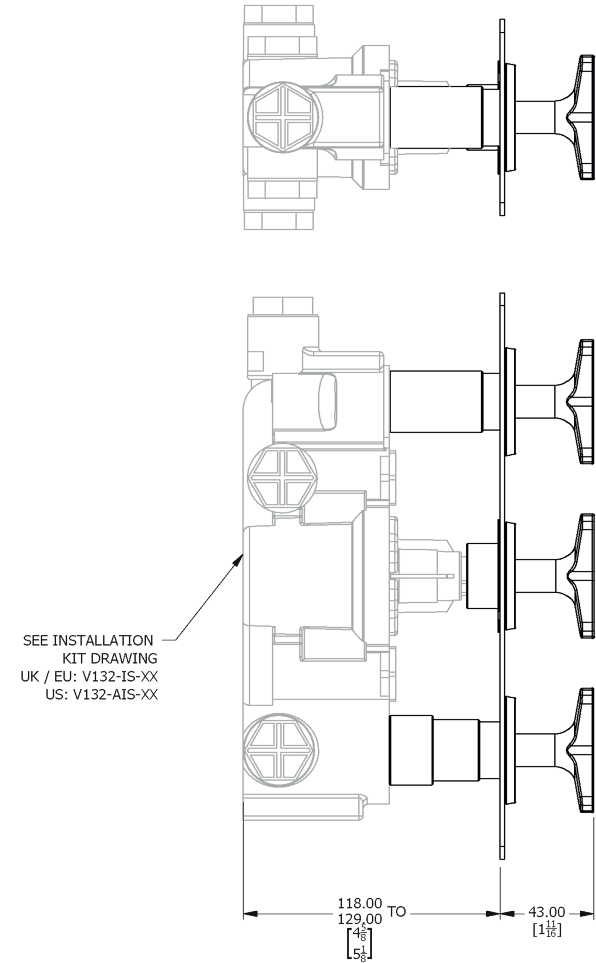


T2003-TCPR

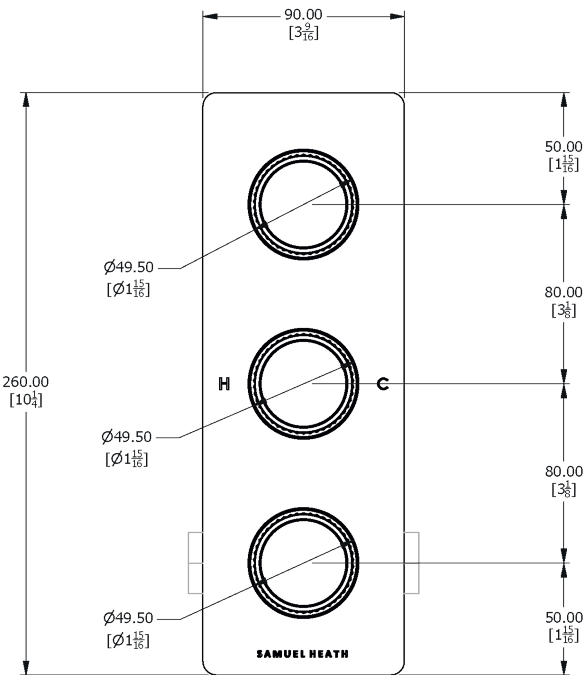
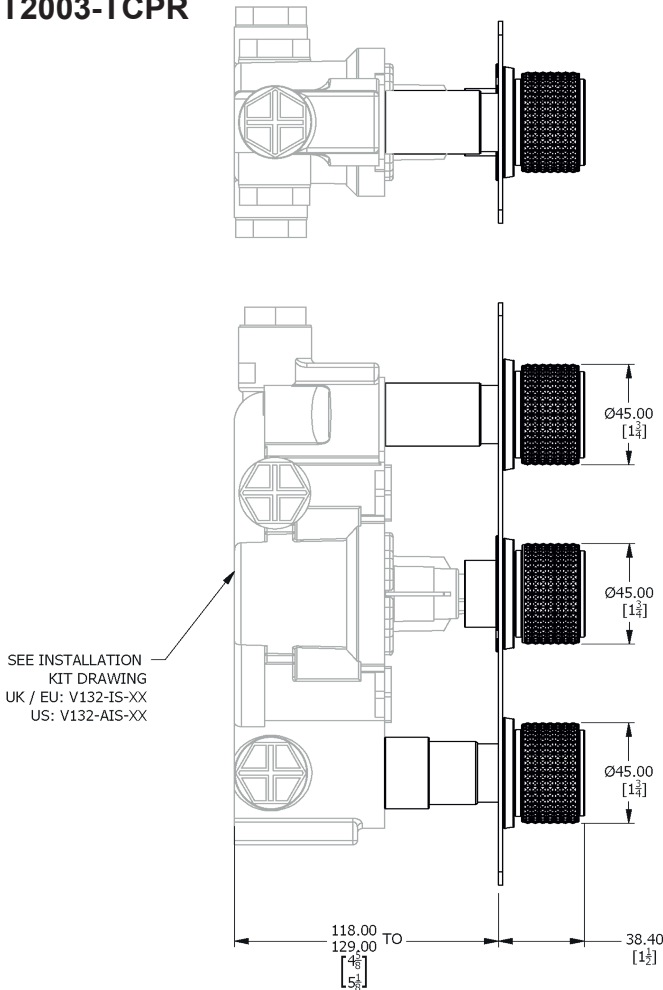


Dimension Key

T2003-TCTL

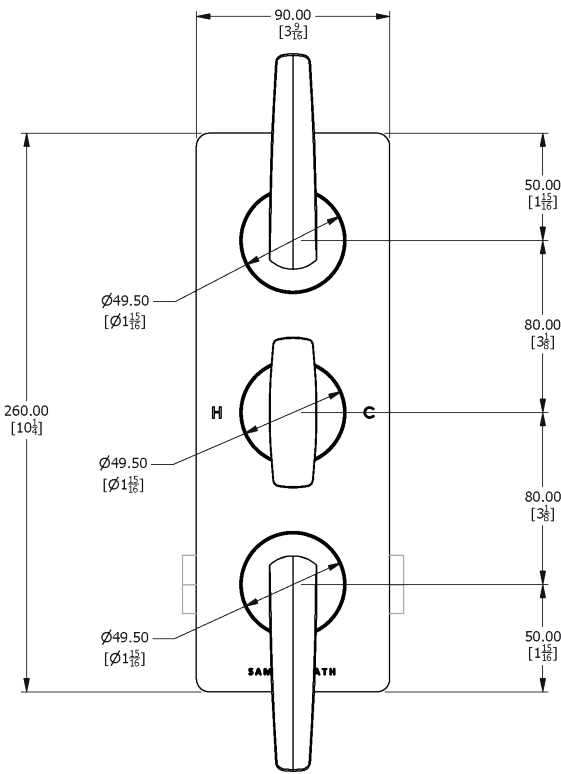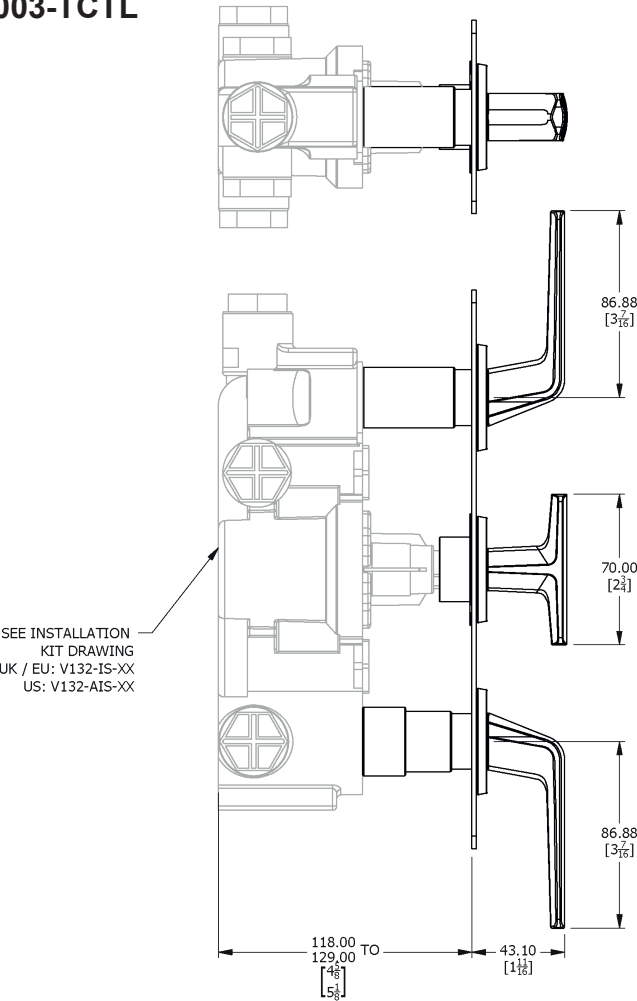


T2003-TCTR

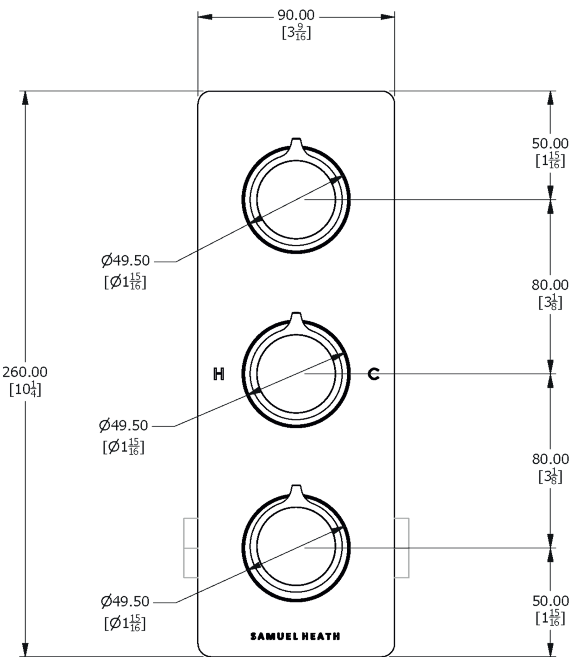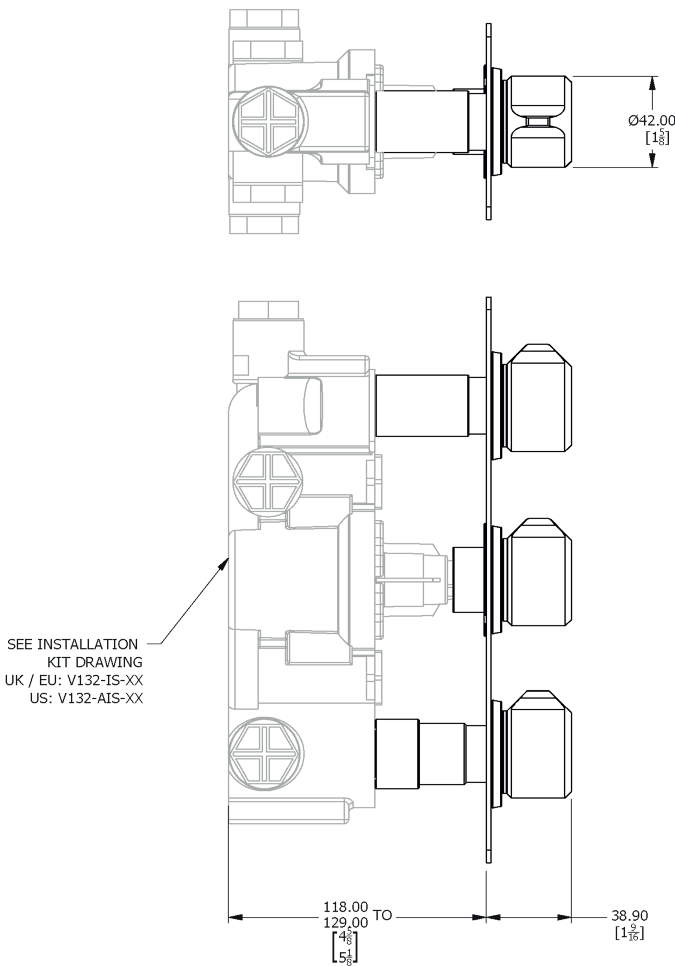

Spares Information


T2003-TCBA

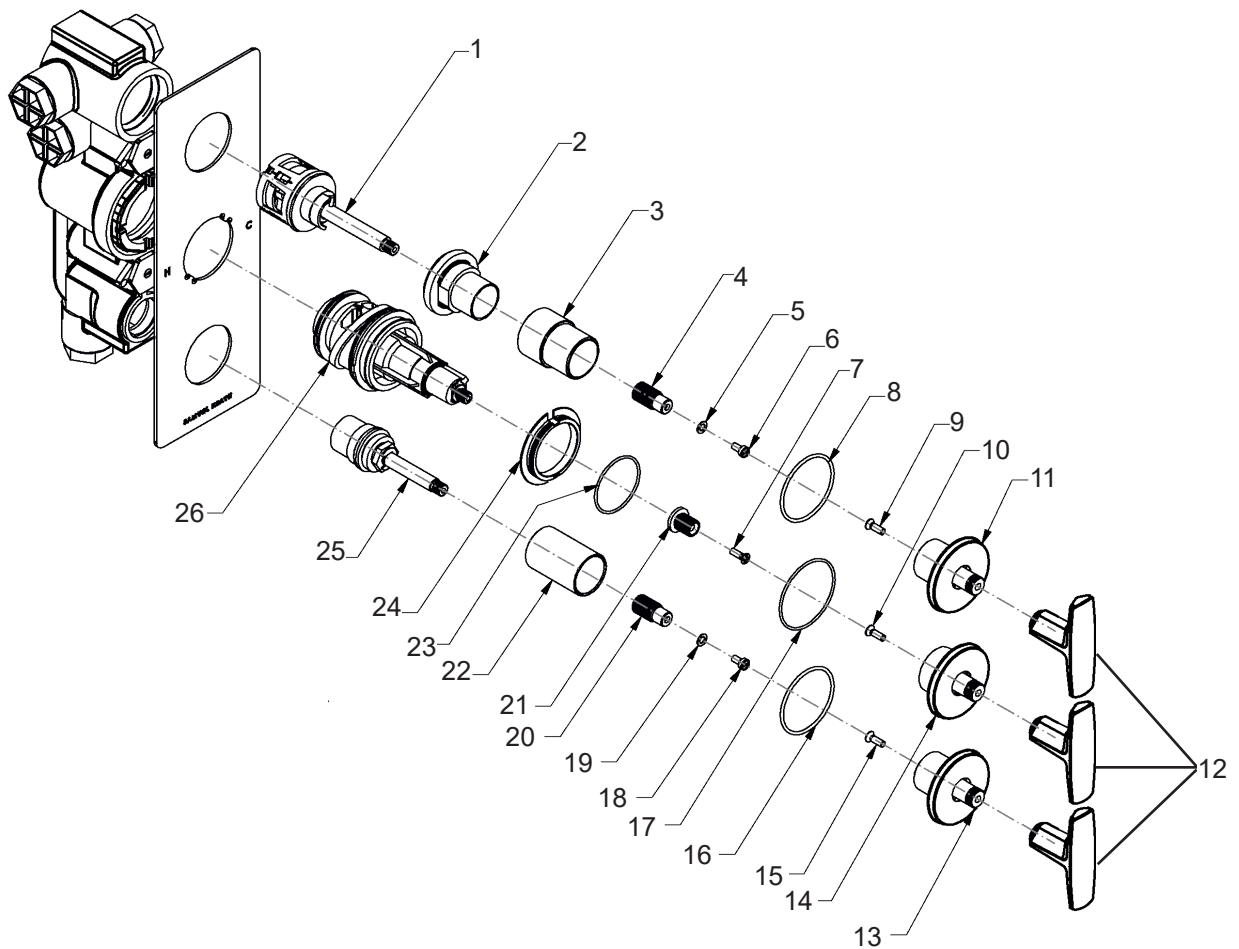

Item	Part No.	Description	Item	Part No.	Description
1	VS56045	Diverter Cartridge	13	-	Volume Body
2	-	Diverter Retaining Nut	14	-	Thermo Body
3	-	Diverter Threaded Shank	15	-	Screw
4	-	Spline Adaptor	16	-	O Ring
5	-	Washer	17	-	O-Ring
6	-	Screw	18	-	Screw
7	-	Screw	19	-	Washer
8	-	O-Ring	20	-	Spline Adaptor
9	-	Screw	21	-	Thermo Spline Adaptor
10	-	Screw	22	-	Volume Threaded Shank
11	-	Diverter Body	23	-	O-Ring
12	-	T-Bar	24	-	Locking Nut
			25	VS56047	CD Valve
			26	VS56065	Thermo Cartridge

Spares Information


T2003-TCGR

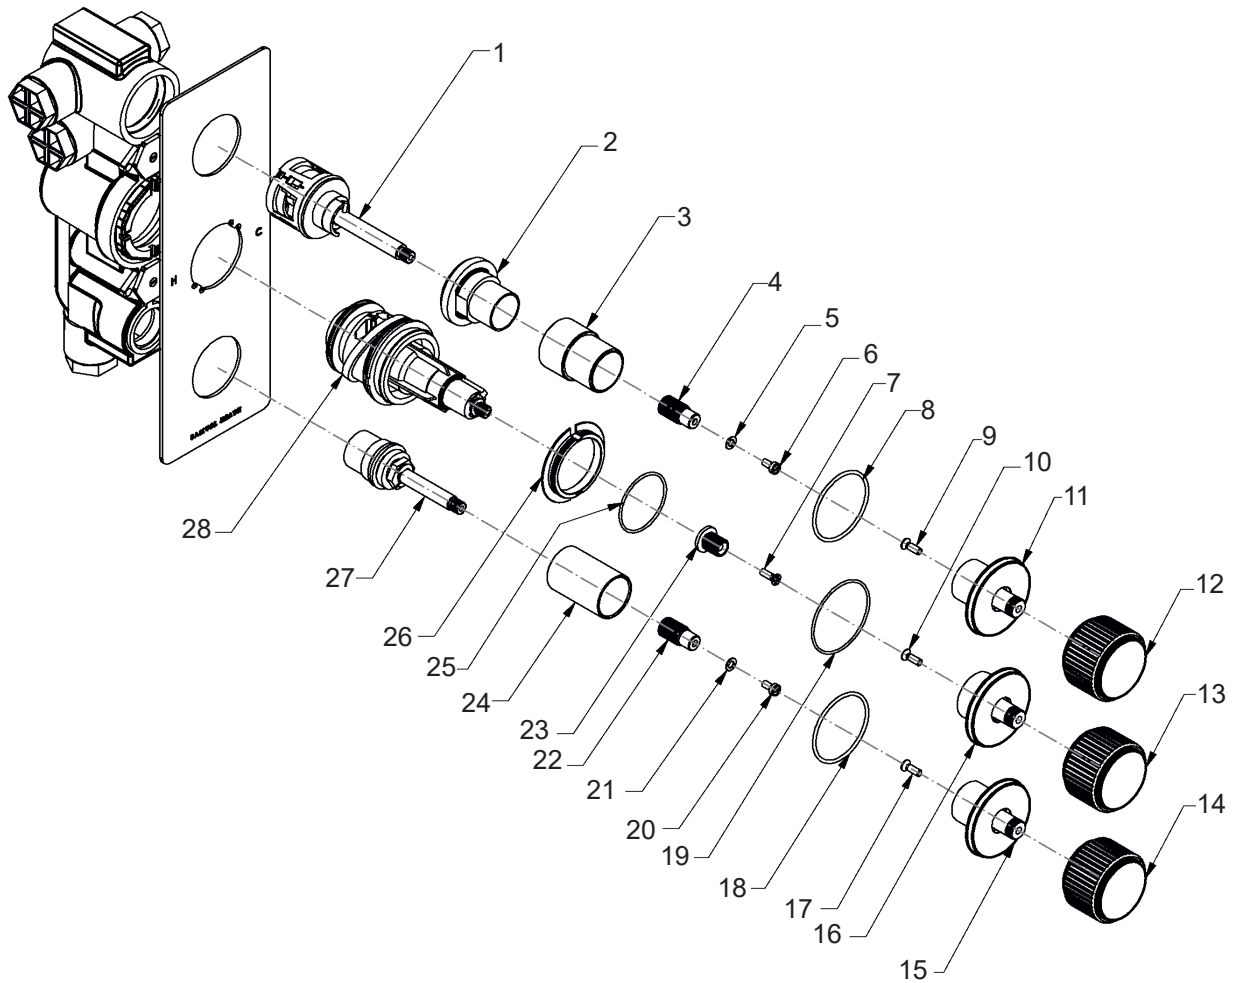

Item	Part No.	Description	Item	Part No.	Description
1	VS56045	Diverter Cartridge	15	-	Volume Body
2	-	Diverter Retaining Nut	16	-	Thermo Body
3	-	Diverter Threaded Shank	17	-	Screw
4	-	Spline Adaptor	18	-	O-Ring
5	-	Washer	19	-	O Ring
6	-	Screw	20	-	Screw
7	-	Screw	21	-	Washer
8	-	O-Ring	22	-	Spline Adapter
9	-	Screw	23	-	Thermo Spline Adaptor
10	-	Screw	24	-	Volume Threaded Shank
11	-	Diverter Body	25	-	O-Ring
12	-	Knob	26	-	Locking Nut
13	-	Knob	27	VS56047	CD Valve
14	-	Knob	28	VS56065	Thermo Cartridge

Spares Information


T2003-TCOL

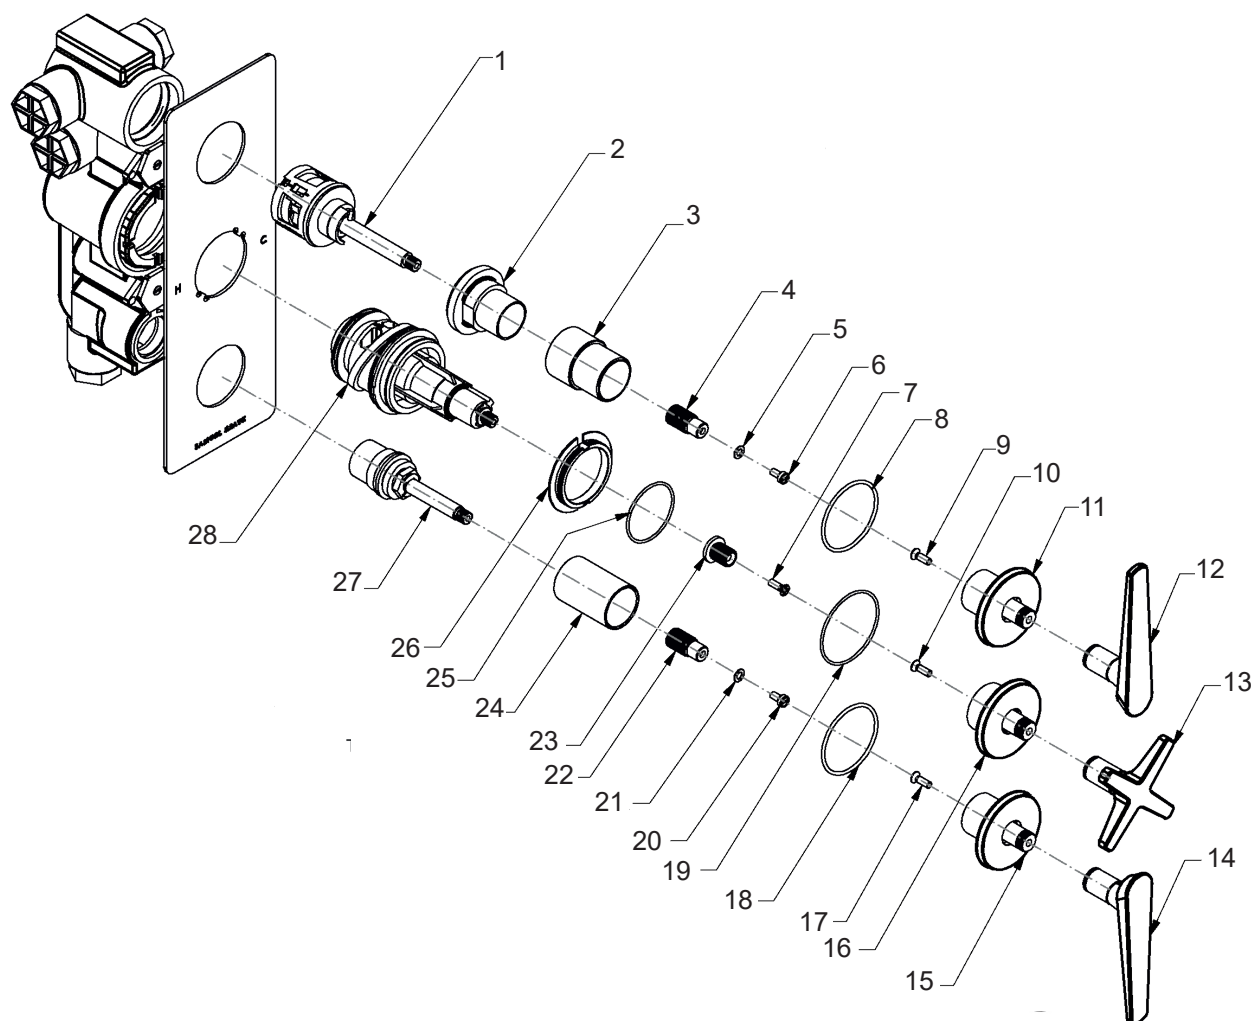

Item	Part No.	Description	Item	Part No.	Description
1	VS56045	Diverter Cartridge	15	-	Volume Body
2	-	Diverter Retaining Nut	16	-	Thermo Body
3	-	Diverter Threaded Shank	17	-	Screw
4	-	Spline Adaptor	18	-	O-Ring
5	-	Washer	19	-	O Ring
6	-	Screw	20	-	Screw
7	-	Screw	21	-	Washer
8	-	O-Ring	22	-	Spline Adapter
9	-	Screw	23	-	Thermo Spline Adaptor
10	-	Screw	24	-	Volume Threaded Shank
11	-	Diverter Body	25	-	O-Ring
12	-	Lever	26	-	Locking Nut
13	-	Cross Top	27	VS56047	CD Valve
14	-	Lever	28	VS56065	Thermo Cartridge

Spares Information


T2003-TCOX

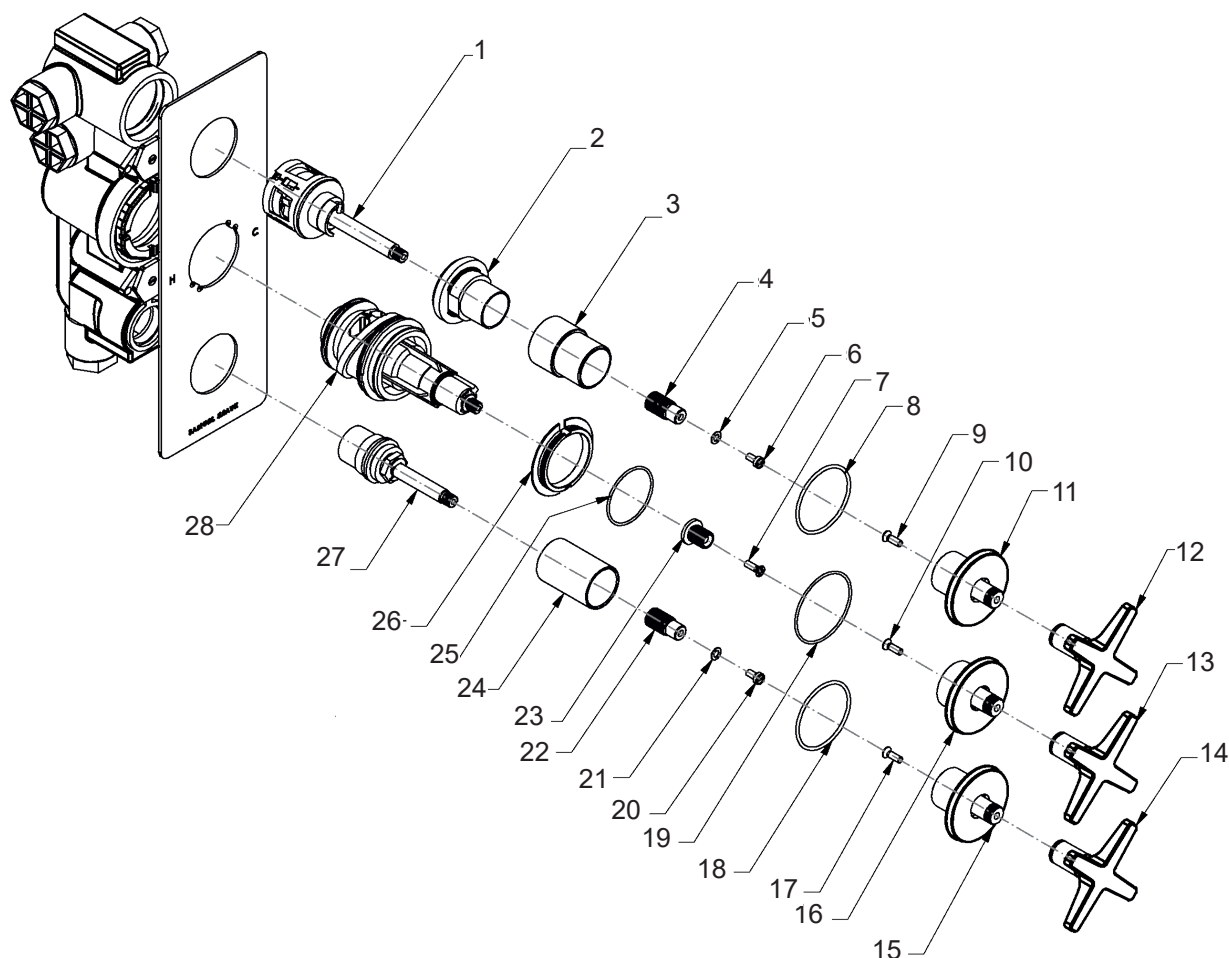

Item	Part No.	Description	Item	Part No.	Description
1	VS56045	Diverter Cartridge	15	-	Volume Body
2	-	Diverter Retaining Nut	16	-	Thermo Body
3	-	Diverter Threaded Shank	17	-	Screw
4	-	Spline Adaptor	18	-	O-Ring
5	-	Washer	19	-	O Ring
6	-	Screw	20	-	Screw
7	-	Screw	21	-	Washer
8	-	O-Ring	22	-	Spline Adapter
9	-	Screw	23	-	Thermo Spline Adaptor
10	-	Screw	24	-	Volume Threaded Shank
11	-	Diverter Body	25	-	O-Ring
12	-	Cross Top	26	-	Locking Nut
13	-	Cross Top	27	VS56047	CD Valve
14	-	Cross Top	28	VS56065	Thermo Cartridge

Spares Information


T2003-TCOR

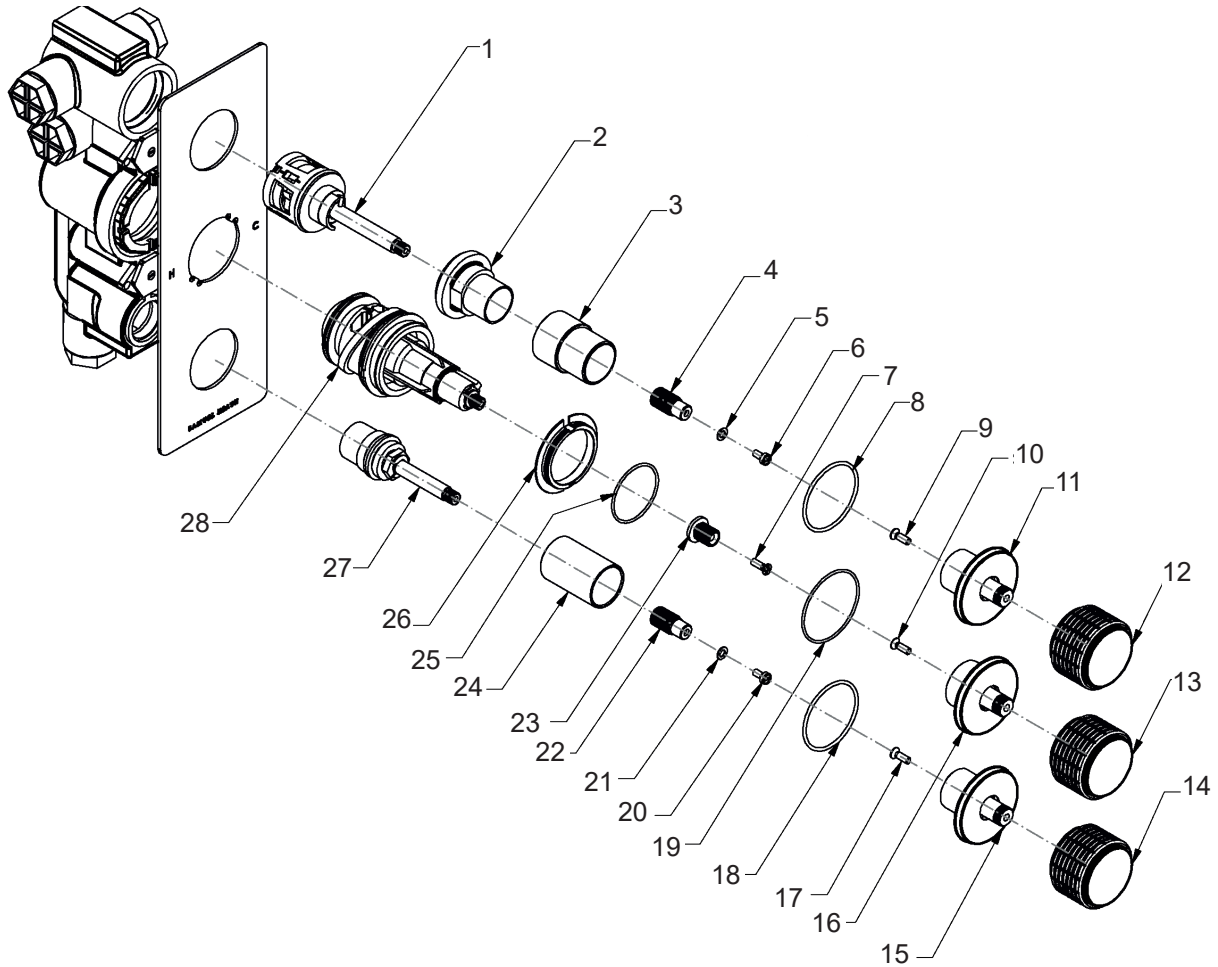

Item	Part No.	Description	Item	Part No.	Description
1	VS56045	Diverter Cartridge	15	-	Volume Body
2	-	Diverter Retaining Nut	16	-	Thermo Body
3	-	Diverter Threaded Shank	17	-	Screw
4	-	Spline Adaptor	18	-	O-Ring
5	-	Washer	19	-	O Ring
6	-	Screw	20	-	Screw
7	-	Screw	21	-	Washer
8	-	O-Ring	22	-	Spline Adapter
9	-	Screw	23	-	Thermo Spline Adaptor
10	-	Screw	24	-	Volume Threaded Shank
11	-	Diverter Body	25	-	O-Ring
12	-	Knob	26	-	Locking Nut
13	-	Knob	27	VS56047	CD Valve
14	-	Knob	28	VS56065	Thermo Cartridge

Spares Information


T2003-TCPR

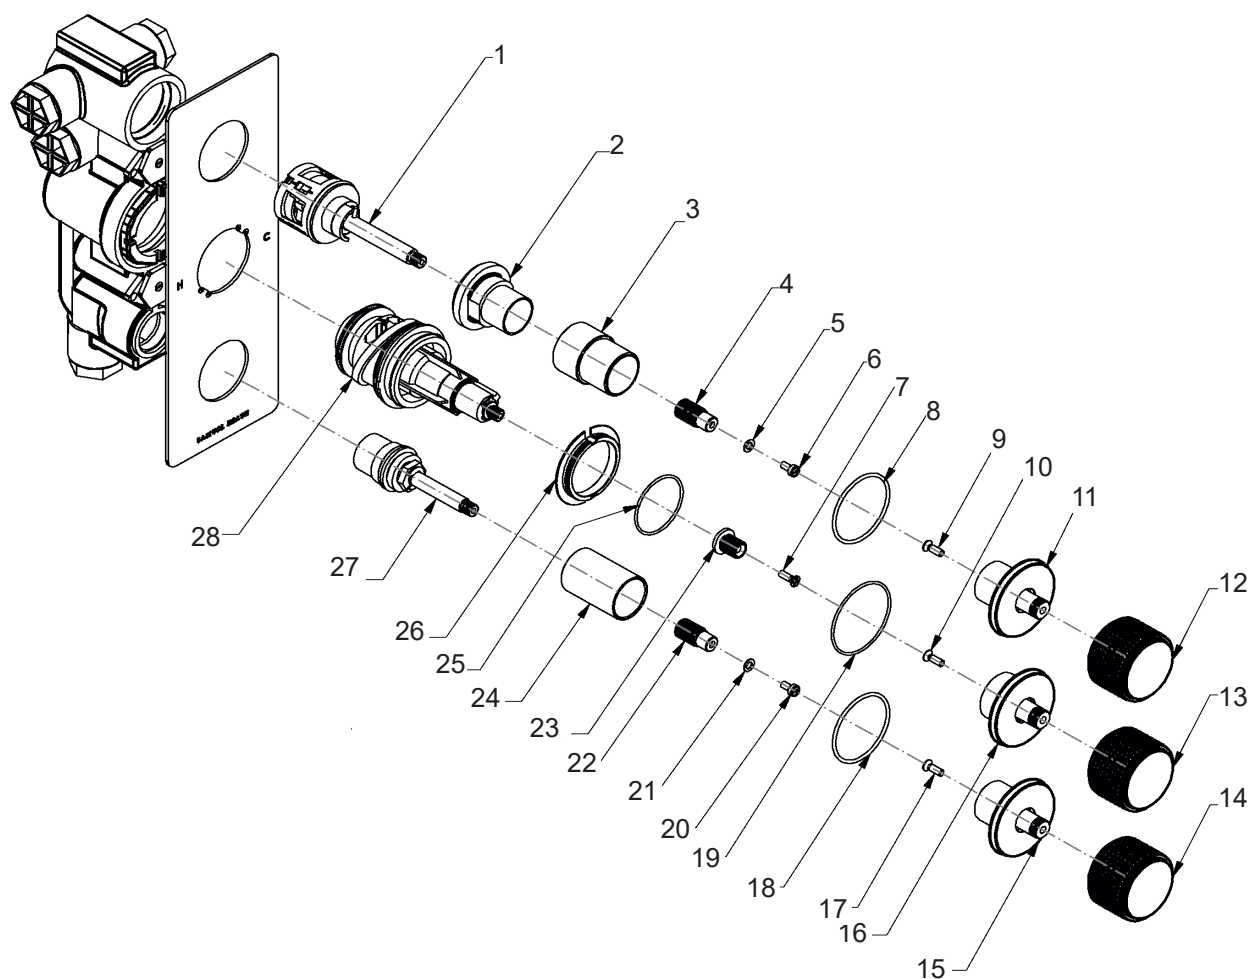

Item	Part No.	Description	Item	Part No.	Description
1	VS56045	Diverter Cartridge	15	-	Volume Body
2	-	Diverter Retaining Nut	16	-	Thermo Body
3	-	Diverter Threaded Shank	17	-	Screw
4	-	Spline Adaptor	18	-	O-Ring
5	-	Washer	19	-	O Ring
6	-	Screw	20	-	Screw
7	-	Screw	21	-	Washer
8	-	O-Ring	22	-	Spline Adapter
9	-	Screw	23	-	Thermo Spline Adaptor
10	-	Screw	24	-	Volume Threaded Shank
11	-	Diverter Body	25	-	O-Ring
12	-	Knob	26	-	Locking Nut
13	-	Knob	27	VS56047	CD Valve
14	-	Knob	28	VS56065	Thermo Cartridge

Spares Information


T2003-TCTL

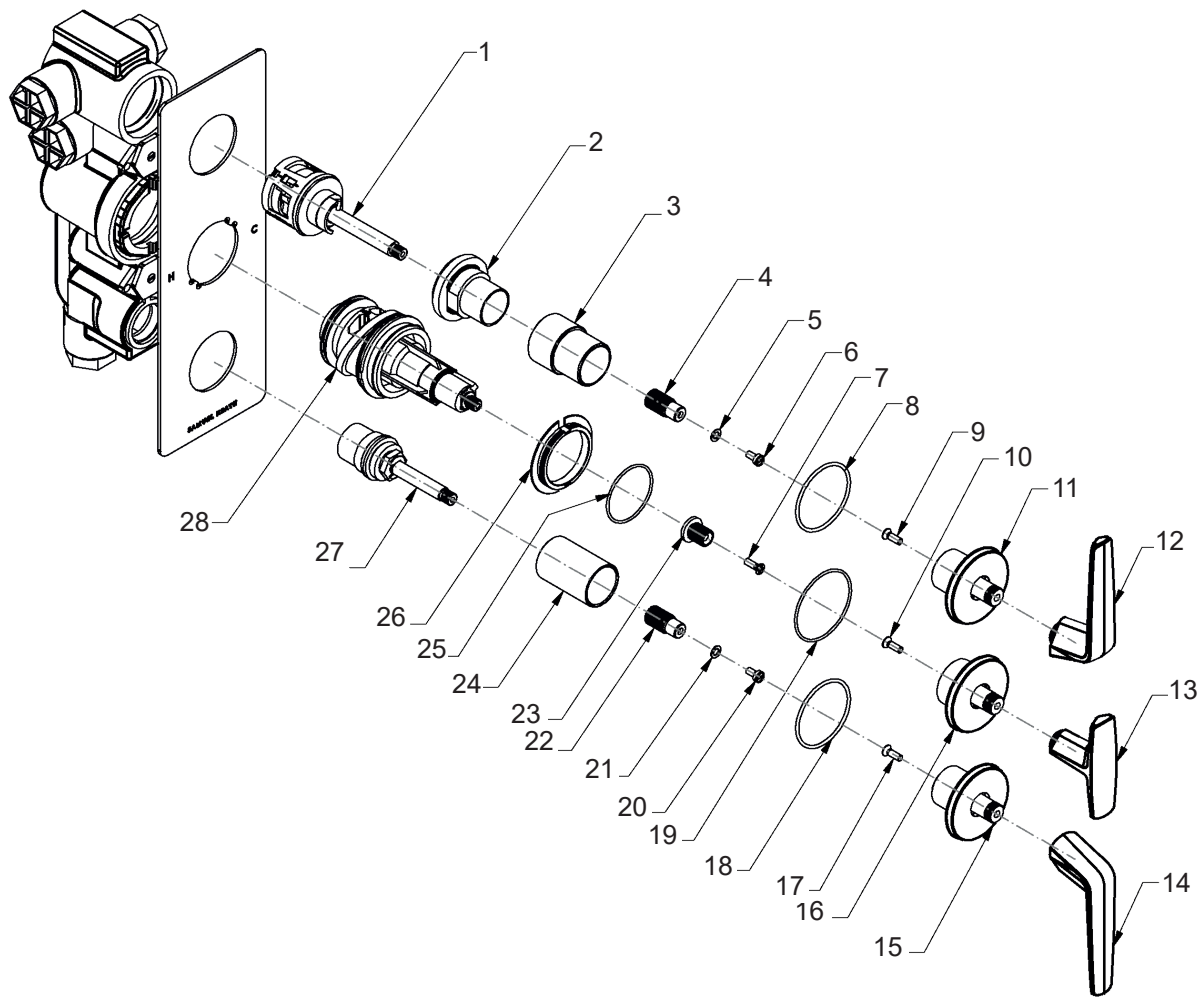

Item	Part No.	Description	Item	Part No.	Description
1	VS56045	Diverter Cartridge	15	-	Volume Body
2	-	Diverter Retaining Nut	16	-	Thermo Body
3	-	Diverter Threaded Shank	17	-	Screw
4	-	Spline Adaptor	18	-	O-Ring
5	-	Washer	19	-	O Ring
6	-	Screw	20	-	Screw
7	-	Screw	21	-	Washer
8	-	O-Ring	22	-	Spline Adapter
9	-	Screw	23	-	Thermo Spline Adaptor
10	-	Screw	24	-	Volume Threaded Shank
11	-	Diverter Body	25	-	O-Ring
12	-	Lever	26	-	Locking Nut
13	-	T-Bar	27	VS56047	CD Valve
14	-	Lever	28	VS56065	Thermo Cartridge


Spares Information

T2003-TCTR

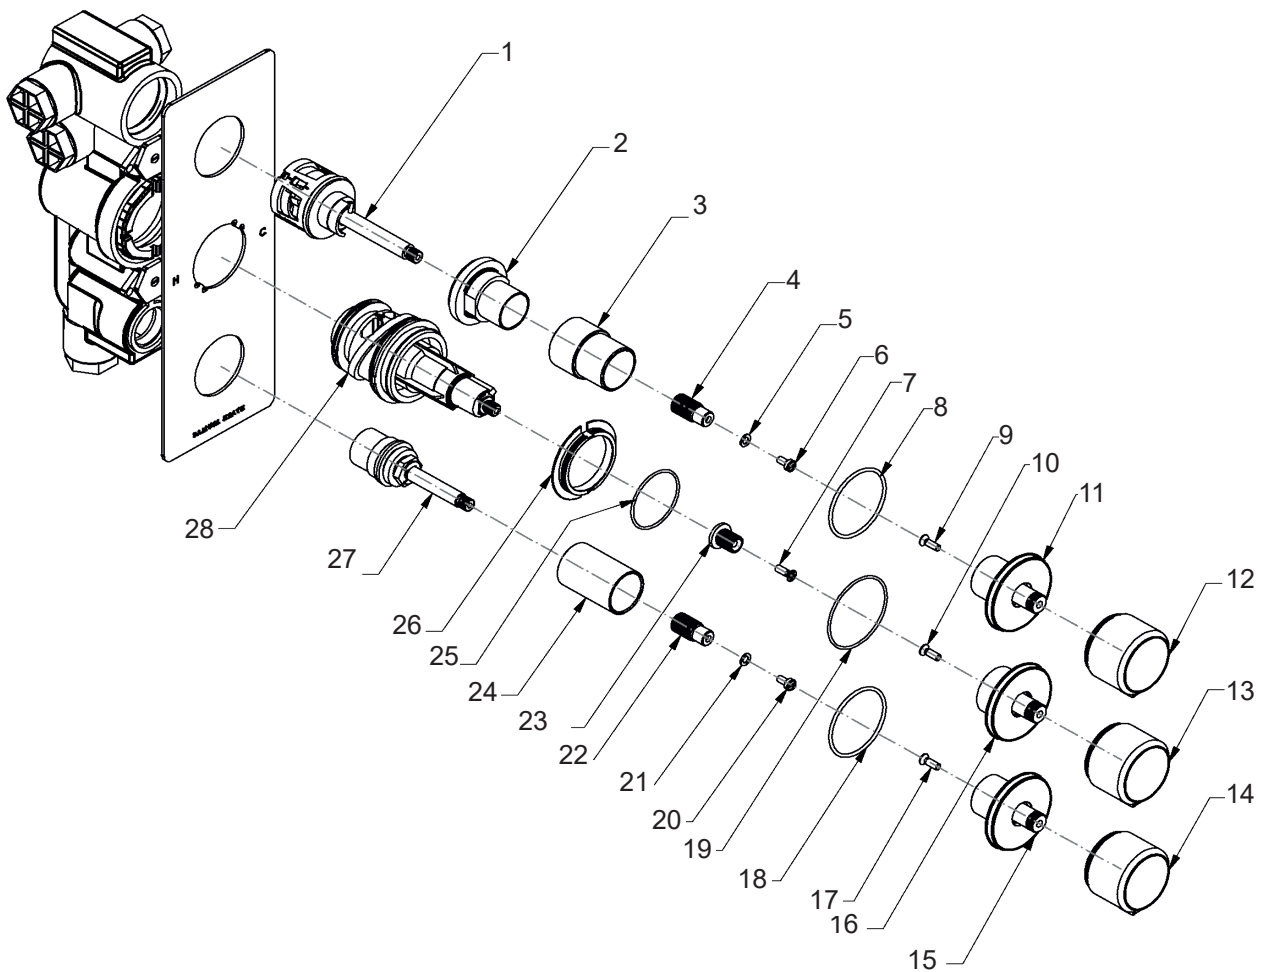


Item	Part No.	Description	Item	Part No.	Description
1	VS56045	Diverter Cartridge	15	-	Volume Body
2	-	Diverter Retaining Nut	16	-	Thermo Body
3	-	Diverter Threaded Shank	17	-	Screw
4	-	Spline Adaptor	18	-	O-Ring
5	-	Washer	19	-	O Ring
6	-	Screw	20	-	Screw
7	-	Screw	21	-	Washer
8	-	O-Ring	22	-	Spline Adapter
9	-	Screw	23	-	Thermo Spline Adaptor
10	-	Screw	24	-	Volume Threaded Shank
11	-	Diverter Body	25	-	O-Ring
12	-	Knob	26	-	Locking Nut
13	-	Knob	27	VS56047	CD Valve
14	-	Knob	28	VS56065	Thermo Cartridge

Installation

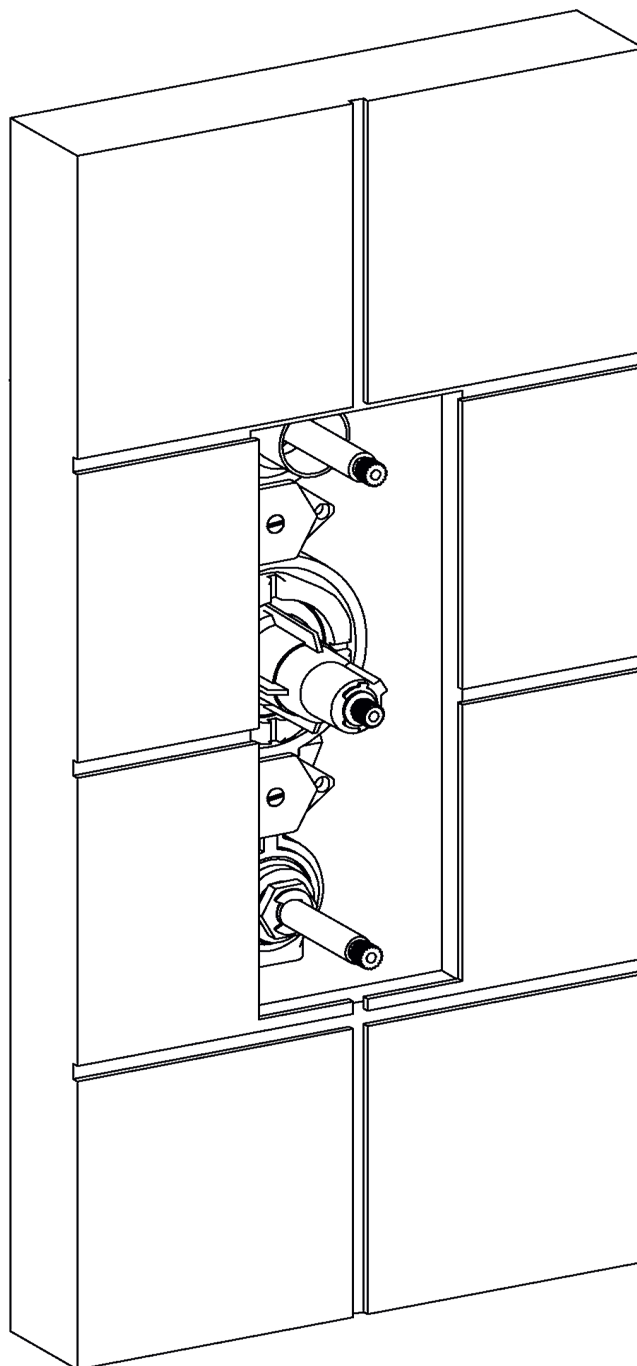


1. Install the finished surface, ensuring the finished surface is in accordance with the minimum and maximum installation depths shown in the front of this booklet.

Installation

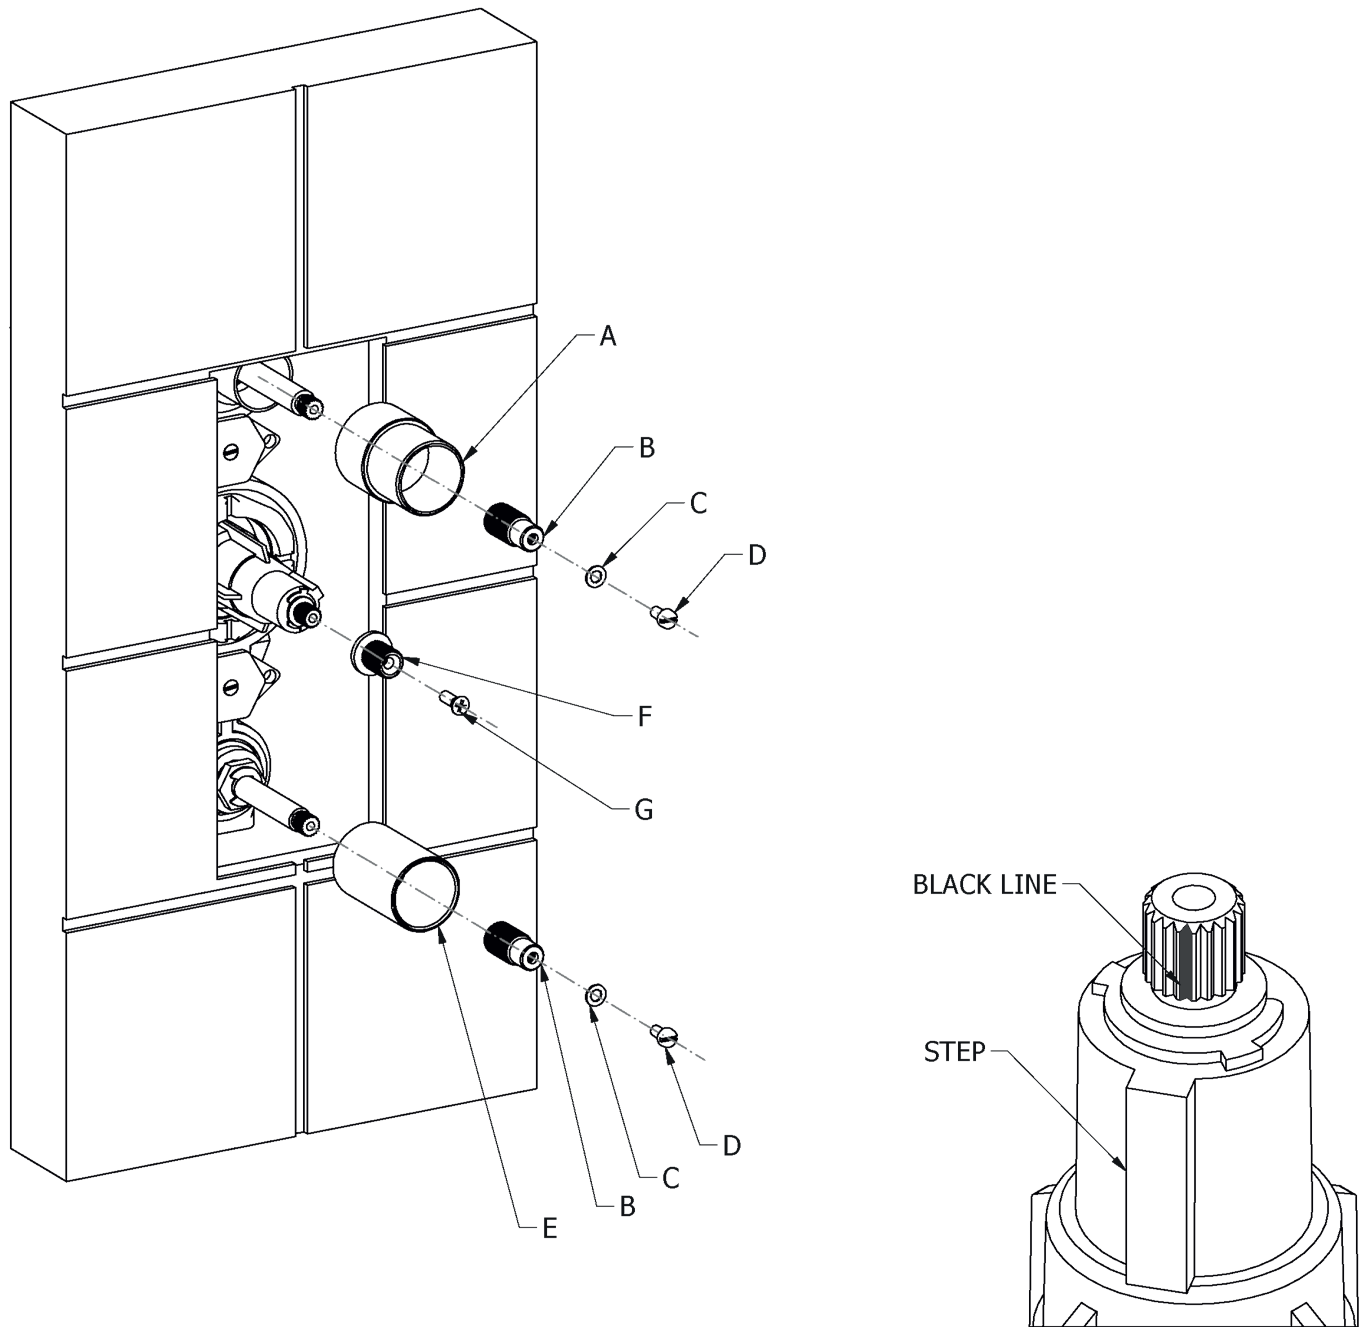

2. Ensure that the black line on the temperature spindle is in line with the step on the cartridge.
3. Screw diverter threaded shank (A) on to installation kit, over diverter spindle.
4. Screw volume threaded shank (E) on to installation kit, over volume spindle.
5. Push spindle adaptors (B) on to volume spindle and diverter spindle and secure using screws (D) and anti-rotational washers (C).
6. Push thermo spline adaptor (F) on to temperature spindle and secure using screw (G). Ensure that the temperature spindle does not rotate when tightening.

Installation

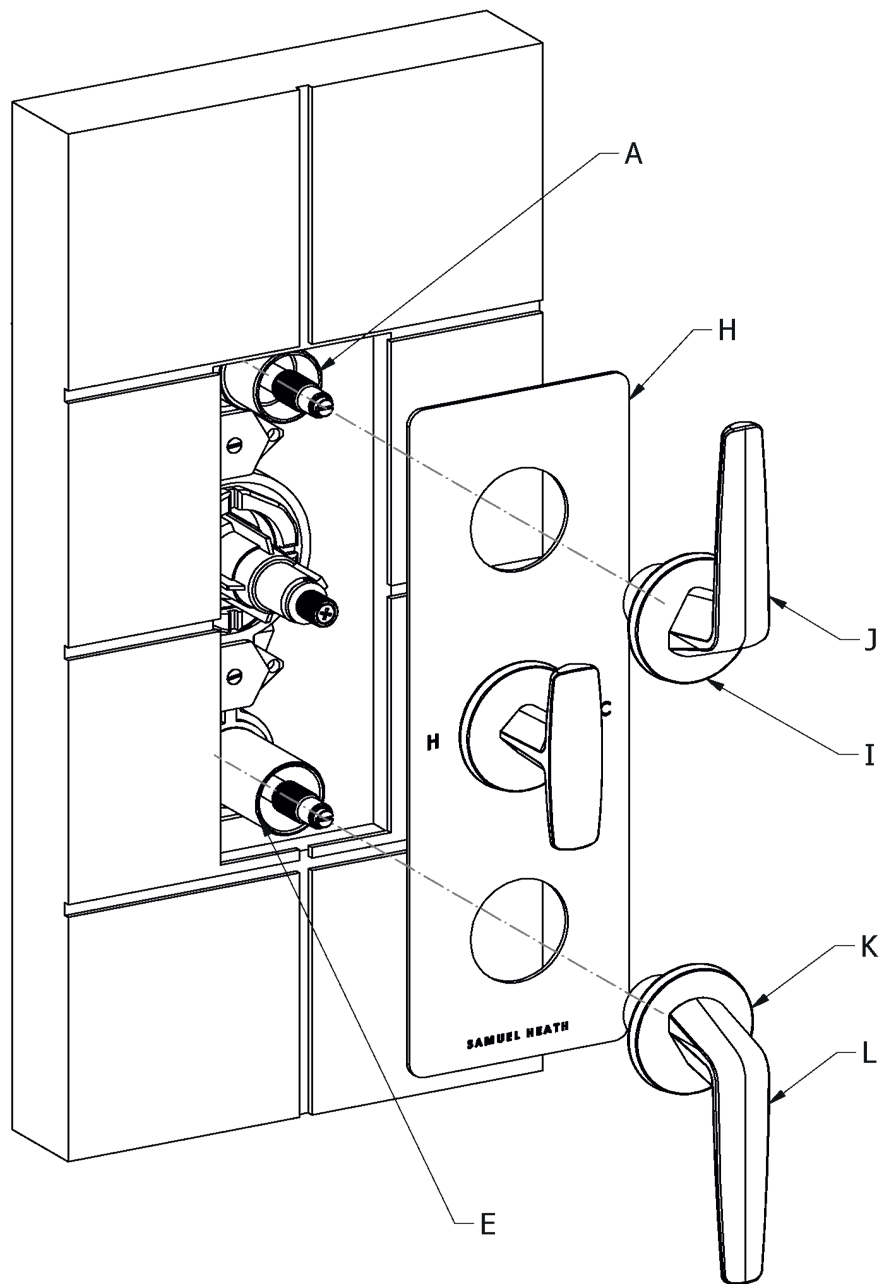

7. Apply a bead of silicone sealant to the wall where the trim plate assembly (H) will sit.


8. Push trim plate assembly (H) on to the installed shower.

9. Clamp trim plate assembly (H) in place by screwing diverter escutcheon (I) on to diverter threaded shank (A), while at the same time holding control (J) stationary.

10. Also screw volume escutcheon (K) on to volume threaded shank (E), while at the same time holding control (L) stationary.

11. Ensure sealant has set and plate is secured.

Adjusting the temperature

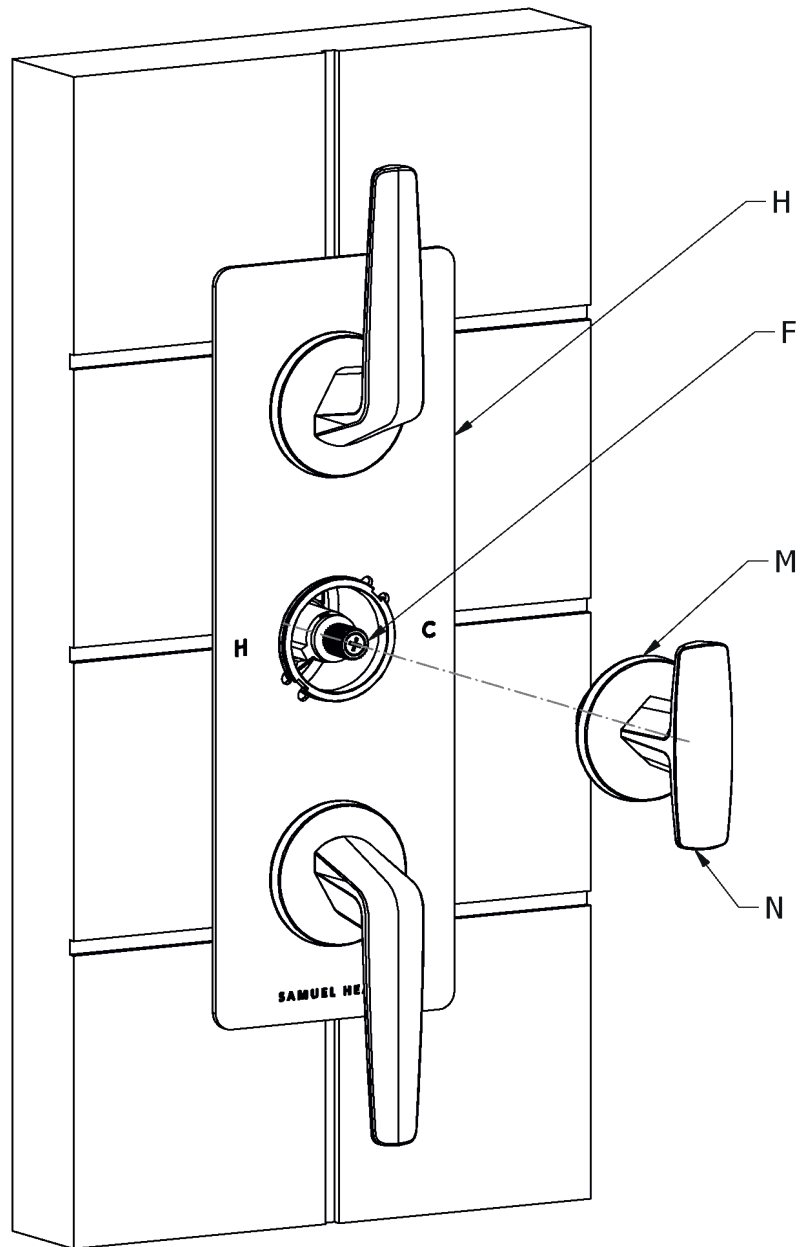

1. Unscrew thermo roundel escutcheon (M) while at the same time holding thermo control (N) stationary.
2. Pull thermo roundel escutcheon (M) and thermo control (N) away from trim plate assembly (H).
3. Rotate spline adaptor (F) anti-clockwise to make the water hotter, or clockwise to make the water colder.
4. Re-assemble thermo roundel escutcheon (M) and thermo control (N).

IMPORTANT NOTES

1. Installation should be carried out by a competent engineer, in accordance with water regulations.
2. Before installation, ensure supply pipes are flushed clean. Debris or loose particles will affect the efficiency of the ceramic disc cartridge.
3. For mixer taps, it is recommended that hot & cold pressures are equally balanced.
4. To help maintain the high quality finish, please clean with a soft damp cloth. Do not use abrasive polish or cleaners. Stains may be removed using undiluted washing up liquid.
5. Ceramic cartridges in hard water areas. To prolong the lifespan and reduce servicing periods of your Samuel Heath tap we recommend that a suitable water softener be fitted. Consult your installer/designer for details.
6. Please note that as with all tap and shower ware it will be necessary from time to time for the products to be serviced, this should be carried out by a qualified Plumbing Engineer.

NOTES IMPORTANTES

1. L'installation doit être faite par un ingénieur qualifié, selon les règlements du Service Eau.
2. Avant l'installation, il faut s'assurer que les tuyaux d'approvisionnement sont complètement purgés. Les déchets flottants auront un effet détrimentaire sur l'efficacité de la cartouche céramique.
3. Il est recommandé que les pressions de l'eau chaude et eau froide des mitigeurs et mélangeurs soient maintenues à un niveau égal.
4. Pour conserver la finition de haute qualité, nettoyer avec un chiffon doux et humide. N'employer jamais de la cire et des produits abrasifs. Les tâches peuvent être enlevées à l'aide de liquide vaisselle pur.
5. Cartouches en céramique dans les régions à eau calcaire. Pour prolonger la durée et réduire l'entretien de votre robinetterie Samuel Heath, nous recommandons d'utiliser un adoucisseur d'eau convenable. Veuillez consulter votre installateur/fournisseur pour plus de renseignements.
6. Veuillez noter qu'un entretien sera nécessaire de temps en temps et doit être effectué par un installateur qualifié.

WICHTIGE HINWEISE

1. Installation sollte durch einen kompetenten Fachmann und nach den üblichen Vorschriften ausgeführt werden.
2. Vor Installation Wasserleitung gründlich durchspülen. Verschmutzung wird die Funktion der Kartusche erheblich einschränken.
3. Für Mischbatterien ist es wichtig, daß Wasser mit gleichem Druck eingeführt wird.
4. Um den optimalen Zustand dieses Produktes zu erhalten, wischen Sie es bitte nur mit einem feuchten, weichen Lappen ab. Auf keinen Fall Scheuermittel verwenden. Flecken lassen sich mit unverdünntem Geschirrspülmittel entfernen.
5. Keramikkartuschen in Hartwasserbereichen. Um die Lebensdauer zu verlängern und Wartungszeiten zu reduzieren empfiehlt Samuel Heath den Einsatz eines geeigneten Wasserenthärter. Fragen Sie Ihren Installateur/Designer um Rat.
6. Bitte merken Sie, dass alle Armaturen ab und zu eine Wartung brauchen. Diese soll durch einen kompetenten Installateur ausgeführt werden.

ATENCION

1. La instalación se debe realizar por un fontanero.
2. Antes de la instalación, deben pulgar las tuberías dejando correr el agua por las tuberías para que arrastren los residuos de montaje/obra, con el motivo de que no afecte la eficacia del cartucho de cerámica.
3. Para grupo baño/ducha se recomienda que las presiones del agua caliente y frío sean equilibradas.
4. Para ayudar a mantener el acabado de este producto, limpiar con un paño húmedo suave. No se debe emplear productos abrasivos de baño. Las manchas se pueden quitar empleando líquido lava-vajillas puro.
5. Cartuchos cerámicos en áreas de aguas duras. Para prolongar su vida útil y reducir los periodos de reparación de su grifo Samuel Heath recomendamos la instalación de un descalcificador de agua. Consulte a su instalador para más detalles.
6. Igual que con todo tipo de grifería y duchas, de vez en cuando será necesario llevar a cabo una revisión al producto; esto debería ser realizado por un fontanero calificado.

ATTENZIONE

1. L'impianto deve essere montato da personale tecnico in conformità alle vigenti leggi.
2. Prima dell'installazione assicurarsi che le tubature dell'acqua siano pulite. Detriti o residui di lavorazione compromettono l'efficienza del cartuccio.
3. Per i gruppi, si raccomanda che le pressioni acqua calda e acqua fredda siano ugualmente bilanciate.
4. Per mantenere la finizione di ottima qualità, pulire con un panno soffice e inumidito. Non usare creme lucidanti e materiali abrasivi. Le macchie potranno essere tolte usando del detersivo per piatti puro.
5. Come con tutti i tipi di rubinetti e docce, di volta in volta è necessario effettuare una revisione al prodotto; questo dovrebbe essere fatto da un idraulico qualificato.

SAMUEL HEATH

Head Office and Customer Service

Leopold Street
Birmingham
England
B12 0UJ

T: +44 (0)121 766 4200
F: +44 (0)121 772 3334

Info@samuel-heath.com
www.samuel-heath.co.uk

US Customer Service

usa@samuel-heath.com
Federal I.D. No. 58-1504682
www.samuel-heath.com

8-40699
Issue: A