


## Direct current electrode. EAC-1

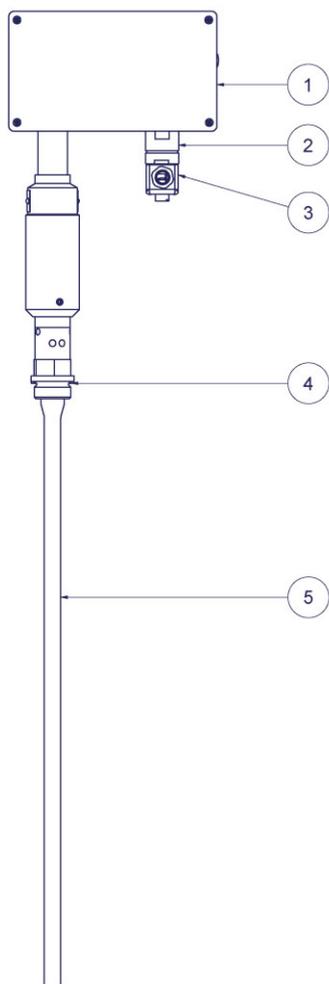

### 1. Description of the electrode

The electrode is a measurement probe that must be handled with extreme care. Avoid any knocks, in particular against the measurement area, which could damage the seal points.

All connections and start-up procedures must be carried out without opening the box (1). Any evidence of unauthorised tampering with the box (1) will void the guarantee.

### 2. Operating principle

The electronic level control device is based on the principle of capacitive level.

The rod of the capacitive electrode and the wall of the measurement recipient constitute a condenser. The dielectric medium is air or the corresponding product.

In electrically conductive products, the condenser is comprised of the product and the electrode, the insulating covering of which acts as a dielectric. The capacity of the condenser therefore depends on the level in the electrode. This capacity is measured by applying a high frequency constant voltage to the electrodes.





The high frequency current passing through the condenser is proportional to the capacity.

This current is transformed into a signal proportional to the level and equivalent to 4÷20 mA, which later activates an electric element.

### 3. Technical information

R		1"
CONNECTIONS		Male cylindrical Whitworth Gas Thread ISO 228/1, 1978 (DIN-259)
OPERATING CONDITIONS	PRESSURE IN Bar	32
	MAXIMUM TEMPERATURE IN ° C	238
MAXIMUM ADMISSIBLE ROOM TEMPERATURE IN ° C		70
DEGREE OF PROTECTION		IP-65 as per EN-60529
PROTECTION AGAINST OVERHEATING IN ° C		102
MINIMUM REQUIRED CONDUCTIVITY IN $\mu\text{S}/\text{cm}$ IN WATER AT	25° C	0,5
	238° C	20


## 4. Installing the capacitive electrode

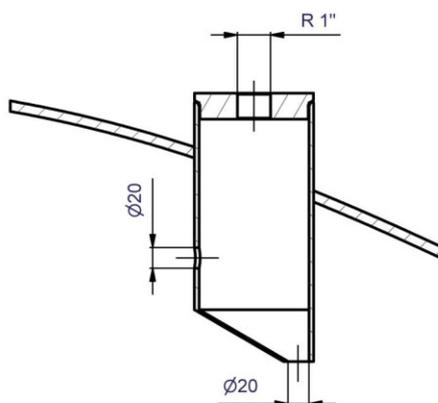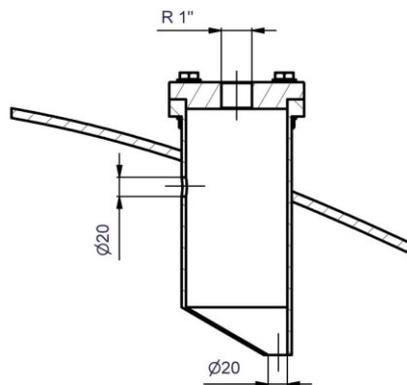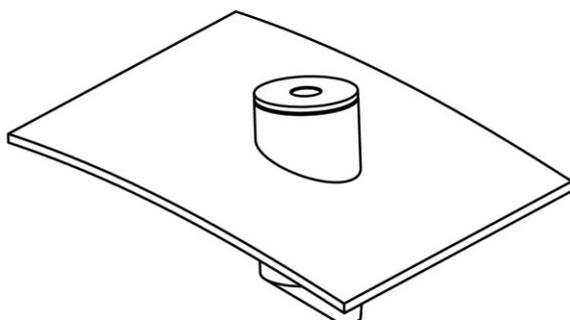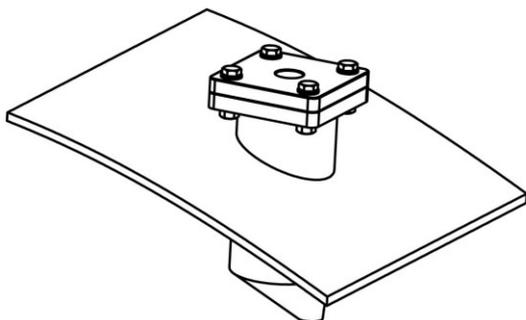


Examples of unions. Interior of the boiler body

**Danger!** Make absolutely sure that the connection area is free of pressure and is cold before proceeding with the assembly of the capacitive electrode.


Before installing the capacitive electrode, clean the measurement coating (5) with the aid of a clean, slightly damp cloth. The measurement coating (5) must be completely free of any oil or grease. After placing the washer (4) in position, screw the capacitive electrode home manually and then tighten with a spanner to a torque of 160 Nm.

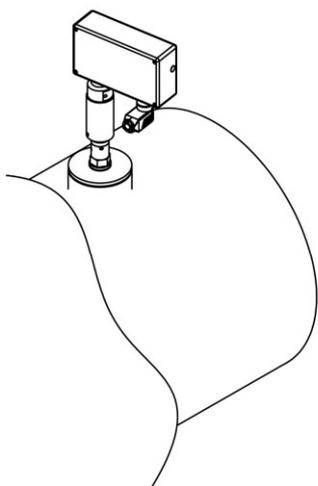

Examples of installation on the boiler body

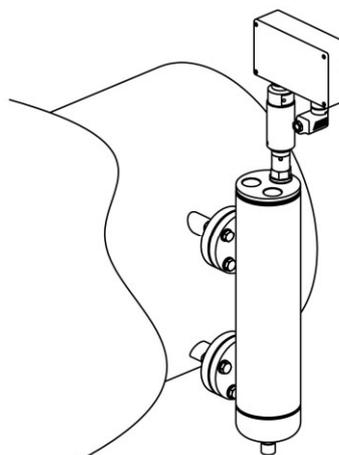

Examples of installation on a collector

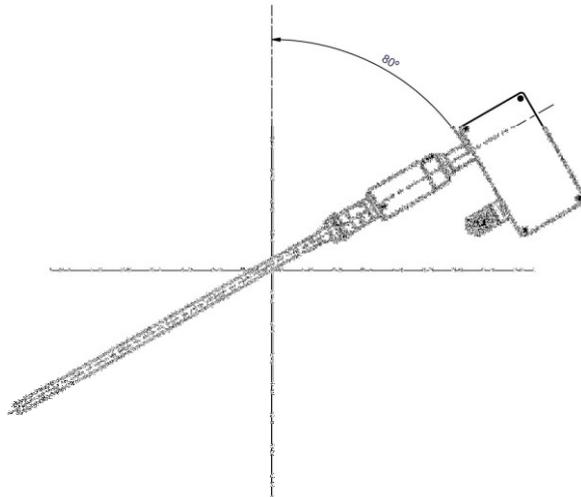

**Warning!** Only stainless steel washers (4) should be used.


Use a new washer (4) for each assembly operation. The upper part of the hexagon must not be embedded in the boiler insulation.

The capacitive electrode may be installed either vertically or inclined, with the measurement coating (5) facing downward. The inclined position should not exceed 80° from the vertical.



The measurement coating (5) must be absolutely parallel to the metal wall of the recipient, collector, baffle or metal rod that acts as a condenser.

If the EAC-1 capacitive electrode is to be assembled on a collector with VYC Mod. 176 connection electrodes combined with EN-1 level or ES-1 safety electrodes, remove the heads of the latter so as not to hamper assembly or dismantling of the EAC-1 capacitive electrode.

Collector connection for electrodes Mod. 176 is valid up to an effective measurement field of  $h = 400$  mm (See catalogue Mod. 176).

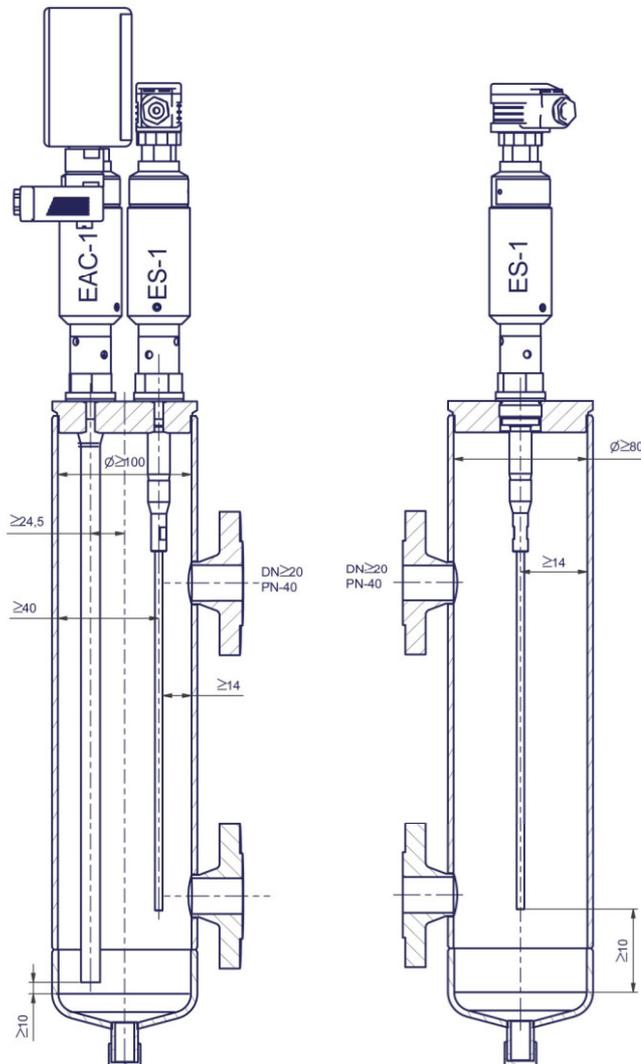


The box (1) may be turned through 360°. Loosen the bolts (20), position the box (1) as desired by turning the protective tube (21) and re-tighten the bolts (20). We recommend proceeding with extreme care in order to note any unlikely abnormality in the internal connections.

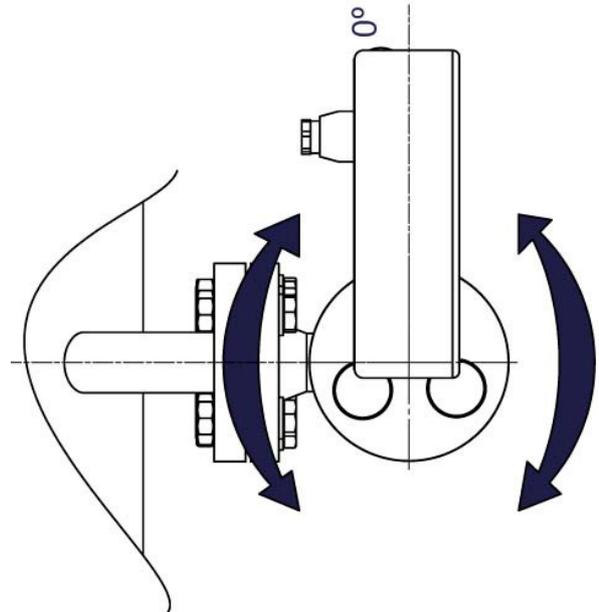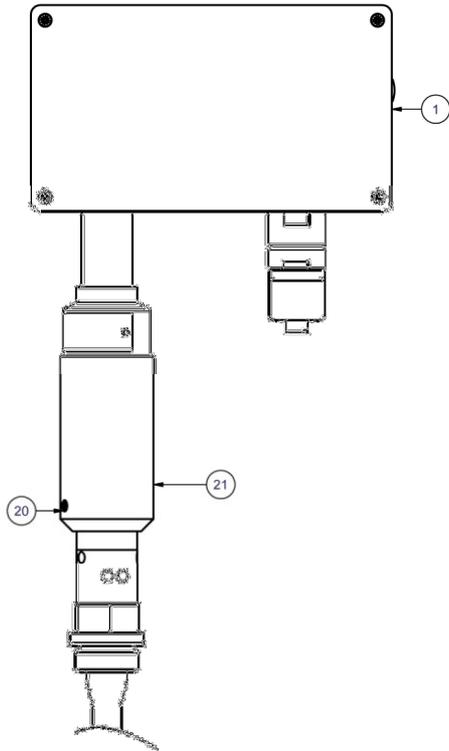

## 5. Connecting the electrode

The power supply to the electrode should be 24 V DC/AC via a safety power supply, in compliance with EN-61558 and EN-60950, duly protected against current surges according to EN-61010.


Electrical connection	Connection box for 5-pole electric cable, each conductor with a cross section of 0.75 mm <sup>2</sup> .
Maximum cable length	50 m.
Power supply voltage	24 V DC/AC
Power consumption	5 VA
Output	4÷20 mA in proportion to the fill level, without voltage, maximum load 500 Ω.

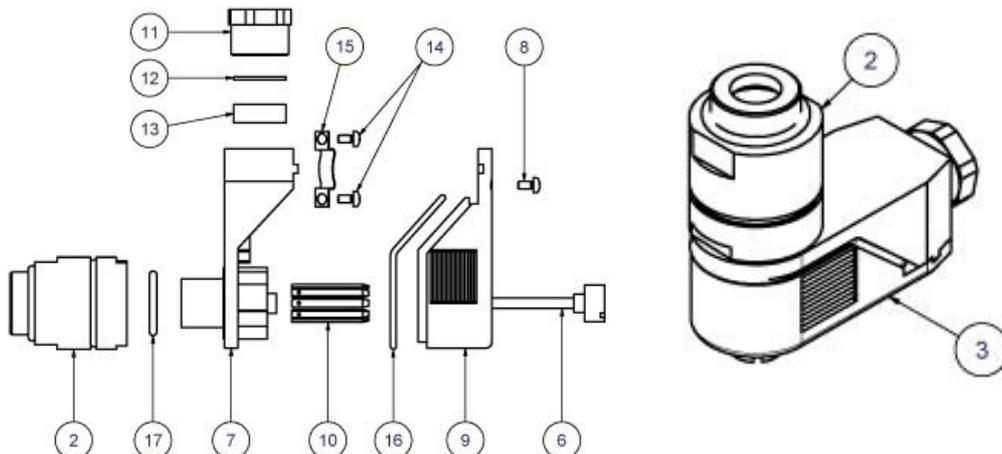

Turn the locking lever (6) and loosen the screw (14), take out the connector body (2). You will then have access to the interior.

To simplify connection, the connector (3) may be unplugged from both male (3.2) and female (3.1) sides. Run the wire through the gland nut (11), the gland ring (12) and the seal (13). Set the ends at No. 1, 2, 3, and 4, and the fifth to earth ( $\perp$ ). Tighten the gland nut (11). Select the right position for the connector body (2) and lock it onto the support (7). Fasten it using screw (14) and locking lever (6).

**Warning!** During the assembly process, make sure that the washers (16) and (17) remain in their original position. If not, position them correctly.

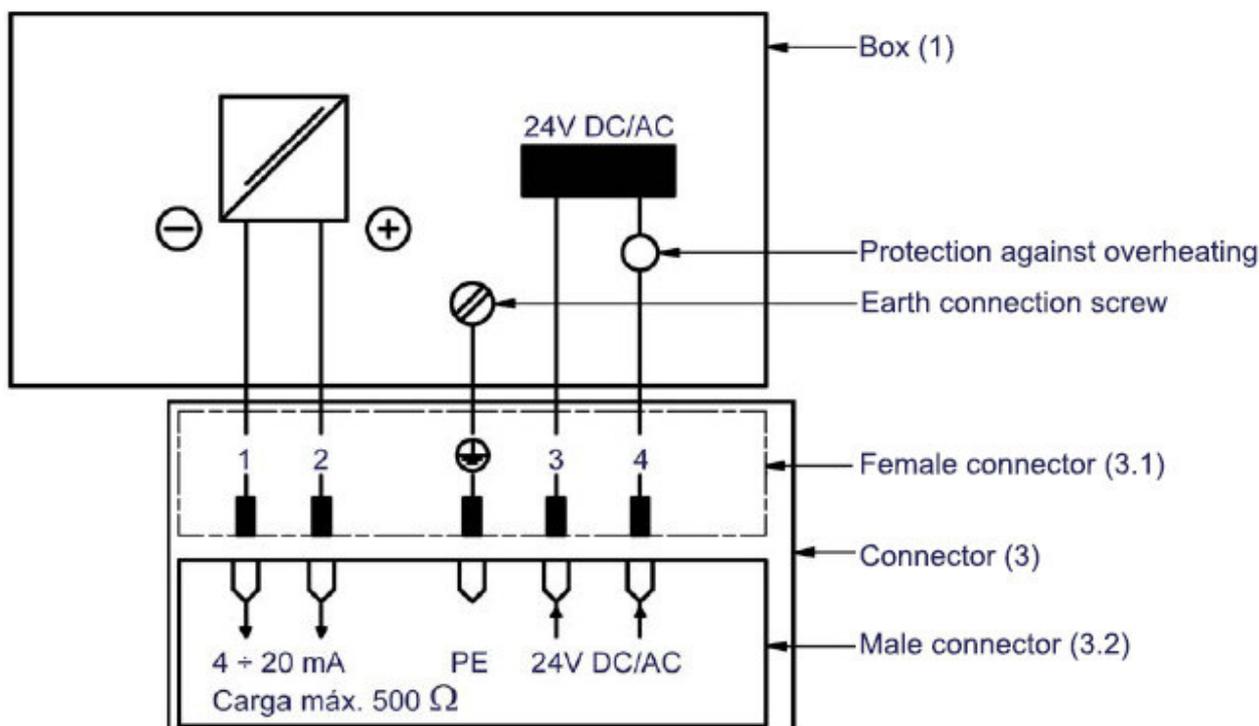


**Important!** The screen should always be placed in the RAC-1, 2 or 3 direct current regulator.

## 7. Adjusting the measurement range: High and low point

Before starting the unit for the first time, make absolutely sure that all electrical connections have been made as indicated in the wiring diagram and check that the power supply voltage is the same as that appearing on the identification plate.

7.1. Adjust the low measurement point (4 mA corresponds to 0%).

1. Use the feed pump to fill the steam generator or tank with liquid up to the lowest measurement point. From this point on, we refer only to a generator, but the procedure is the same for any other compatible piece of equipment.

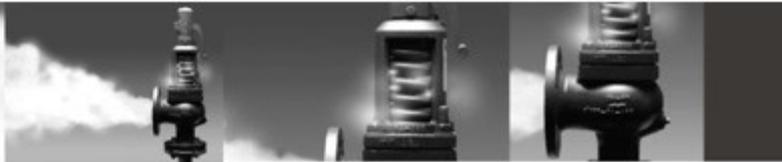

In steam generators the lowest measurement point corresponds to a water level that shows approximately 1 cm on the glass of the level indicator. This point is below the minimum water level in the generator and so this level must be exceeded for the burner to start.

2. Set the generator to the working pressure on the manometer. As the water heats it expands and the level rises. Once the working pressure is reached, use the drain cock to adjust the water level to the lowest measurement point.

3. Disconnect the burner and use the bleed valve to reduce the water level to 1 cm on the glass of the level indicator. This point is 0% or the minimum adjustment level.


4. Remove the plug (17) and use a screwdriver to turn the potentiometer (18) until the output signal is 4 mA or the RAC- regulator shows 0%. The low measurement point is now adjusted.

7.2. Adjust the high measurement point (20 mA corresponds to 100%).

1. Start the feed pump and fill the steam generator with water up to the highest measurement point. In steam generators, the high measurement point corresponds to a water level that is 2 cm below the maximum of the level indicator glass. This point is 100% or the maximum adjustment level.

2. Use a screwdriver to turn the potentiometer (19) until the output signal is 20 mA or the RAC- regulator shows 100%. The high measurement point is now adjusted.

3. Replace the plug (17).

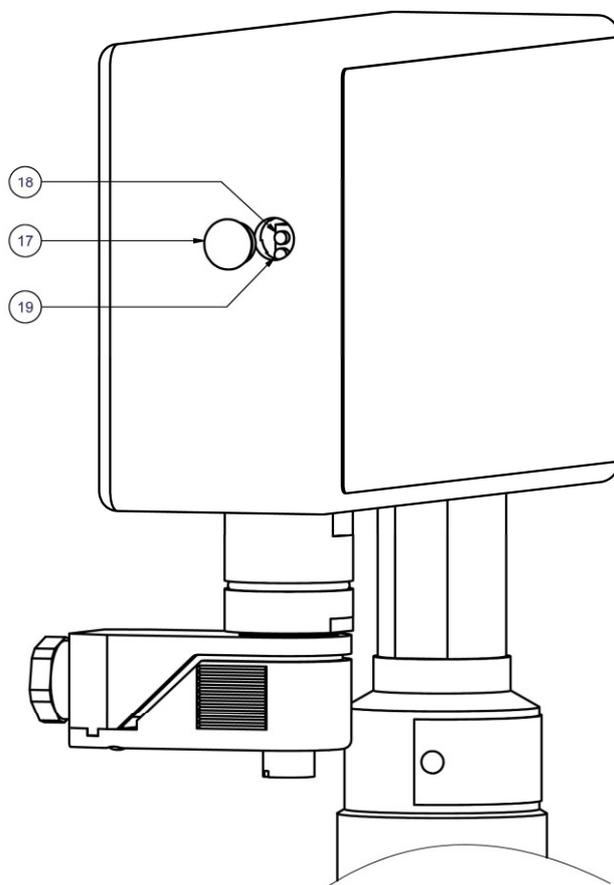



## 8. Maintenance

We recommend exhaustive cleaning of the capacitive electrode according to the working conditions. The recommended interval between cleanings should not exceed 6 months.

To remove the capacitive electrode, we must first cut off the power supply and separate the male connector (3.2) from the female connector (3.1), proceeding as in point 5.

**Danger!** Make absolutely certain that the connection area is free of pressure and is cold before proceeding to dismantle the capacitive electrode.

## 9. Troubleshooting

Any leak around the washer (4) can usually be resolved by tightening it. If this does not solve the problem, replace the washer (4) with a new one.

## 10. Transport and storage

All our products are suitably packed for complete protection during transport to any destination. Store the devices in their original packaging,

Do not expose electronic level control devices to temperatures below  $-40^{\circ}\text{C}$  or above  $+80^{\circ}\text{C}$ .

Avoid all knocks and vibrations.

Protect electronic level control devices against humidity and its effects. (Humidity < 60%).

The storage site must be clean and dust free.

Prevent electronic level control devices from undergoing temperature changes of more than  $10^{\circ}\text{C}/\text{hour}$  during storage or transport.




**Warning!** In the event of any damage to the packaging, immediately notify the carrier in writing and request a receipt.

## 11. Validity of the service instructions

These service instructions contain vital information that is complemented by the following additional instructions:

- Catalogue Model 276.

## 12. Combinations for level control in generators

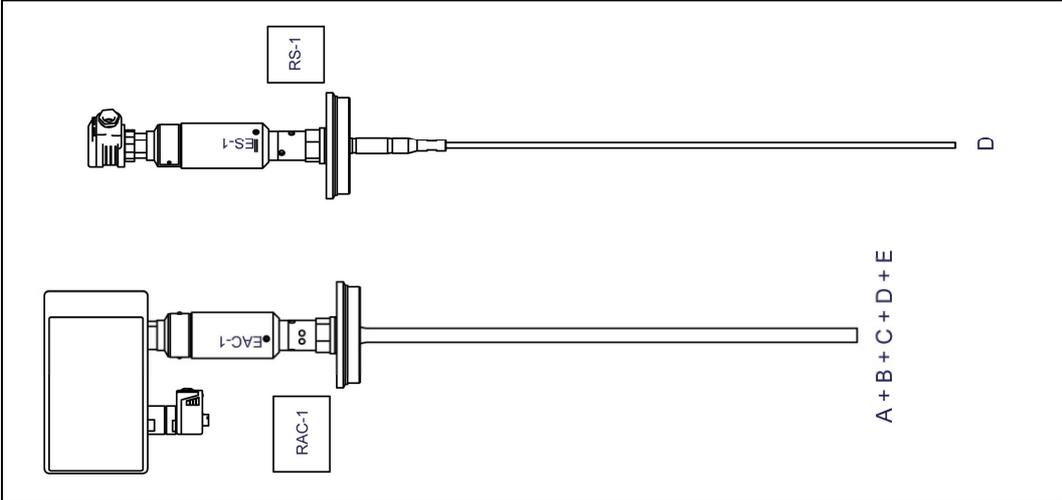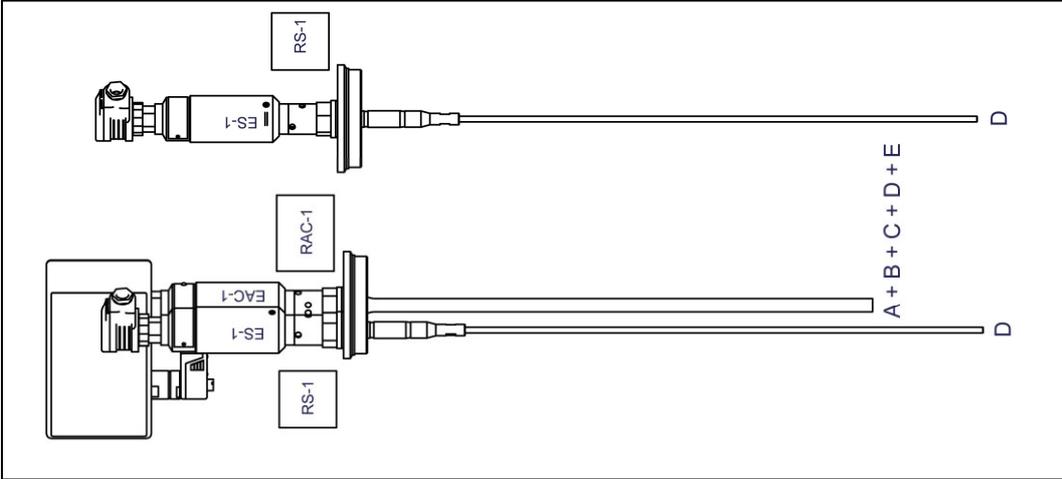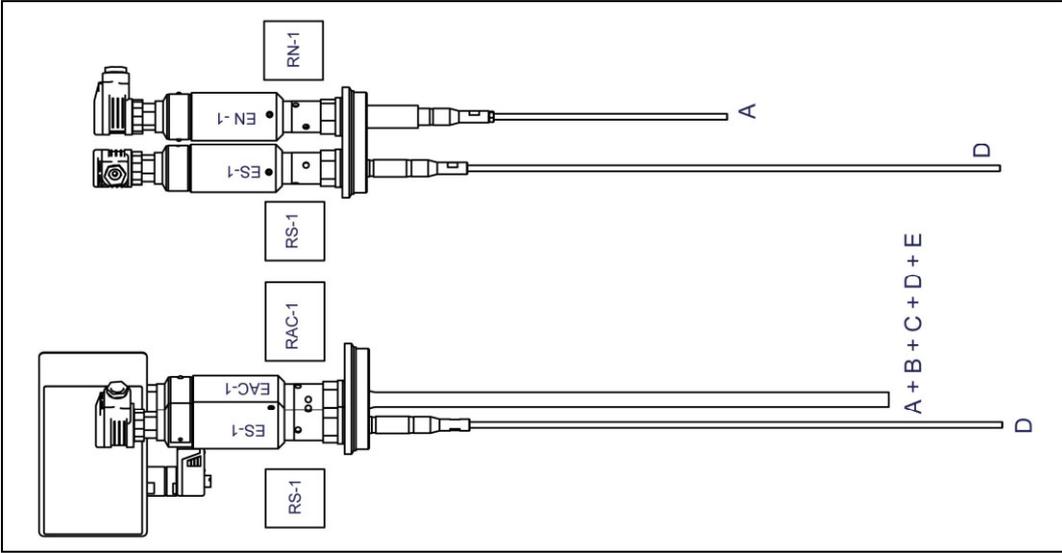 <p>A + B + C + D + E</p> <p>D</p>	Economical combination
 <p>A + B + C + D + E</p> <p>D</p>	Recommended combination
 <p>A + B + C + D + E</p> <p>D</p>	Ideal combination

### Functions

**A.-** Maximum safety level. **B.-** Pump stop. **C.-** Pump starts. **D.-** Minimum safety level. **E.-** Other.