

### Key Features & Benefits:

- Remote Control for IntelliSense SoloSense™ Sensors
- Powered by Two CR2032 Batteries

Project: \_\_\_\_\_

Date: \_\_\_\_\_

Catalog #: \_\_\_\_\_

Notes: \_\_\_\_\_

### Remote Programming Instructions: Memory Mode (Commissioning)



1. Select either **A, B, C, or D**.
  2. Indicator lights on the remote will flash to indicate the current saved settings.
  3. Settings can be configured by pressing appropriate buttons in the highlighted gray section of the remote buttons. (**TRIM-LEVEL, SENSITIVITY, HOLD TIME, STANDBY DIM, STANDBY TIME, and PHOTOCELL**). Review selected settings and make changes as necessary.
  4. Point IR remote to desired luminaire for configuration and press "**SEND**".
  5. If configuration is successful, luminaire will flash twice to confirm settings are saved. Any parameter change to the current saved settings on **A to F** will override previous settings and will be automatically saved on the remote. If configuring multiple luminaires, select the configured memory mode **A to E** then follow steps 4 and 5.
- E Mode** allows visual adjustment to choose the desired dimming level.

### Remote Programming Instructions: Continuous Adjustment or Daylight Harvesting Mode

1. Point IR remote to desired luminaire.
  2. Press "**ON**" then press **DIM+** or **DIM-** to adjust dimming level.
  3. Press "**F**", indicator lights on the remote will indicate current saved settings.
- Note:** only **TRIM-LEVEL, SENSITIVITY, and HOLD TIME** can be selected for Daylight Harvesting settings.
4. Review selected settings and make changes as necessary. Press "**SEND**".
  5. If configuration is successful, luminaire will flash twice to confirm setting saved. If configuring multiple luminaires, select the configured **DAYLIGHT HARVESTING** settings then follow steps 4 and 5.

### Dimensions:

IntelliSense™ Remote  
ESL-ISS-REM-01

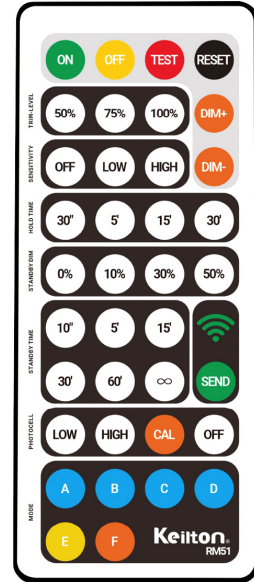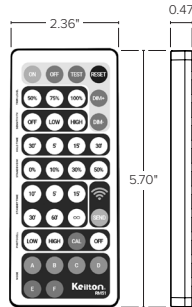

### RESET MODE

- Motion:** 100%
- No Motion:** 5 minutes and fixture dims to 30%
- No Motion:** 60 minutes and fixture turns off

### Operation:

#### BUTTON OPERATION

ON	Turns on luminaire	STANDBY TIME	Standby time 10sec–5min–15min–30min–1hr–∞, "∞" means the fixture is effectively controlled by the daylight sensor
OFF	Turns off luminaire	PHOTOCELL	LOW (1fc)–HIGH (50fc)–CAL Collecting the current Lux Level OFF
TEST	Test mode will last 5 mins then return to previous setting, test mode will hold 2 seconds SDL 50% and standbytime for 2 seconds	MODE	Set settings to a program profile A to F
RESET	Trim–High=100%, Sensitivity=High, T1=5 min, Standby Dim=30%, T2=60min, Photocell=OFF	SEND	Send settings to sensor
DIM +/-	Remote will manually dim luminaire up or down by increments of 0.5V. Must be smooth dimming if holding dimming button.	DEFAULT MODE A	Trim-High=100%, Sensitivity=low, T1=30min, Standby Dim=50%, T2=00, Photocell=CAL
TRIM LEVEL	Set Maximum threshold values of 50%–75%–100%	DEFAULT MODE B	Trim-High=100%, Sensitivity=low, T1=30min, Standby Dim=50%, T2=15min, Photocell=CAL
SENSITIVITY	Off (PIR OFF enter Photocell ON/OFF function)/ LOW (50%) or HIGH (100%)	DEFAULT MODE C	Trim-High=100%, Sensitivity=low, T1=30min, Standby Dim=50%, T2=15min, Photocell=OFF
HOLD TIME	30sec–5min–15min–30min (time of no occupancy after which fixture goes to standby)	DEFAULT MODE D	Trim-Low=50%, Sensitivity= low, T1 =30min, Stand by Dim =50%, T2=30min, Photocell=CAL
F MODE– DAYLIGHT HARVESTING	(Enable/Disable) Measure and set feature to allow the fixture to maintain a light level, if turned on.	DEFAULT MODE E	Manual Mode, Trim-High=100%
STANDBY DIM	Select any standby dim level: 0%–10%–30%–50%	DEFAULT MODE F	Daylight Harvesting, Trim-Low=50%, Sensitivity=low, T1=15min